

# SHARP SERVICE MANUAL

No. S4123MDMT80W/

## PORTABLE MINIDISC RECORDER



Illustration: MD-MT80W



Illustration: MD-MT90W/90/90C

**MD-MT80W(S)**  
**MD-MT90W(S)**  
**MD-MT90(S)**  
**MD-MT90C(S)**

**MODEL**

- In the interests of user-safety the set should be restored to its original condition and only parts identical to those specified be used.

## CONTENTS

|  | Page |
|--|------|
| SAFETY PRECAUTION FOR SERVICE MANUAL (MD-MT80W/90W ONLY) ..... | 2    |
| AC ADAPTOR AND PLUG (MD-MT80W/90W ONLY) .....                  | 3    |
| SPECIFICATIONS .....   | 4    |
| ACCESSORIES .....  | 6    |
| NAMES OF PARTS .....   | 7    |
| OPERATION MANUAL .....   | 8    |
| QUICK GUIDE (MD-MT90 ONLY) .....                               | 12   |
| DISASSEMBLY .....  | 14   |
| REMOVING AND REINSTALLING THE MAIN PARTS .....                 | 15   |
| ADJUSTMENT .....   | 16   |
| MD ERROR MESSAGE DISPLAY CONTENT LIST .....                    | 29   |
| NOTES ON SCHEMATIC DIAGRAM .....                               | 30   |
| TYPES OF TRANSISTOR AND DIODE .....                            | 30   |
| BLOCK DIAGRAM .....  | 31   |
| SCHEMATIC DIAGRAM .....  | 32   |
| WIRING SIDE OF P.W.BOARD .....                                 | 34   |
| WAVEFORMS OF MD CIRCUIT .....                                  | 37   |
| VOLTAGE .....  | 38   |
| TROUBLESHOOTING .....  | 39   |
| FUNCTION TABLE OF IC .....                                     | 42   |
| PARTS GUIDE/EXPLODED VIEW .....                                |      |
| PACKING OF THE SET (FOR U.S.A. ONLY) .....                     |      |

## SAFETY PRECAUTION FOR SERVICE MANUAL (MD-MT80W/90W ONLY)

### Precaution to be taken when replacing and servicing the Laser Pickup.

THE AEL (ACCESSIBLE EMISSION LEVEL) OF THE LASER POWER OUTPUT IS LESS THAN CLASS 1 BUT THE LASER COMPONENT IS CAPABLE OF EMITTING RADIATION EXCEEDING THE LIMIT FOR CLASS 1. THEREFORE IT IS IMPORTANT THAT THE FOLLOWING PRECAUTIONS ARE OBSERVED DURING SERVICING TO PROTECT YOUR EYES AGAINST EXPOSURE TO THE LASER BEAM.

- (1) When the cabinet has been removed, the power is turned on without a compact disc, and the Pickup is on a position outer than the lead-in position, the Laser will light for several seconds to detect a disc. Do not look into the Pickup Lens.
- (2) The Laser Power Output of the Pickup inside the unit and replacement service parts have already been adjusted prior to shipping.
- (3) No adjustment to the Laser Power should be attempted when replacing or servicing the Pickup.
- (4) Under no circumstances look directly into the Pickup Lens at any time.
- (5) **CAUTION** - Use of controls or adjustments, or performance of procedures other than those specified herein may result in hazardous radiation exposure.

English:

This product is classified as a CLASS 1 LASER PRODUCT.

German:


Dieses Produkt ist ein Laserprodukt der Klasse 1.

French:

Ce Produit est Classifié comme étant un PRODUCTO LASER DE CLASSE 1.

### Laser Diode Properties

- Material: GaAlAs
- Wavelength: 785 nm
- Pulse time:
  - Read mode: 0.8 mW Continuous
  - Write mode: max 10 mW 0.5S  
min cycle 1.5S  
Repetition

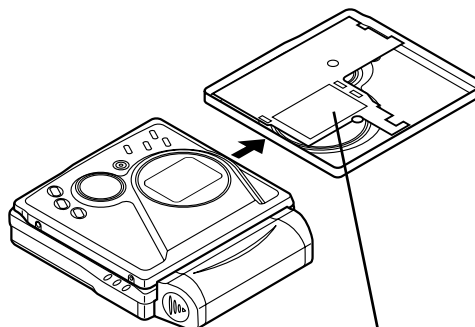

CAUTION-INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AUDIO EXPOSURE TO BEAM.

WARNUNG-UNSICHTBARE LASERSTRAHLUNG WENN GERÄT GEÖFFNET UND VERRIEGELUNGEN AUFGEHOBEN. VERMEIDEN SIE, SICH DER STRAHLUNG AUSZUSETZEN.

ATTENTION-RAYON LASER INVISIBLE EN CAS D'OUVERTURE ET DE VERROUILLAGE DÉFECTUEUX. ÉVITER UNE EXPOSITION AU FAISCEAU.

### Precaution to be taken when replacing and servicing the laser pickup.

The following precautions must be observed during servicing to protect your eyes against exposure to the laser.

#### Warning of possible eye damage when repairing:

If the AC adaptor or batteries are connected when the top housing (disc cover) of the unit is removed, and the PLAY key is pressed, the laser will light up during focus access (2-3 seconds). (Fig. 2-1) During the operation, the laser will leak from the opening between the magnetic head and the mechanical chassis (Fig. 2-2). In order to protect your eyes, you must not look at the laser during repair. Before repairing be sure to disconnect the AC adaptor and remove the batteries.

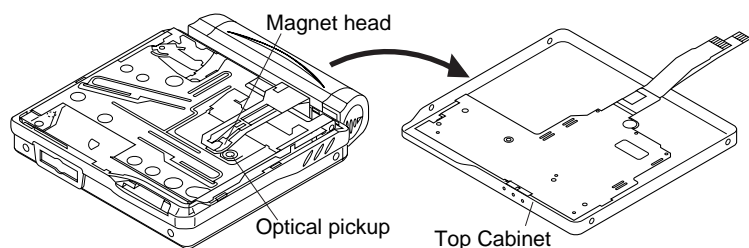


Figure 2-1



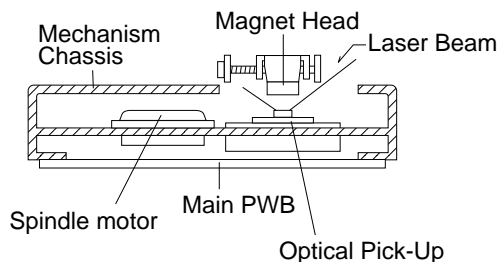




Figure 2-2

## AC ADAPTOR AND PLUG (MD-MT80W/90W ONLY)



PADPA6049AWZZ

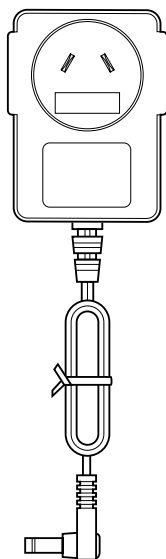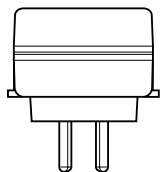




PADPA5052AWZZ

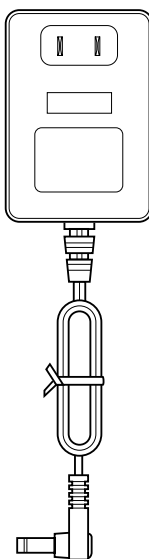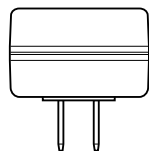

PADPA5051AWZZ

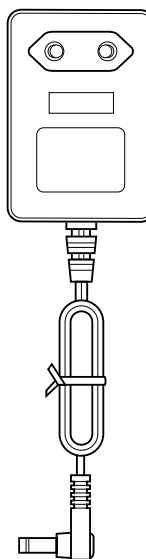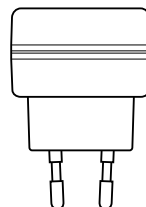

PADPA5050AWZZ

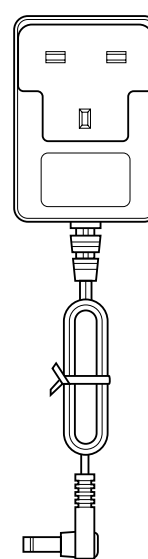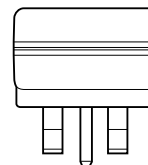

QPLGA0004AWZZ

FOR A COMPLETE DESCRIPTION OF THE OPERATION OF THIS UNIT, PLEASE REFER TO THE OPERATION MANUAL.

## SPECIFICATIONS

### MD-MT80W/90W

#### ■ General

##### Power source:

|          |  |
|----------|--|
| DC 5V:   | AC adaptor (AC 110-240V, 50/60 Hz)   |
| DC 1.5V: | Commercially available, "AA" size (LR6), alkaline battery x 1                                |
| DC 1.2V: | Optional rechargeable Nickel-Metal Hydride battery (AD-N70BT) x 1                            |
| DC 4.5V: | Optional car adaptor, AD-CA20X(for cars with a 12 - 24V DC negative earth electrical system) |

**Power consumption:** 0.15 A (AC adaptor)

**Output power:** RMS; 20 mW (10 mW + 10 mW) (0.2% T.H.D.)

**Charging time:** Approx. 3.5 hours (90 %)  
Approx. 5.5 hours (fully charged)  
(When using the AC adaptor included with the unit)

##### Input sensitivity:

| Recording level | Reference input level | Input impedance |
|-----------------|-----------------------|-----------------|
| MIC H           | 0.25 mV               | 10 k ohms       |
| MIC L           | 2.5 mV                | 10 k ohms       |
| LINE            | 100 mV                | 20 k ohms       |

##### Output level:

|            | Specified output | Maximum output level | Load impedance |
|------------|------------------|----------------------|----------------|
| Headphones | -                | 10 mW + 10 mW        | 16 ohms        |
| LINE       | 250 mV (-12 dB)  | -                    | 10 k ohms      |

**Dimensions:** Width: 81.1 mm (3-7/32")

Height: 19.9 mm (13/16")

Depth: 92.4 mm (3-21/32")

**Weight:** 147 g (0.32 lbs.) without battery (MD-MT80W)

172 g (0.38 lbs.) with rechargeable battery (MD-MT90W)

**Input socket:** Line/optical digital, microphone (powered by the main unit)

**Output socket:** Headphones (impedance: 16 ohms)

##### Battery life:

|  |   |
|--|---|
| When using the optional rechargeable battery (fully charged) | When using a commercially available, high capacity, "AA" size (LR6), alkaline battery |
| Continuous recording: Approx. 7 hours                        | Continuous recording: Approx. 3 hours   |
| Continuous play: Approx. 12 hours                            | Continuous play: Approx. 12 hours   |

- The continuous recording time is for analogue inputs when the volume level is set to "VOL 0".
- The continuous play time shows the value when the volume level is set to "VOL 15".
- The above values are the standard values when the unit is charged and used at an ambient temperature of 25°C (77°F).
- The operating time when using an alkaline battery may be different, depending on the type and manufacturer of the battery, and on the operating temperature.

#### ■ MiniDisc Recorder

**Type:** Portable MiniDisc recorder

**Signal read-out:** Non-contact, 3-beam semi-conductor laser pick-up

**Audio channels:** Stereo 2 channels/monaural (long-play mode) 1 channel

**Frequency response:** 20 - 20,000 Hz (±3 dB)

**Rotation speed:** Approx. 400 - 900 rpm

**Error correction:** ACIRC (Advanced Cross Interleave Reed-Solomon Code)

**Coding:** ATRAC (Adaptive TRansform Acoustic Coding), 24-bit computed type

**Recording method:** Magnetic modulation overwrite method

**Sampling frequency:** 44.1 kHz (32 kHz and 48 kHz signals are converted to 44.1 kHz, and then recorded.)

**Wow and flutter:** Unmeasurable (less than ±0.001% W. peak)

Specifications for this model are subject to change without prior notice

**MD-MT90/90C****■ General****Power source:**

|          |   |
|----------|---|
| DC 1.2V: | Rechargeable Nickel-Metal Hydride battery (AD-N70BT) x 1                                      |
| DC 5V:   | AC adaptor (AC 120V, 60 Hz)   |
| DC 1.5V: | Commercially available, "AA" size (LR6), alkaline battery x 1                                 |
| DC 4.5V: | Optional car adaptor, AD-CA20X(for cars with a 12 - 24V DC negative ground electrical system) |

**Power consumption:** 7 W (AC adaptor)

**Output power:** RMS; 20 mW (10 mW + 10 mW) (0.2% T.H.D.)

**Charging time:** Approx. 3.5 hours (90 %)  
Approx. 5.5 hours (fully charged)  
(When using the AC adaptor included with the unit)

**Input sensitivity:**

| Recording level | Reference input level | Input impedance |
|-----------------|-----------------------|-----------------|
| MIC H           | 0.25 mV               | 10 k ohms       |
| MIC L           | 2.5 mV                | 10 k ohms       |
| LINE            | 100 mV                | 20 k ohms       |

**Output level:**

|            | Specified output | Maximum output level | Load impedance |
|------------|------------------|----------------------|----------------|
| Headphones | -                | 10 mW + 10 mW        | 16 ohms        |
| LINE       | 250 mV (-12 dB)  | -                    | 10 k ohms      |

**Dimensions:** Width: 3-7/32" (81.1 mm)  
Height: 13/16" (19.9 mm)  
Depth: 3-21/32" (92.4 mm)

**Weight:** 0.38 lbs. (172 g) with rechargeable battery

**Input jack:** Line/optical digital, microphone (powered by the main unit)

**Output jack:** Headphones (impedance: 16 ohms)/remote control unit

**Battery life:**

|  |   |
|--|---|
| When using the rechargeable battery (fully charged) included with the unit | When using a commercially available, high capacity, "AA" size (LR6), alkaline battery |
| Continuous recording:<br>Approx. 7 hours                                   | Continuous recording:<br>Approx. 3 hours  |
| Continuous play:<br>Approx. 12 hours                                       | Continuous play:<br>Approx. 12 hours  |

- The continuous recording time is for analog inputs when the volume level is set to "VOL 0".
- The continuous play time shows the value when the volume level is set to "VOL 15".
- The above values are the standard values when the unit is charged and used at an ambient temperature of 77°F (25°C).
- The operating time when using an alkaline battery may be different, depending on the type and manufacturer of the battery, and on the operating temperature.

**■ MiniDisc Recorder**

**Type:** Portable MiniDisc recorder

**Signal read-out:** Non-contact, 3-beam semiconductor laser pickup

**Audio channels:** Stereo 2 channels/monaural (long-play mode) 1 channel

**Frequency response:** 20 - 20,000 Hz (±3 dB)

**Rotation speed:** Approx. 400 - 900 rpm

**Error correction:** ACIRC (Advanced Cross Interleave Reed-Solomon Code)

**Coding:** ATRAC (Adaptive TRansform Acoustic Coding), 24-bit computed type


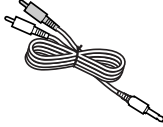
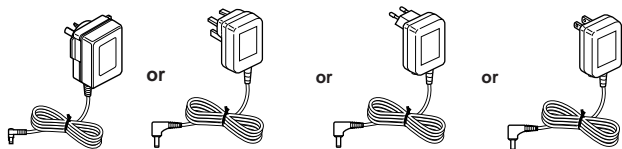
**Recording method:** Magnetic modulation overwrite method

**Sampling frequency:** 44.1 kHz (32 kHz and 48 kHz signals are converted to 44.1 kHz, and then recorded.)

**Wow and flutter:** Unmeasurable (less than ±0.001% W. peak)

## ACCESSORIES




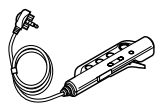
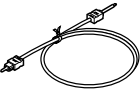
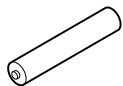
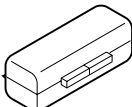
## MD-MT80W

|   |  |  |
|---|--|--|
| <br>Headphones x 1 | <br>Connection Cable (for analogue recording) x 1 | AC Adaptor x 1<br> |
|---|--|--|

## Notes:

- Parts and equipment mentioned in this operation manual other than those detailed above are not included.
- The AC adaptor may be different from the one in the drawing.



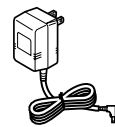
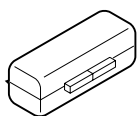
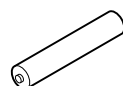
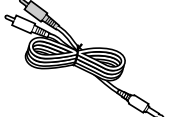
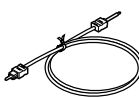
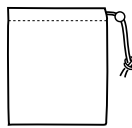
## MD-MT90W
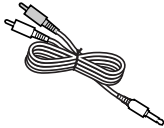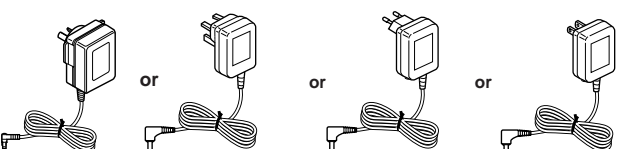
|  |   |   |  |  |
|--|---|---|--|--|
| <br>Connection Cable (for analogue recording) x 1 | AC Adaptor x 1<br>    |   |  |  |
| <br>Headphones x 1                                | <br>Remote Control x 1 | <br>Connection Cable (for digital recording) x 1 | <br>Rechargeable Nickel-Metal Hydride Battery (AD-N70BT) x 1 | <br>Battery Carrying Case x 1 |

## Notes:

- Parts and equipment mentioned in this operation manual other than those detailed above are not included.
- The AC adaptor may be different from the one in the drawing.

## MD-MT90/90C

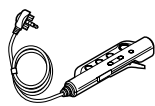
|   |   |  |   |
|---|---|--|---|
| <br>Remote Control x 1<br>(RRMCW0002AWSA)  | <br>Headphones x 1<br>(RPHOH0005AWZZ)                              | <br>AC Adaptor<br>(RADPA3048AWZZ) x 1                               | <br>Battery Carrying Case x 1<br>(UBAGC0003AWZZ) |
| <br>Rechargeable Nickel-Metal Hydride Battery<br>(AD-N70BT) x 1<br>(UBATM0003AWSA) | <br>Connection Cable (for analog recording) x 1<br>(QCNWG0029AWZZ) | <br>Connection Cable (for digital recording) x 1<br>(QCNWG0422AFZZ) | <br>Carrying Bag x 1<br>(UBAGC0006AWSA)          |

## Notes:

- Parts and equipment mentioned in this operation manual other than those detailed above are not included.
- The AC adaptor may be different from the one in the drawing.

## NAMES OF PARTS

### ■ Main unit

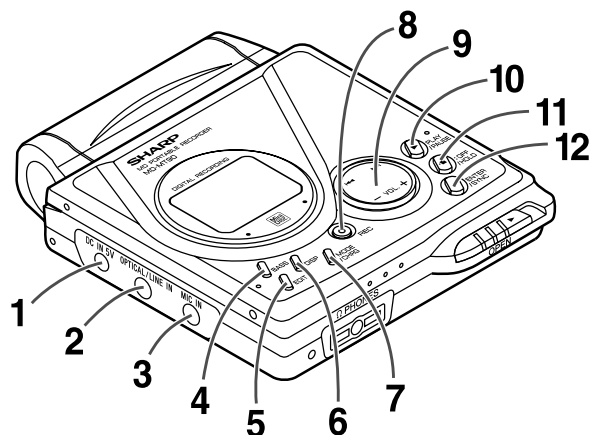

1. 5V DC Input Jack
2. Optical/Line Input Jack
3. Microphone Input Jack
4. Bass/Delete Button
5. Edit/Auto Mark/Time Mark Button
6. Display/Character Select Button
7. Mode/Charge Button
8. Record/Track Mark Button
9. Volume/Cursor/Fast Forward/Fast Reverse/  
Recording Level/Name Select Button
10. Play/Pause Button
11. Stop/Power Off/Hold Button
12. Enter/Fast Play/Synchro Button
13. Remote Control/Headphones/Line Output Jack
14. Open Lever
15. Battery Cover


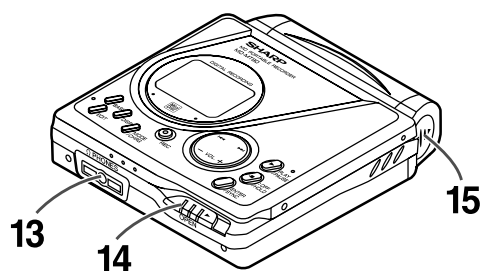


Illustration: MD-MT90W/90/90C

### ■ Main unit

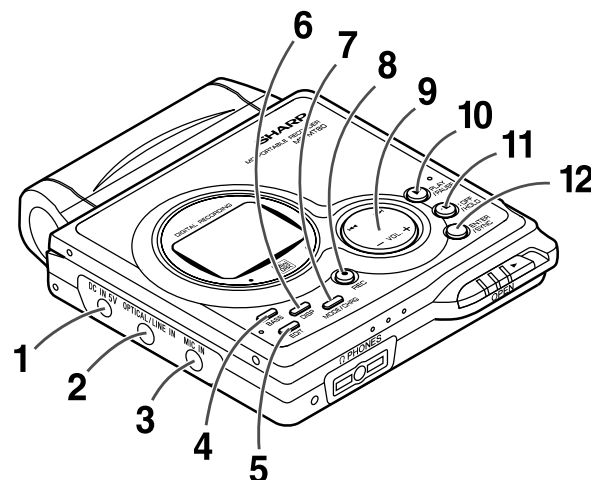

1. 5V DC Input Socket
2. Optical/Line Input Socket
3. Microphone Input Socket
4. Bass/Delete Button
5. Edit/Auto Mark/Time Mark Button
6. Display/Character Select Button
7. Mode/Charge Button
8. Record/Track Mark Button
9. Volume/Cursor/Fast Forward/Fast Reverse/  
Recording Level/Name Select Button
10. Play/Pause Button
11. Stop/Power Off/Hold Button
12. Enter/Fast Play/Synchro Button
13. Headphones/Line Output Socket
14. Open Lever
15. Battery Cover


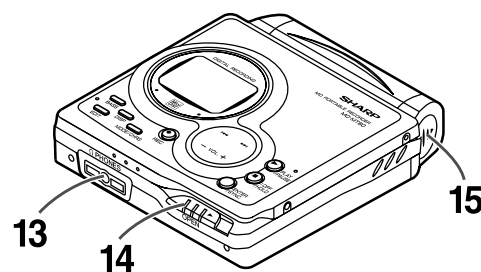


Illustration: MD-MT80W




## NAMES OF PARTS

### ■ Display panel

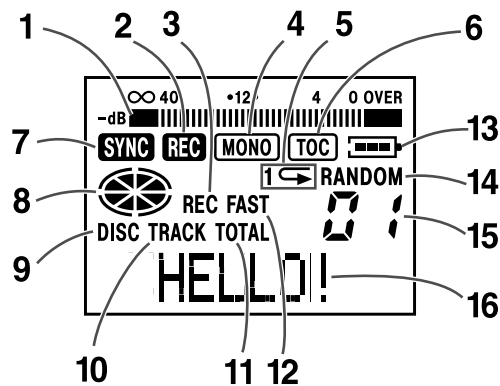

1. Level Meter
2. Record Indicator
3. Remaining Recording Time Indicator
4. Monaural Long-Play Mode Indicator
5. Repeat Indicator
6. TOC Indicator
7. Synchro Recording Indicator
8. Disc Mode Indicator
9. Disc Name Indicator
10. Track Name Indicator
11. Total Track Number Indicator
12. Fast Play Indicator
13. Battery Indicator
14. Random Indicator
15. Track Number Indicator
16. Character/Time Information Indicator

### ■ Remote control unit (MD-MT90W/90/90C)

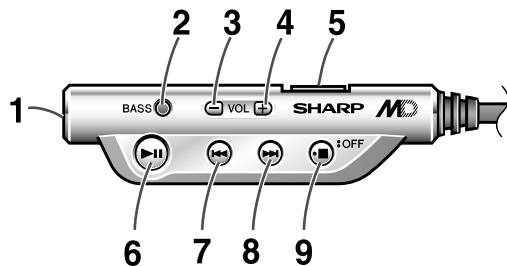


1. Headphones Jack
2. Bass/Delete/Track Mark Button
3. Volume Down/Cursor Button
4. Volume Up/Cursor Button
5. Hold Switch
6. Play/Pause Button
7. Fast Reverse/Recording Level Down/Name Select Button
8. Fast Forward/Recording Level Up/Name Select Button
9. Stop/Power Off Button

## OPERATION MANUAL

### MD-MT80W/90W

### Battery Power

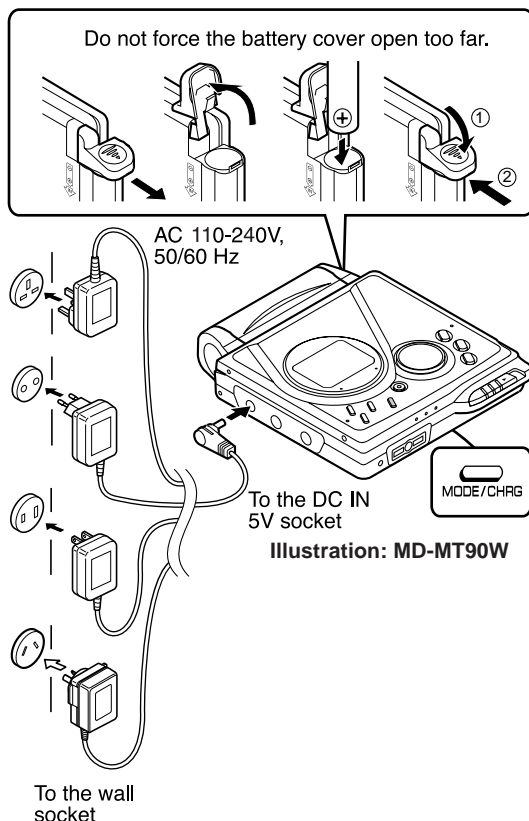

### ■ Charging the rechargeable battery

When a separately available rechargeable battery is used for the first time or when you use it after a long period of disuse, be sure to charge it fully.

#### 1 Insert the rechargeable battery.

A rechargeable battery other than the AD-N70BT cannot be charged.

#### 2 Plug the AC adaptor into the wall socket, and then insert the plug on the other end into the DC IN 5V socket.

#### 3 Press the MODE/CHRG button.


"" will flash, and battery will begin charging.

- After the rechargeable battery is charged or used, it will get slightly warm. This is normal.
- When the portable MD is turned on or operating, the battery will not be charged.



## MD-MT90/90C

## Battery Power

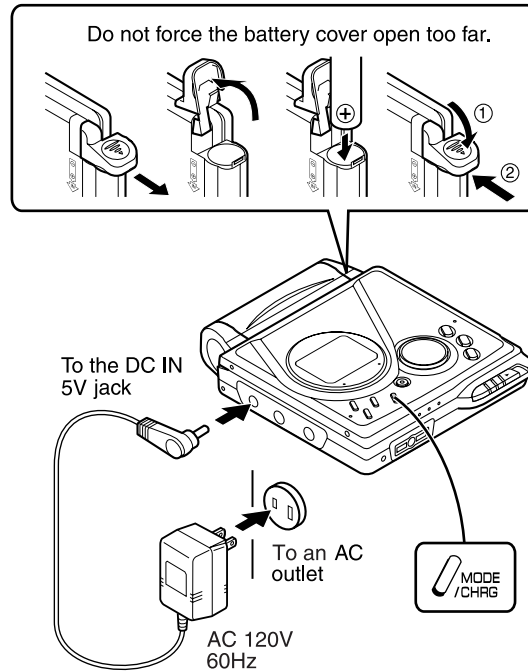

### ■ Charging the rechargeable battery

When the rechargeable battery is used for the first time or when you want to use it after a long period of disuse, be sure to charge it fully.

#### 1 Insert the rechargeable battery.

A rechargeable battery other than the one supplied or the optional one (AD-N70BT) cannot be charged.

#### 2 Plug the AC adaptor into the AC outlet, and then insert the plug on the other end into the DC IN 5V jack.


#### 3 Press the MODE/CHRG button.


" will flash, and battery will begin charging.

- After the rechargeable battery is charged or used, it will get slightly warm. This is normal.
- When the portable MD is turned on or operating, the battery will not be charged.

## MD-MT80W/90W/90/90C


### ■ Checking the remaining amount of battery level

The remaining amount of battery level is shown by the battery indicator () during operation.

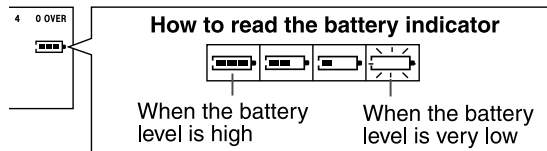

- When the battery is completely discharged, the battery indicator will flash. Recharge the battery or replace the alkaline battery with a new one.
- When the battery has run completely out, "BATT EMPTY" will appear. Then, the power will be disconnected automatically.

#### Notes:


- If you use the battery which you stopped charging halfway, " may appear. It does not mean that the battery is completely charged.
- The battery indicator will not correctly display the remaining capacity for approximately 10 seconds after the power has been turned on.
- When the AC adaptor or a separately available car adaptor is used, the battery indicator will not be shown.
- The number of bars shown in the battery indicator may increase or decrease, depending on the operation being performed. This is normal.

### ■ Using with the rechargeable or alkaline battery

#### 1 Disconnect the AC adaptor.

#### 2 Insert the rechargeable battery or alkaline battery from the (+) marked side.

Use a commercially available LR6, "AA" size alkaline battery.

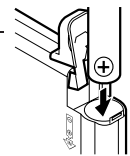

#### Notes:

- Setting the volume level to "0" whilst recording with the rechargeable or an alkaline battery reduces the battery drain.
- When you do not use the unit for hours, remove the battery. (The battery drains gradually even when the power is turned off.)
- Carry the battery in the supplied case. (Except for MD-MT80W)
- This unit can be used with the AC adaptor when the rechargeable or an alkaline battery is in the unit.

#### Caution:

Do not use a nickel-cadmium battery.

# Error Messages

| ERROR MESSAGES  | MEANING  | REMEDY  |
|---|--|---|
| <b>BATT EMPTY</b>   | ● The battery is run down.   | ● Charge the rechargeable battery or replace the alkaline battery (or use the AC adaptor for power).    |
| <b>BLANK MD</b>   | ● Nothing is recorded.   | ● Replace the disc with a recorded disc.  |
| <b>Can't COPY</b>   | ● You tried to record from a copy prohibited MiniDisc.   | ● Record using the analog cable.  |
| <b>Can't EDIT</b>   | ● A track cannot be edited.  | ● Change the stop position of the track and then edit it.   |
| <b>Can't READ (*)</b>                                     | ● The disc data cannot be read because the disc or unit is damaged.  | ● Reload the disc.<br>● Replace it with another recorded disc.  |
| <b>Can't REC</b>  | ● Recording cannot be performed correctly due to vibration or shock.                                       | ● Re-record or replace it with another recordable disc.   |
| <b>Can't STAMP</b>  | ● Stamp function does not work.  | ● Check the number of tracks.   |
| <b>Can't WRITE</b>  | ● Cannot save the TOC information correctly to a MiniDisc. (A large portion of the disc has been damaged.) | ● Replace the disc with another recordable disc.  |
| <b>DEFECT</b>   | ● The disc is scratched.   | ● If the sound you hear is not right, record again.<br>● Replace the disc with another recordable disc. |
| <b>DISC FULL</b>  | ● The disc is out of recording space.  | ● Replace it with another recordable disc.  |
| <b>Er-MD (**)</b>   | ● The microprocessor has reported a system fault and the unit is out of order.                             | ● To have it repaired, go to the distributor where you purchased the unit.                              |
| <b>HOLD</b>   | ● The unit is in the hold mode.  | ● Cancel the hold mode.   |
| <b>LOCKED</b>   | ● You removed a MiniDisc while recording or editing.   | ● Turn off the power and remove the MiniDisc.   |
| <b>NO DISC</b>  | ● A disc has not been loaded.  | ● Load a disc.  |
| Number or symbol appears in (*) position. (Refer to P.29) |  |   |

|                      |   |   |
|----------------------|---|---|
| <b>NO SIGNAL</b>     | ● Poor connection of the digital cable.<br>● No output signal comes out from the connected unit to playback.<br>● The input signal has improper sampling frequency. | ● Connect the digital cable securely.<br>● If the portable CD player has a function to prevent sound skips, deactivate it.<br>● Playback with the connected unit. |
| <b>NOT PLAY</b>      | ● You tried to play back a track that cannot be played with this equipment.   | ● Play back another track.  |
| <b>PLAY MD</b>       | ● You recorded on a playback-only disc.   | ● Replace it with a recordable disc.  |
| <b>POWER ?</b>       | ● Improper power is being supplied.   | ● Use one of the specified power sources.   |
| <b>PROTECTED</b>     | ● The write protection tab of a MiniDisc is set to the protected position.<br>● You tried to record on a playback-only disc.  | ● Move the write protection tab back to its original position.<br>● Replace it with a recordable MiniDisc.  |
| <b>SORRY</b>         | ● Since a track number is currently being located or updated, the unit cannot accept your command.  | ● Wait for a while and try the operation again.   |
| <b>TEMP OVER</b>     | ● The temperature is too high.  | ● Turn off the power, and wait for a while.   |
| <b>TOC FORM (**)</b> | ● There is an error in the recording signal.  | ● Erase all of the tracks, and then record again.   |
| <b>TOC FULL</b>      | ● There is no space left for recording character information (track names, disc names, etc.).   | ● Replace it with another recordable disc.  |
| <b>Tr. Protect</b>   | ● The track has been protected from being erased.   | ● Edit the track with the device on which it was recorded.  |
| <b>? DISC</b>        | ● A disc which contains data other than music was played.<br>● There is an error in the signal recorded on the disc.  | ● A disc which contains non-music data cannot be played.<br>● Replace it with another recorded disc.  |

Number or symbol appears in (\*) position. (Refer to P.29)

# MiniDisc System Limitations

The unit may have the following symptoms while recording or editing. The unit is not out of order.

| SYMPTOM   | LIMITATIONS  |
|---|--|
| "DISC FULL" or "TOC FULL" appears even though the MiniDisc still has recording time left.         | More than 255 tracks (maximum) cannot be recorded regardless of the recording time. If the MiniDisc is recorded or edited repeatedly or if it has scratches (recording skips scratched parts), you may not be able to record the maximum tracks above. |
| The remaining recording time does not increase even though you erased tracks.                     | The unit does not count non-recorded portions that last 12 or fewer seconds to display the remaining recording time. The time may not increase even if you erase short tracks.   |
| The total of the recorded time and the remaining time does not match the maximum recordable time. | One cluster (approximately 2 seconds) is the minimum unit for recording. For example, a 3-second track uses 2 clusters (approximately 4 seconds). Therefore, the actual recordable time may be shorter than the displayed time.                        |
| Combine function does not work.   | A MiniDisc on which recording and editing are repeated may not allow the combine function.   |
| Sound skips in fast reverse/forward.  | One track is divided and recorded in separate places on a repeatedly recorded or edited MiniDisc. Sound may skip.  |
| A track number is created in the middle of a track.   | A track number may be created if there are scratches or dust on the MiniDisc.  |

## Troubleshooting

Many potential "problems" can be resolved by the owner without calling a service technician. If something seems to be wrong with this product, check the following before calling your authorised SHARP dealer or service centre.

| PROBLEM  | CAUSE   |
|--|---|
| The unit does not turn on.   | <ul style="list-style-type: none"> <li>● Is the AC adaptor disconnected?</li> <li>● Is the battery exhausted?</li> <li>● Is the unit in the hold mode?</li> <li>● Has condensation formed inside the unit?</li> <li>● Is the unit being influenced by mechanical shock or by static electricity?</li> </ul>   |
| No sound is heard from the earphones.                              | <ul style="list-style-type: none"> <li>● Is the volume set too low?</li> <li>● Is the remote control unit or the headphones plugged in?</li> <li>● Are you trying to play a MiniDisc with data on it instead of a MiniDisc containing music?</li> </ul>   |
| When the operation buttons are pressed, the unit does not respond. | <ul style="list-style-type: none"> <li>● Is the unit in the hold mode?</li> <li>● Is the battery exhausted?</li> <li>● Is the remote control unit plug or the headphones plug inserted firmly?</li> </ul>   |
| Some sounds are skipped.   | <ul style="list-style-type: none"> <li>● Is the battery exhausted?</li> <li>● Is the unit being subjected to excessive vibration?</li> </ul>  |
| The MiniDisc cannot be ejected.                                    | <ul style="list-style-type: none"> <li>● Has the track number or character information been written on the disc yet?</li> <li>● Is the unit in the recording or editing mode?</li> </ul>  |
| Recording and editing are impossible.                              | <ul style="list-style-type: none"> <li>● Is the MiniDisc protected against accidental erasure?</li> <li>● Is the unit connected properly to the other equipment?</li> <li>● Is the AC adaptor unplugged or did a power failure occur whilst recording or editing?</li> <li>● Is the unit in the hold mode?</li> <li>● Is an optical signal being output from the stereo system? Read the operation manual for the stereo system.</li> </ul> |

(Remote control unit : MD-MT90W/90/90C Only)

**MD-MT90 ONLY****SHARP****Quick Guide / Guía rápida****PORTABLE MINIDISC RECORDER  
GRABADOR/REPRODUCTOR MINIDISC  
PORTÁTIL****MODEL/MODELO****MD-MT90****Quick Setup Guide****Guía rápida de configuración**

Follow the setup procedure (1-3) before you use this unit.

*Siga los procedimientos de configuración (1-3) antes de utilizar el aparato.*


**Quick Operation Guide  
Guía rápida de operación**

Explains basic recording and playback procedures.

*Explica los procedimientos básicos de grabación y reproducción.*



Refer to the operation manual for details.

*Para más detalles, consulte el manual de manejo.*

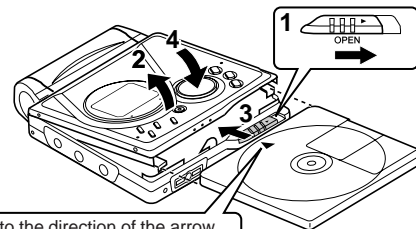**1 Inserting a MiniDisc  
Inserción de un minidisco**

Insert according to the direction of the arrow.  
*Insértelo de acuerdo con la dirección de la flecha.*


- 1** Slide the OPEN lever to release the compartment door.  
*Deslice la palanca OPEN para abrir la puerta del compartimiento.*
- 2** Lift it up.  
*Levántela.*
- 3** Insert a MiniDisc as shown.  
*Inserte un minidisco como se muestra.*
- 4** Close the compartment door.  
*Cierre la puerta del compartimiento.*

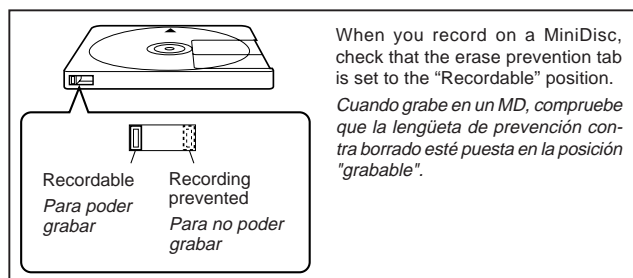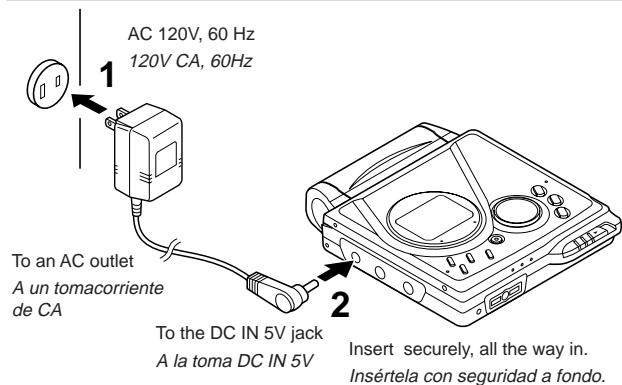**2 Connect the AC adaptor  
Conecte el adaptador de CA**

- 1** Plug the AC adaptor into the AC outlet.  
*Enchufe el adaptador de CA en el tomacorriente de CA.*
- 2** Insert the plug on the other end into the DC IN 5V jack.  
*Inserte la clavija del otro extremo en la toma DC IN 5V.*

Before using the unit with a rechargeable battery, the battery has to be charged. Refer to "Battery Power", pages 28-29 (operation manual) for details.

*Antes de emplear el aparato con una batería recargable, se deberá cargar la batería. Consulte el apartado de "Alimentación con pilas", en las páginas 28-29 (manual de manejo) para más detalles.*

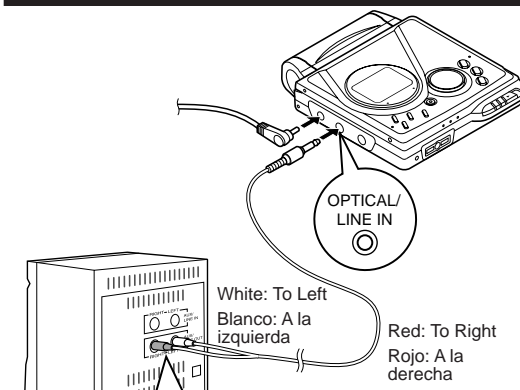**3 Connections / Conexiones**

**LINE OUT**  
RIGHT LEFT

**To a stereo system with "LINE OUT" or "AUDIO OUT" jacks**  
**Note:**  
If the audio system has only one pair of jack then they are usually for input only and recording via this connection is not possible.  
**A un sistema estéreo provisto de tomas de salida de línea "LINE OUT" o de salida de audio "AUDIO OUT"**  
**Nota:**  
Si el sistema de audio sólo tiene un par de tomas, normalmente son sólo de entrada y no puede realizarse la grabación mediante esta conexión.

**NOTE:**  
Refer to page 11 (operation manual) for connecting the unit to a stereo system with "DIGITAL OUT" or "OPTICAL OUT" jacks.

**NOTA:**  
Para conectar el aparato a un sistema estéreo provisto de tomas de salida digital "DIGITAL OUT" o de salida óptica "OPTICAL OUT", consulte la página 11 (manual de manejo).


## Preparation for use

### Preparación para su utilización

The unit does not work if the unit is in the hold mode.  
El aparato no funciona si está en el modo de retención.

Press the HOLD button for 2 seconds or more.  
Pulse el botón HOLD durante 2 o más segundos.

|          |                        |
|----------|------------------------|
| HOLD ON  | Hold<br>Retención      |
| ↕        |                        |
| HOLD OFF | Released<br>Liberación |

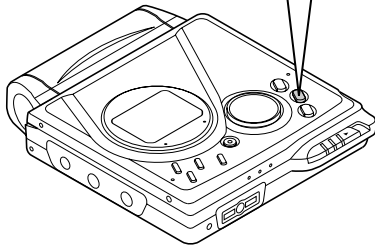

#### CAUTION:

It is not recommendable to put the MiniDisc into a rear pocket, as this may damage the product when sitting.

#### PRECAUCIÓN:

No se recomienda ponerse un minidisco en el bolsillo trasero del pantalón, porque podría dañarlo al sentarse.



#### 4 Press the PAUSE button on the stereo system to enter the playback pause mode.

Here you can search for the track to record.

Pulse el botón PAUSE del sistema estéreo para establecer el modo de pausa de reproducción.

Aquí podrá buscar la pista a grabarse.

#### 5 Press the PLAY/PAUSE button to start the MiniDisc unit recording.

Pulse el botón PLAY/ PAUSE para iniciar la grabación del aparato de MD.

#### 6 Begin playback on the stereo system, and the output will be recorded.

Inicie la reproducción del sistema estéreo, y se grabará la salida.

#### To stop recording

Press the ■ / :OFF button.

When recording stops, "TOC" appears (Table Of Contents). While "TOC" appears, recorded contents have not yet been updated on the MiniDisc.

#### Para detener la grabación

Pulse el botón ■ / :OFF.

Cuando se detenga la grabación, aparecerá "TOC" (índice). Mientras aparece "TOC", aún no se habrá actualizado el contenido grabado en el MD.

#### To update the recorded contents of the MiniDisc


Press the ■ / :OFF button while in the stop mode.

The power turns off after recorded contents have been updated on the MiniDisc.

#### Para actualizar el contenido grabado del MD

Pulse el botón ■ / :OFF en el modo de parada.

La alimentación se desconectará después de haber actualizado el contenido grabado en el MD.




TOC display  
Visualización  
TOC

TOC EDIT! → GOOD BYE!

## Recording / Grabación

Check that the unit is connected to the stereo system.

Compruebe que el aparato esté conectado al sistema estéreo.

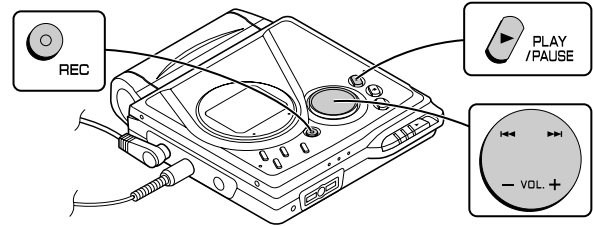

#### 1 Press the REC button.

Pulse el botón REC.

#### 2 Begin playback on the stereo system connected to this unit.

Inicie la reproducción en el sistema estéreo conectado a este aparato.


#### 3 Press the ◀◀ or ▶▶ button to adjust the recording level.

Adjust the recording level so that the maximum sound volume from the source makes the reading swing somewhere between -4 dB and 0 dB.

Pulse el botón ◀◀ o ▶▶ para ajustar el nivel de grabación.

Ajuste el nivel de grabación para que el volumen de sonido máximo de la fuente produzca una indicación de entre -4 dB y 0 dB.


Level meter indicator  
Indicador del medidor de nivel



This unit can adjust the digital recording level just the same as the analog recording.

Este aparato puede ajustar el nivel de grabación digital del mismo modo que en el caso de la grabación analógica.

## Playing / Reproducción

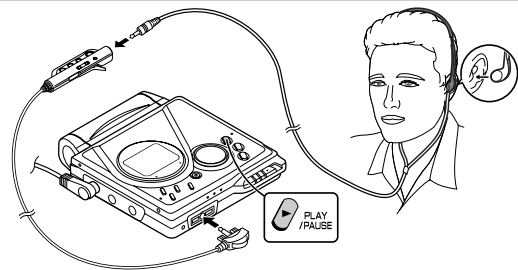

#### 1 Insert the headphones plug firmly into the headphones jack on the remote control unit.

Inserte firmemente la clavija de los auriculares en la toma de auriculares del controlador remoto.

#### 2 Plug the remote control into the REMOTE jack on the unit.

Enchufe el controlador remoto en la toma REMOTE del aparato.

#### 3 Insert a MiniDisc.

Inserte un MD.

#### 4 Press the PLAY/PAUSE button.

Playback starts automatically with a playback-only MiniDisc or a MiniDisc which is protected against accidental erasure (Auto-play function).

Pulse el botón PLAY/PAUSE.

La reproducción se inicia automáticamente con un minidisco de sólo reproducción o un minidisco protegido contra borrado accidental. (Función de reproducción automática)

#### To stop playback

Press the ■ / :OFF button.

If the unit is not operated for at least 2 minutes while in the stop mode, the power will shut off automatically.

#### Para detener la reproducción

Pulse el botón ■ / :OFF.

Si el aparato no se utiliza durante un mínimo de 2 minutos en el modo de parada, la alimentación se desconectará automáticamente.



## DISASSEMBLY

**Cares before disassembling**

When assembling the machine after disassembling or repair, observe the following requirements so as to ensure safety and performance.

1. Remove the batteries from the machine, and take out the mini-disc.
2. When assembling after repair, be sure to position the wires in the same location.  
Use the specified screws to fix the cabinet and the mechanism unit. The use of the screws with length other than specified may cause contact with the mechanism unit resulting in malfunction.
3. When repairing, pay close attention so not to damage the IC from static electricity.

| STEP | REMOVAL        | PROCEDURE   | FIGURE       |
|------|----------------|---|--------------|
| 1    | Bottom Cabinet | 1. Screw ..... (A1) x6  | 14-1         |
| 2    | Top Cabinet    | 1. Open the Top cabinet.<br>2. Screw ..... (B1) x4<br>3. Flexible PWB ..... (B2) x2                               | 14-1<br>14-2 |
| 3    | Main PWB       | 1. Open the Battery Lid.<br>2. Screw ..... (C1) x4<br>3. Flexible PWB ..... (C2) x2<br>4. Soldering ..... (C3) x2 | 14-1<br>14-2 |
| 4    | Mechanism Unit | 1. Screw ..... (D1) x2<br>2. Raise the rear part, and remove in the arrow direction.                              | 14-3         |

Illustration: MD-MT90W

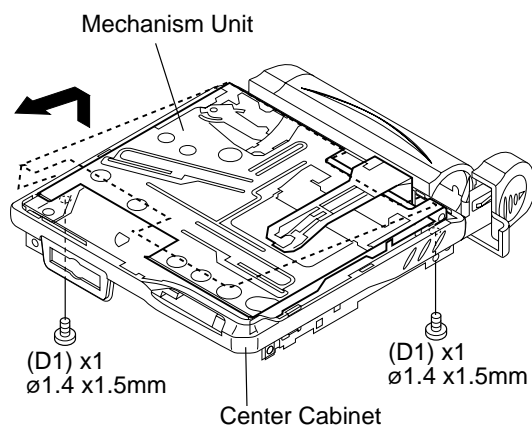


Figure 14-3

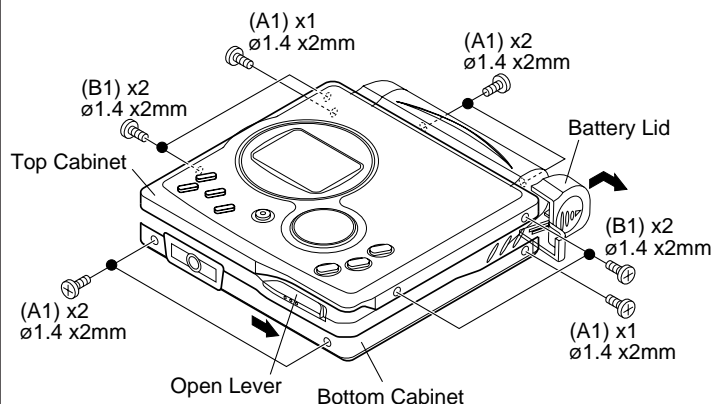
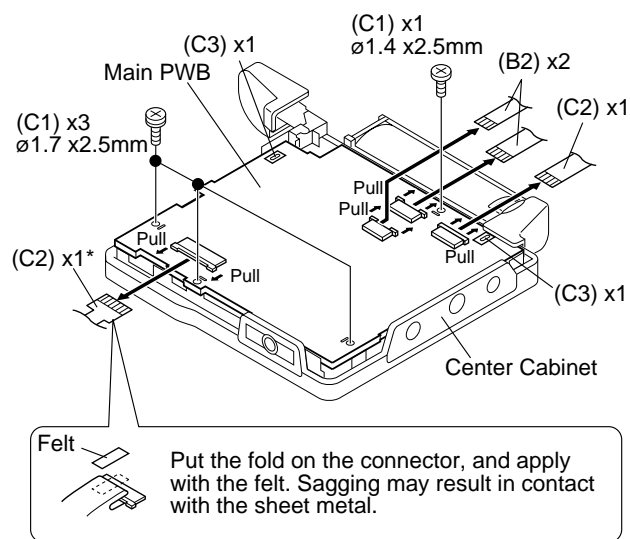


Figure 14-1

**Caution:**

Carefully handle the main PWB and flexible PWB. After removing the flexible PWB (1\*) for the optical pickup from the connector, do not touch directly the front end of flexible PWB with your hand so as to prevent damage of optical pickup by static electricity.

Figure 14-2

## REMOVING AND REINSTALLING THE MAIN PARTS

Remove the mechanism according to the disassembling methods 1 to 4. (See Page 14.)

### How to remove the spindle motor (See Fig. 15-1.)

1. Remove the solder joints (A1) x 4 of flexible PWB.
2. Remove the screws (A2) x 3 pcs., and remove the spindle motor.

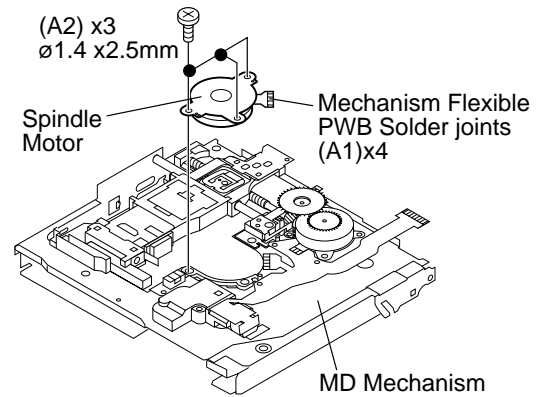


Figure 15-1

### How to remove the Lift motor (See Fig. 15-2.)

1. Remove the solder joints (B1) x 2 of lift motor lead wire.
2. Remove the screw (B2) x 1 pc., and remove the lift motor.

#### Note:

Take care so that the motor gear is not damaged.  
(If the gear is damaged, noise is caused.)

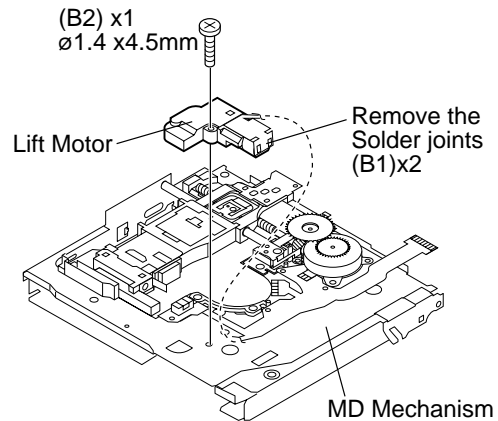


Figure 15-2

### How to remove the sled motor (See Fig. 15-3.)

1. Remove the stop washer (C1) x 1 pc., and remove the drive gear (C2) x 1 pc.
2. Remove the screws (C3) x 2 pcs.
3. Remove the solder joints (C4) x 2 of flexible PWB., and remove the sled motor.

#### Note:

Take care so that the motor gear is not damaged.  
(If the gear is damaged, noise is caused.)

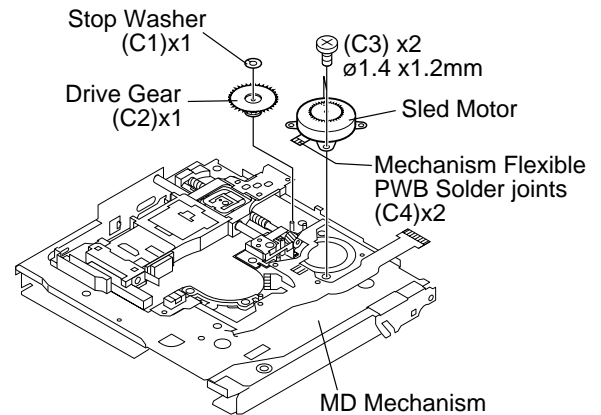


Figure 15-3

### How to reinstall the optical pickup (See Fig. 15-5.)

1. Remove the screw (E1) x 1 pc., and remove the spring.
2. Slowly raise the optical pickup.

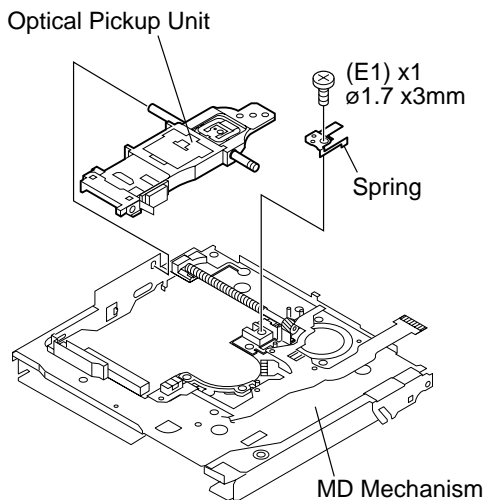


Figure 15-5

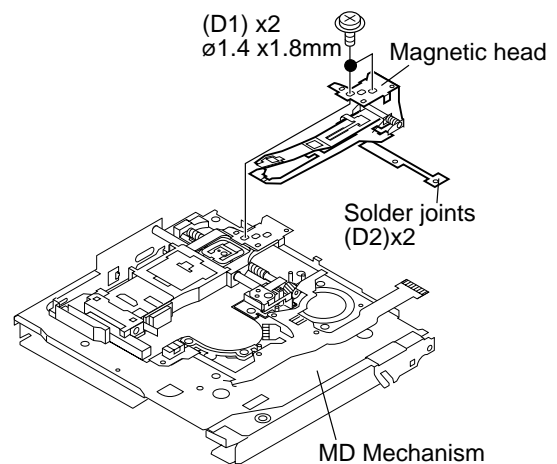


Figure 15-4



## ADJUSTMENT

### ● Test disc

MD adjustment needs two types of disc, namely recording disc (low reflection disc) and playback-only disc (high reflection disc).

|   | Type                 | Test disc                              | Parts No.     |
|---|----------------------|--|---------------|
| 1 | High reflection disc | MMD-110 (TEAC Test MD)                 | 88GMMD-110    |
| 2 | Low reflection disc  | MMD-212 (TEAC Test MD) 74-minute disc  | 88GMMD-212    |
| 3 | Low reflection disc  | MMD-213A (TEAC Test MD) 80-minute disc | 88GMMD-213A   |
| 4 | Low reflection disc  | Recording minidisc                     | UDSKM0001AFZZ |

Note: Use the low reflection disc on which music has been recorded.

### ● Entering the TEST mode

#### 1. Setting at port (power nonconnected state)

(1) Set the port as follows.

TEST1 : "Low" (TP416)

TEST0 : "High"

(2) Turn the Power ON.

(3) Test Mode START [ T E S T \_ ]


#### 2. Setting by special button operation (in standby state)

(1) Holding down the DISP button and ENTER button, press the PLAY ► button.

(2) Normal mode setting initialization (BASS setting, VOL setting, etc.)

\*Since the unit is changed to the setting for production line inspection, be sure to set it to the default setting state in the following default setting procedure before returning it to the user.

(3) Indication of microcomputer version for one second [ Z 0 4 A , b X ]



(4) Whole LCD lighting for 2 seconds

(5) Test Mode START [ T E S T \_ ]

\*When the PLAY ► button is pressed during indication (3) and (4), the process proceeds to (5).

### ● Leaving the TEST mode

(1) Press the STOP ■ button in the TEST mode stop state.

### ● Shipping setting method

Holding down simultaneously the VOLUME – Button and PLAY ► Button of the set unit without disc, supply the power from the DC IN plug. After the indication "INIT" -> "BYE OK" disappears, release the power supply of DC IN.

### ● Test Mode

|                   |   |
|-------------------|---|
| 1. AUTO 1 Mode    | <ul style="list-style-type: none"> <li>Perform preliminary automatic adjustment.</li> <li>If the combination of mechanism and pickup PWB has been changed, be sure to start from AUTO1.</li> </ul>  |
| 2. AUTO 2 Mode    | <ul style="list-style-type: none"> <li>Perform ATT (attenuator) automatic adjustment.</li> <li>Perform continuous playback (error rate display, jump test)</li> </ul>   |
| 3. TEST-PLAY Mode | <ul style="list-style-type: none"> <li>Continuous playback from the specified address is performed.</li> <li>1 line, 10 lines or 384 lines manual jump is performed.</li> <li>C1 error rate display (pit section), ADIP error rate display (groove section)</li> <li>The temperature correction is performed only when servo start is performed, but the posture correction is not performed during continuous playback.</li> </ul> |
| 4. TEST-REC Mode  | <ul style="list-style-type: none"> <li>Continuous record from the specified address is performed.</li> <li>Change of record laser output (servo gain is also changed according to laser output).</li> <li>The temperature correction is performed only when servo start is performed, but the posture correction is not performed during continuous recording.</li> </ul>   |
| 5. MANUAL 1 Mode  | <ul style="list-style-type: none"> <li>Temperature is displayed. (Updating in real time)</li> <li>Seeing the displayed adjustment value, perform preliminary manual adjustment. (Error rate indication, jump test)</li> </ul>   |
| 6. MANUAL 2 Mode  | <ul style="list-style-type: none"> <li>Temperature is displayed. (Updating in real time)</li> <li>Seeing the displayed adjustment value perform manually the preliminary adjustment. (Error rate indication, jump test)</li> <li>Continuous playback is performed (Error rate display, jump test).</li> </ul>   |

|                            |   |
|----------------------------|---|
| 7. RESULT 1 Mode           | <ul style="list-style-type: none"> <li>The value adjusted in AUTO1 or MANUAL1 is indicated.</li> <li>(Execution in servo "OFF" state").</li> </ul>  |
| 8. RESULT 2 Mode           | <ul style="list-style-type: none"> <li>The value adjusted in AUTO 2 or MANUAL 2 is indicated.</li> <li>Adjustment value is changed manually. (Error rate display, jump test).</li> </ul>  |
| 9. DIGITAL INPUT Mode      | <ul style="list-style-type: none"> <li>Digital input information is displayed.</li> </ul>   |
| 10. ERROR INFORMATION Mode | <ul style="list-style-type: none"> <li>Error information is displayed.</li> <li>Error information is initialized</li> </ul>   |
| 11. NORMAL Mode            | <ul style="list-style-type: none"> <li>The mode is changed from the TEST mode to the normal mode without adjustment.</li> <li>In the normal mode the internal operation mode, memory capacity, etc. are indicated.</li> <li>In the normal mode both temperature correction and posture correction are performed.</li> </ul>   |
| 12. EEPROM Mode            | <ul style="list-style-type: none"> <li>Factors of digital servo are changed manually. (Each servo is turned on individually.)</li> <li>Cut-off frequency of BASS1, BASS2 and BASS3 is selected manually.</li> <li>Temperature detection terminal voltage is measured, and the reference value is set.</li> <li>Defaults are selected and set.</li> <li>Setting of EEPROM protect area is updated. (In case of protect releasing)</li> </ul> |
| 13. INNER Mode             | <ul style="list-style-type: none"> <li>Determine the position where the INNER switch is turned on. (Only high reflection disc).</li> <li>The temperature correction is performed only when servo start is performed, but the posture correction is not performed.</li> </ul>  |

## ● Operation in each TEST mode

### 1. AUTO1 Mode

- When the STOP ■ button is pressed while the AUTO1 menu appears or during automatic adjustment, the mode changes to the TEST mode stop state. At this time the adjustment value is not output.
- Be sure to adjust, using the specified disc MMD-213A or MMD-212.  
At this time release the EEPROM (IC402) protection. (Refer to EEPROM write procedure.)
- Adjustment NG; Adjustment item out of range, focus ON failure, and adjustment error
- When the PLAY ► button is pressed while ADJ. OK is displayed, AUTO2 is executed.


### 2. AUTO2 Mode

- When the STOP ■ button is pressed while the AUTO2 menu appears or during automatic adjustment, the mode changes to the TEST mode stop state. At this time the adjustment value is not output.
- Adjustment NG; Adjustment item out of range, and adjustment error.
- When the PLAY ► button is pressed while ADJ. OK is displayed, TEST\_PLAY is executed.

### 3. TEST-PLAY Mode

- When the STOP ■ button is pressed while the TEST-PLAY menu appears, or in TEST-PLAY or continuous playback mode, the mode changes to the TEST mode stop state.
- When the PLAY ► button is pressed while the TEST-PLAY menu appears, continuous playback is initiated from the current pickup position.
- Whenever the DISP button is pressed in the TEST-PLAY menu, the target address changes as follows.  
0032 → 03C0 → 0700 → 08A0 → 0950 → 0032 → .....  
When the PLAY ► button is pressed while a target address is displayed, continuous playback is performed after searching that address.
- Each time the MODE button is pressed while the TEST-PLAY mode target address is displayed, the digit which is changed by pressing the FAST FORWARD/FAST REVERSE ►► / ◄◄ button is changed as follows.  
0032 → 0032 → 0032 → 0032 → .....  
When the FAST FORWARD ►► button is pressed in the TEST-PLAY mode target address is displayed, the digit of address specified by the MODE button is set to +1h. (0 to F)
- When the FAST REVERSE ◄◄ button is pressed in the TEST-PLAY mode target address is displayed, the digit of address specified by the MODE button is set to -1h. (0 to F)
- \* When the FAST FORWARD/FAST REVERSE ►► / ◄◄ button is held down, the setting changes continuously, one cycle being 100 ms.
- When the BASS button is pressed in the continuous playback mode, the number of jump lines changes as follows.  
1 → 10 → 384 → 1 → .....  
\* After the number of jump lines is indicated for one second, the address indication is restored [▲▲▲ T R \_ ]
- When the FAST FORWARD ►► button is pressed in the continuous playback mode, the specified number of lines is jumped in the FWD direction.
- When the FAST REVERSE ◄◄ button is pressed in the continuous playback mode, the specified number of lines is jumped in the REV direction.
- \* When the FAST FORWARD/FAST REVERSE ►► / ◄◄ button is held down, jump is repeated every approx. 100 ms.

- Whenever the DISP button is pressed in the continuous playback mode, the indication changes as follows.

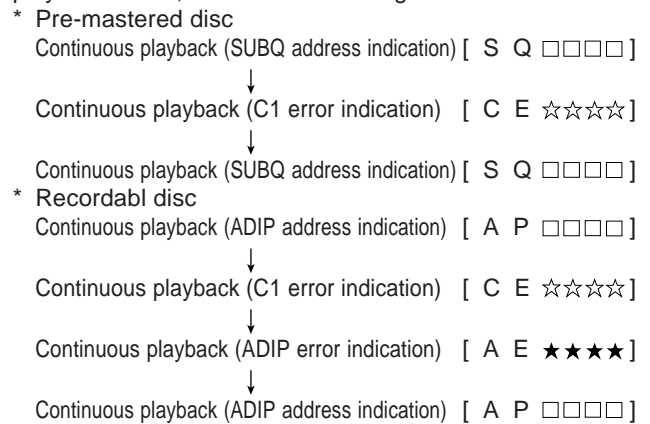

### 4. TEST-REC Mode

- When the STOP ■ button is pressed while the TEST-REC menu appears, or in the TEST-REC mode or continuous record mode, the mode changes to the TEST mode stop state.
- When the PLAY ► button is pressed while the TEST-REC menu appears, the continuous record is initiated from the current pickup position.
- Whenever the DISP button is pressed in the TEST-REC menu, the target address changes as follows.  
0032 → 03C0 → 0700 → 08A0 → 0950 → 0032 → .....  
When the PLAY ► button is pressed while a target address is displayed, continuous playback is performed after searching that address.
- Whenever the MODE button is pressed in the TEST-REC mode target address is displayed, the digit which is changed by the FAST FORWARD/FAST REVERSE ►► / ◄◄ button changes as follows.  
0032 → 0032 → 0032 → 0320 → .....  
When the FAST FORWARD ►► button is pressed in the TEST-REC mode target address is displayed, the digit of address specified by the BASS button is set to +1h. (0 to F)
- When the FAST REVERSE ◄◄ button is pressed in the TEST-REC mode target address is displayed, the digit of address specified by the BASS button is set to -1h. (0 to F)
- \* When the FAST FORWARD/FAST REVERSE ►► / ◄◄ button is held down, the setting changes continuously, one cycle being 100 ms.

**5. NORMAL Mode**

- When the STOP ■ button is pressed while the NORMAL menu appears, the mode changes to the TEST mode stop state.
- Indication during operation  
Indication of memory capacity on main unit LCD  
[ □ □ \_ \* \* \* \* \_ \* \* ] + Level meter  
□ □ : Internal mode  
\* \* \* \* : Address (Cluster section)  
\* \* : Address (Sector section)
- Selection of sound volume, BASS, etc. is possible (without indication)
- Recording is also possible.
- If the STOP ■ button is pressed during operation in the NORMAL mode, the NORMAL mode is canceled, and the power is turned off.

**6. Error data display Mode**

- Reversing when FAST REVERSE ◀◀ button is pressed
- When the STOP ■ button is pressed while the error data indication menu appears or during error data indication, the mode changes to the TEST mode stop state.
- Error data 0 is the latest error.
- Error which occurred in the TEST mode is also stored in the memory.
- When the DISP button is pressed while the error data indication menu appears, the error data is initialized.  
[ C L E A R \_ ]
- ◇◇: Error Code

**● Explanation of error history code**


13h : Excessive number of retry to draw servo during its adjustment.  
 16h : COUT detection time over during servo adjustment.  
 17h : The level of input signal from the RF amplifier is out of the allowable range.  
 1Fh : Cannot clear the factor of ENDEC DINT.  
 21h : Cannot focus on the disc.  
 22h : Cannot start up the spindle.  
 23h : Track search time over.  
 32h : Cannot read P-TOC.  
 42h : Cannot read U-TOC.  
 44h : Cannot write U-TOC.  
 45h : Cannot perform write test of U-TOC.  
 52h : Cannot write SD. (Sound Data)  
 71h : Time over during initialization of the pickup position.  
 72h : Check sum error occurred when reading EEPROM.  
 73h : Cannot operate the recording head (by using the EJECT lever).  
 91h : The ambient temperature is out of the allowable range.

**7. INNER Mode**

- When the STOP ■ button is pressed on the INNER menu (SQ □ □ □ □ ), the state is changed to the TEST mode STOP state.
- □ □ □ □ : Address

## EEPROM (IC402) writing procedure

### 1. Procedure to replace EEPROM and write initial value of microcomputer in EEPROM

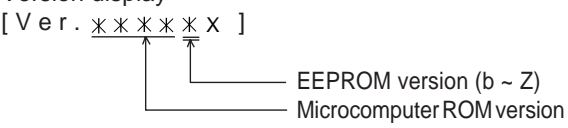- (1) Replace EEPROM.
- (2) Refer to the latest EEPROM data list.
- (3) Press the Display button, ENTER button and Play button to start the test mode.
- (4) Version display  

- (5) The whole LCD lights.
- (6) Test mode stop state.  
[ T E S T ]
- (7) Press the "BASS" button, and press twice the "FAST REVERSE ◀◀" button.  
[ E E P R O M ]
- (8) Perform the operation to display "EEPROM SETTING MODE CHART", compare the EEPROM DATA LIST with the display, and set according to the EEPROM DATA LIST with the VOL + or VOL – button.
- (9) Set the temperature reference. (Refer to the Temperature Reference Setting Method.)
- (10) Set according to the EEPROM DATA LIST.
- (11) Press the Stop ■ button.  
[ T E S T ]
- (12) Press the Stop ■ button.
- (13) After data is written in EEPROM, turn off power.
- (14) Restore protection of EEPROM.

## 2. Temperature reference setting method

### [1] Measurement, calculation and setting procedure

- (1) Set the TEST mode.
  - Set TEST 1, 0 = '01', and turn on power (or set PLAY ON in standby state).
- (2) Start the EEPROM mode 'Temp' menu.
  - Key operation in order of BASS, FAST REVERSE ◀◀ x 2 times, PLAY ▶, PLAY ▶ in the test mode STOP state.
  - 'TM\$\$○○' is displayed. (\$\$= Temperature code, ○○ = Temperature reference)
- (3) Once press FAST FORWARD ▶▶, and determine the displayed microcomputer TEMP input AD value.
  - 'TPin##' is displayed. (## = TEMP input AD value)
- (4) At the ambient temperature, determine the temperature corrected value from the temperature measurement value correction table.
- (5) Determine the temperature reference, using the following formula.
  - Temperature reference = Microcomputer TEMP input AD value + Temperature corrected value
- (6) Set the temperature reference value by button operation, and check whether the temperature code indication corresponds to "Temperature Code Identification Table".

### [2] Temperature measurement value correction table

| Ambient temperature | Temperature correction | Center temperature |
|---------------------|------------------------|--------------------|
| + 9°C ~ +11°C       | - 05h                  | + 10.0°C           |
| +12°C ~ +14°C       | - 04h                  | + 12.7°C           |
| +15°C ~ +16°C       | - 03h                  | + 15.4°C           |
| +17°C ~ +19°C       | - 02h                  | + 18.2°C           |
| +20°C ~ +22°C       | - 01h                  | + 20.9°C           |
| +23°C ~ +24°C       | ± 00h                  | + 23.6°C           |
| +25°C ~ +27°C       | + 01h                  | + 26.3°C           |
| +28°C ~ +30°C       | + 02h                  | + 29.0°C           |
| +31°C ~ +33°C       | + 03h                  | + 31.8°C           |

### [3] Temperature code identification

| Ambient temperature | Temperature correction | Center temperature |
|---------------------|------------------------|--------------------|
| - 9°C ~ +10°C       | 08h                    | + 0.5°C            |
| + 3°C ~ +21°C       | 07h                    | + 12.5°C           |
| +15°C ~ +33°C       | 06h                    | + 23.6°C           |
| +26°C ~ +43°C       | 05h                    | + 35.0°C           |

# MD-MT80W/90W/90/90C

## ● EEPROM DATA LIST (EEPROM version d)

### TEMP setting

| Item display | Set values       |
|--------------|------------------|
| T M _ _ _    | Calculate values |

### Focus setting

| Item display | Set values       |
|--------------|------------------|
| F G 1 _ _    | 3 B <sub>H</sub> |
| F F 0 _ _    | 1 0 <sub>H</sub> |
| F F 1 _ _    | 7 0 <sub>H</sub> |
| F F 2 _ _    | E 8 <sub>H</sub> |
| F Z H _ _    | E D <sub>H</sub> |
| F L n _ _    | 0 9 <sub>H</sub> |
| F L p _ _    | 0 6 <sub>H</sub> |
| D J G _ _    | 0 D <sub>H</sub> |
| F S S _ _    | 1 D <sub>H</sub> |
| F T S _ _    | 1 8 <sub>H</sub> |
| F S B _ _    | 3 A <sub>H</sub> |
| F T B _ _    | 3 8 <sub>H</sub> |
| F G M _ _    | 6 6 <sub>H</sub> |
| T V G _ _    | 8 4 <sub>H</sub> |
| T O 1 _ _    | 5 0 <sub>H</sub> |
| T O R _ _    | 5 4 <sub>H</sub> |

### Spindle setting

| Item display | Set values       |
|--------------|------------------|
| S P G _ _    | 1 A <sub>H</sub> |
| S P i _ _    | 6 A <sub>H</sub> |
| S P m _ _    | 5 1 <sub>H</sub> |
| S P o _ _    | 3 8 <sub>H</sub> |
| S P 1 _ _    | 1 0 <sub>H</sub> |
| S P 2 _ _    | 6 0 <sub>H</sub> |
| S P 3 _ _    | F 2 <sub>H</sub> |
| S P 4 _ _    | F 2 <sub>H</sub> |
| S P 5 _ _    | 1 0 <sub>H</sub> |
| S D 1 _ _    | 5 5 <sub>H</sub> |
| S D 2 _ _    | 6 4 <sub>H</sub> |
| S P K _ _    | 8 0 <sub>H</sub> |
| M P G _ _    | 0 8 <sub>H</sub> |
| S P L _ _    | 6 0 <sub>H</sub> |
| S P W _ _    | 0 F <sub>H</sub> |
| S P B _ _    | 3 2 <sub>H</sub> |
| S R i _ _    | 6 B <sub>H</sub> |
| S R m _ _    | 6 B <sub>H</sub> |
| S R o _ _    | 6 B <sub>H</sub> |
| S B R _ _    | 6 6 <sub>H</sub> |
| O S L _ _    | 0 0 <sub>H</sub> |

### ADJ. SET setting

| Item display | Set values       |
|--------------|------------------|
| C O K _ _    | 2 8 <sub>H</sub> |
| F A T _ _    | C 0 <sub>H</sub> |
| T A T _ _    | 3 E <sub>H</sub> |
| C A T _ _    | 4 0 <sub>H</sub> |
| F A B _ _    | 6 4 <sub>H</sub> |

### EQ. SET setting

| Item display | Set values       |
|--------------|------------------|
| H Q 1 _ _    | 9 0 <sub>H</sub> |
| H Q 2 _ _    | 9 0 <sub>H</sub> |
| H S G _ _    | 1 1 <sub>H</sub> |
| H S O _ _    | F D <sub>H</sub> |
| L Q 1 _ _    | 9 0 <sub>H</sub> |
| L Q 2 _ _    | 9 0 <sub>H</sub> |
| L S G _ _    | 1 1 <sub>H</sub> |
| L S O _ _    | 0 0 <sub>H</sub> |
| G Q 1 _ _    | 9 8 <sub>H</sub> |
| G Q 2 _ _    | 8 4 <sub>H</sub> |
| G S G _ _    | 1 1 <sub>H</sub> |
| E Q R _ _    | 0 0 <sub>H</sub> |

### Tracking setting

| Item display | Set values       |
|--------------|------------------|
| T G 1 _ _    | 1 C <sub>H</sub> |
| T F 0 _ _    | 1 0 <sub>H</sub> |
| T F 1 _ _    | 7 0 <sub>H</sub> |
| T F 2 _ _    | E 0 <sub>H</sub> |
| T F S _ _    | 0 0 <sub>H</sub> |
| T B o _ _    | 2 B <sub>H</sub> |
| T B t _ _    | 1 8 <sub>H</sub> |
| T K o _ _    | 2 B <sub>H</sub> |
| T K t _ _    | 1 5 <sub>H</sub> |
| T D o _ _    | 6 7 <sub>H</sub> |
| T D t _ _    | 3 A <sub>H</sub> |
| S C o _ _    | 0 0 <sub>H</sub> |
| S C t _ _    | 2 A <sub>H</sub> |
| S C m _ _    | 5 3 <sub>H</sub> |
| C L p _ _    | 2 8 <sub>H</sub> |
| C L r _ _    | 3 2 <sub>H</sub> |
| J P I _ _    | 0 8 <sub>H</sub> |
| K 1 0 _ _    | 6 6 <sub>H</sub> |
| T H P _ _    | 0 2 <sub>H</sub> |
| T H G _ _    | 0 2 <sub>H</sub> |
| T O P _ _    | 0 0 <sub>H</sub> |
| T O G _ _    | F 2 <sub>H</sub> |
| T 1 P _ _    | 2 0 <sub>H</sub> |

### Sled setting

| Item display | Set values       |
|--------------|------------------|
| S L G _ _    | 7 0 <sub>H</sub> |
| S L 2 _ _    | 2 0 <sub>H</sub> |
| S L M _ _    | 7 0 <sub>H</sub> |
| S K k _ _    | 6 8 <sub>H</sub> |
| S K t _ _    | 6 0 <sub>H</sub> |
| S K m _ _    | 7 0 <sub>H</sub> |
| W T m _ _    | 2 4 <sub>H</sub> |
| S B T _ _    | 0 0 <sub>H</sub> |
| S B L _ _    | 4 8 <sub>H</sub> |
| M V 1 _ _    | 4 4 <sub>H</sub> |
| M V 2 _ _    | 8 8 <sub>H</sub> |
| S L V _ _    | 3 2 <sub>H</sub> |
| S l i _ _    | 2 B <sub>H</sub> |
| S l m _ _    | 4 B <sub>H</sub> |
| S l o _ _    | 5 B <sub>H</sub> |
| S L T _ _    | 6 5 <sub>H</sub> |
| MMV _ _      | 0 0 <sub>H</sub> |
| S L P _ _    | 4 C <sub>H</sub> |
| M V T _ _    | 0 1 <sub>H</sub> |

### Bass setting


| Item display | Set values       |
|--------------|------------------|
| B 1 A _ _    | 3 F <sub>H</sub> |
| B 1 B _ _    | 0 0 <sub>H</sub> |
| B 1 C _ _    | 0 0 <sub>H</sub> |
| B 2 A _ _    | 1 F <sub>H</sub> |
| B 2 B _ _    | 0 0 <sub>H</sub> |
| B 2 C _ _    | 0 0 <sub>H</sub> |
| B 3 A _ _    | E 2 <sub>H</sub> |
| B 3 B _ _    | 0 0 <sub>H</sub> |
| B 3 C _ _    | 0 0 <sub>H</sub> |

### Control setting

| Item display | Set values       |
|--------------|------------------|
| C T 0 _ _    | 8 3 <sub>H</sub> |
| C T 1 _ _    | 8 1 <sub>H</sub> |
| C T 2 _ _    | 3 0 <sub>H</sub> |
| C T 3 _ _    | 0 0 <sub>H</sub> |
| B P 1 _ _    | 7 D <sub>H</sub> |
| B P 2 _ _    | 6 F <sub>H</sub> |
| B P W _ _    | 6 6 <sub>H</sub> |
| B P S _ _    | 5 F <sub>H</sub> |
| B P E _ _    | 5 D <sub>H</sub> |
| B R 1 _ _    | 7 E <sub>H</sub> |
| B R 2 _ _    | 7 7 <sub>H</sub> |
| B R W _ _    | 6 D <sub>H</sub> |
| B R S _ _    | 6 9 <sub>H</sub> |
| B R E _ _    | 6 1 <sub>H</sub> |
| P L E _ _    | A 6 <sub>H</sub> |
| R C E _ _    | 9 4 <sub>H</sub> |
| S D F _ _    | 1 F <sub>H</sub> |
| P W L _ _    | 0 1 <sub>H</sub> |
| C G 1 _ _    | A 5 <sub>H</sub> |
| C G 2 _ _    | 0 0 <sub>H</sub> |
| C H V _ _    | 5 6 <sub>H</sub> |
| R F L _ _    | F 0 <sub>H</sub> |
| R C 0 _ _    | D 5 <sub>H</sub> |
| R C 1 _ _    | D E <sub>H</sub> |
| S Y C _ _    | A 6 <sub>H</sub> |
| U S A _ _    | 1 8 <sub>H</sub> |
| E L T _ _    | A 0 <sub>H</sub> |
| F B O _ _    | F C <sub>H</sub> |
| M F P _ _    | 4 B <sub>H</sub> |
| B S 0 _ _    | 1 7 <sub>H</sub> |
| B S 1 _ _    | 7 0 <sub>H</sub> |
| B C 0 _ _    | 0 1 <sub>H</sub> |
| B C 1 _ _    | D C <sub>H</sub> |
| B C 2 _ _    | 0 5 <sub>H</sub> |
| B M K _ _    | 1 E <sub>H</sub> |
| B E C _ _    | 0 0 <sub>H</sub> |


Do the following when replacing the mechanism, the pickup, the EEPROM (IC402), the LSI(IC201) or the main PWB unit.

Enter the test mode, move the pickup to the most internal periphery and execute AUTO1.  
(Use the disc of MMD-213A.)

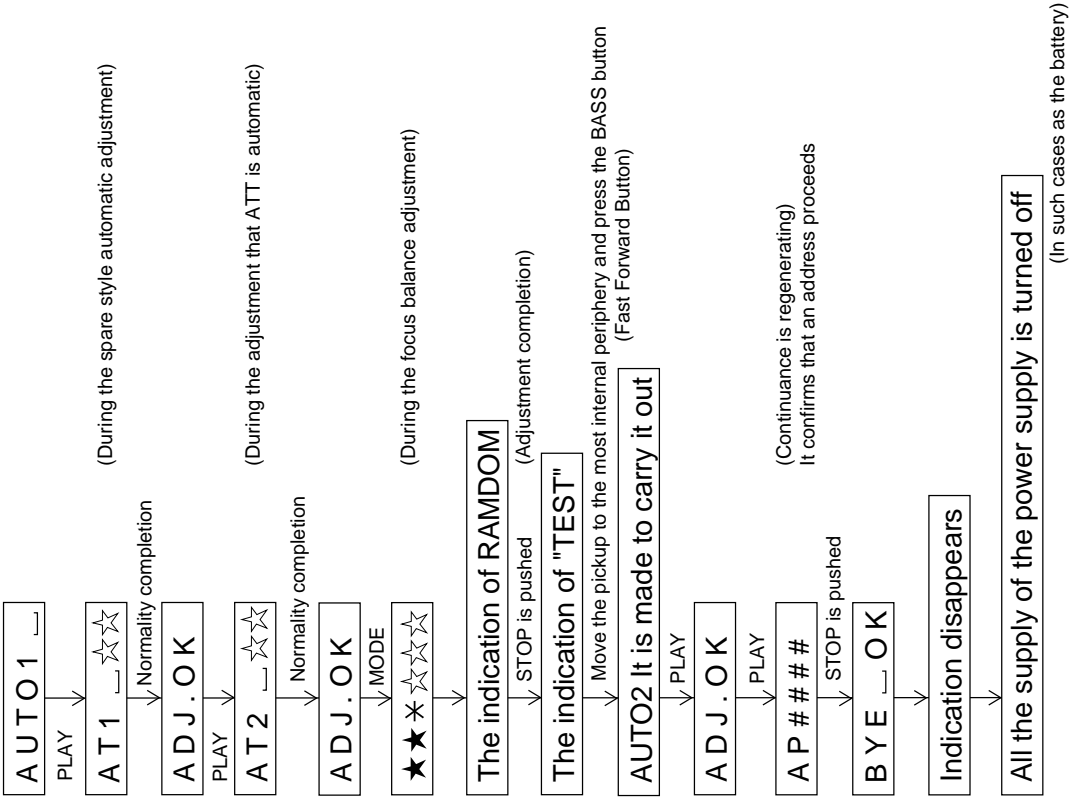

If you replaced EEPROM, set the EEPROM volume to the final version.


Test Mode Change Chart  
Tset Mode Menu

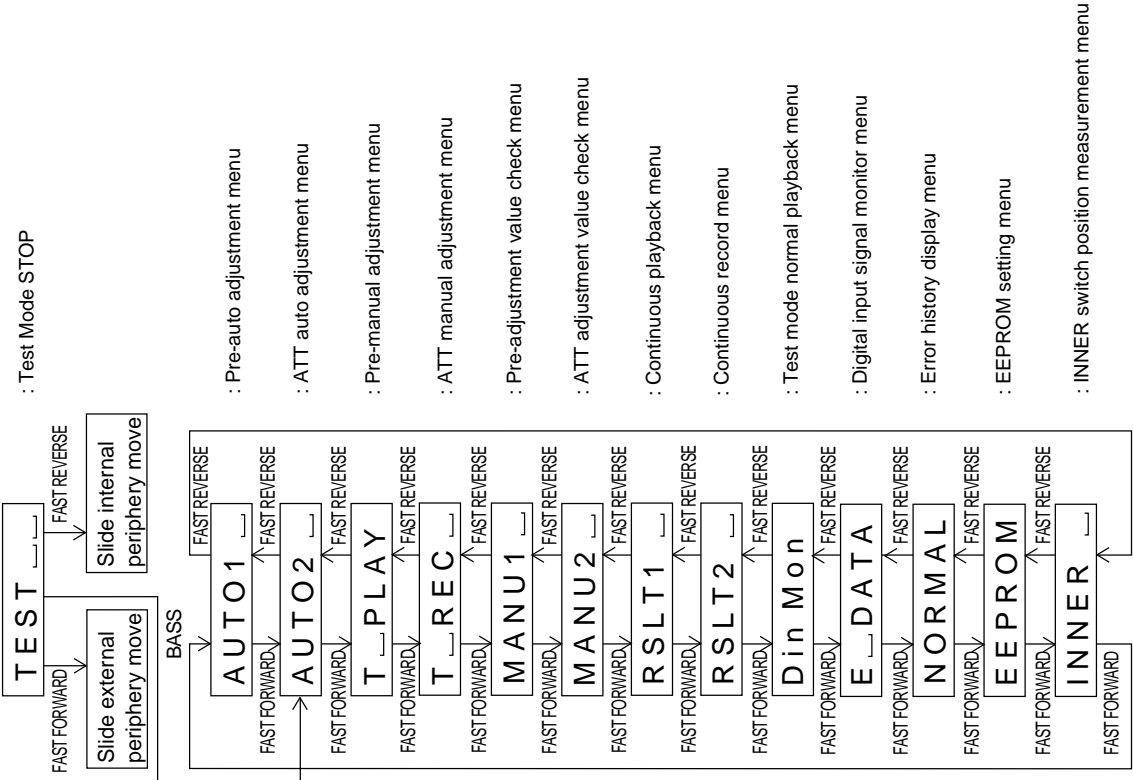

\* When the [STOP ■] button is pressed in specific menu, the "TEST MODE STOP" state is set.  
\* When the [PLAY ►] button operation is performed in the specific menu, the operation of this menu is executed.



Preautomatic Adjustment

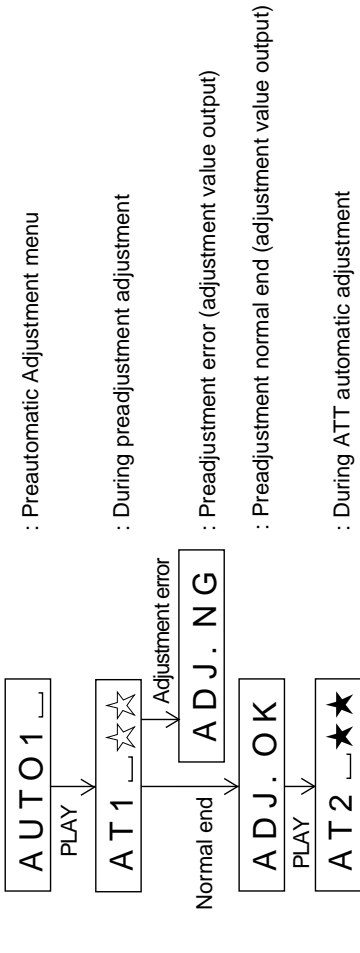


\* When the [STOP ■] button is pressed in specific menu, the "TEST MODE STOP" state is set.

\* "☆☆" represent the adjustment number as follows.

- 0 0 : Innermost periphery move
- 0 2 : ABEF offset tentative measurement
- 0 4 : RF side focus gain coarse adjustment
- 0 5 : Focus ATT tentative setting
- 0 6 : RF side bit section tracking gain adjustment
- 0 7 : COUT level setting for pit section adjustment
- 0 8 : External periphery move
- 0 9 : RF side groove section tracking gain adjustment
- 1 0 : COUT level setting for groove section adjustment
- 1 1 : RF side TCRS gain adjustment
- 1 2 : Tracking ATT initial setting
- 1 3 : RF side focus gain minor adjustment
- 1 4 : Focus ATT initial setting
- 1 5 : S gain "High" ABEF offset measurement
- 1 6 : TCRS offset measurement
- 1 7 : S gain "Low" ABEF offset measurement

ATT Auto Adjustment

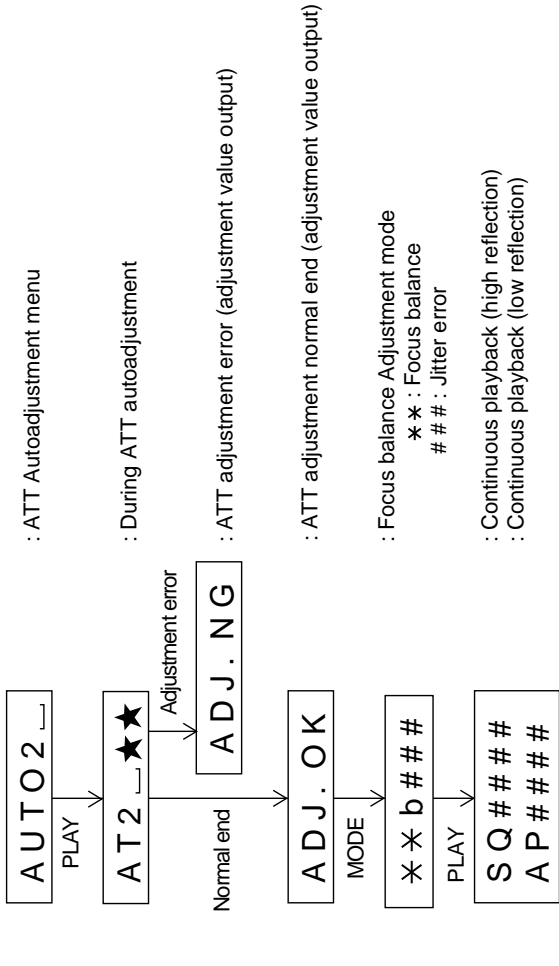


\* When the [STOP ■] button is pressed in specific menu, the "TEST MODE STOP" state is set.  
\* "★★" represent the adjustment number as follows.

- 0 0 : Innermost periphery move
- 0 3 : Pit section tracking ATT setting
- 0 4 : Pit section focus ATT setting
- 0 6 : External periphery move (low reflection only)
- 0 7 : TCRS ATT setting (low reflection only)
- 0 8 : Groove section tracking ATT setting (low reflection only)
- 0 9 : Groove section focus ATT setting (low reflection only)




## Continuous Playback


- Continuous playback from current pickup position

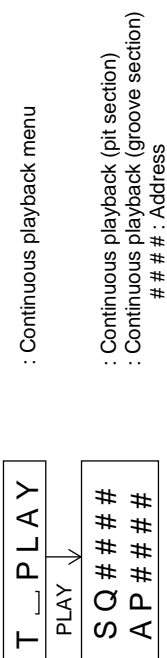


- Continuous playback from any address

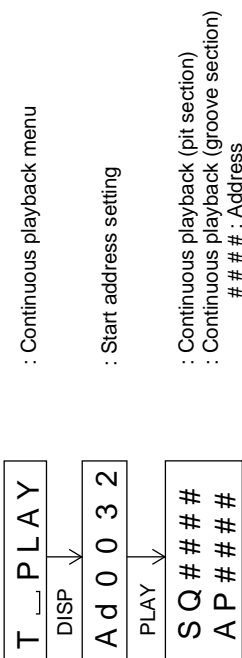

- \* When the [STOP ■] button is pressed in specific menu, the "TEST MODE STOP" state is set.

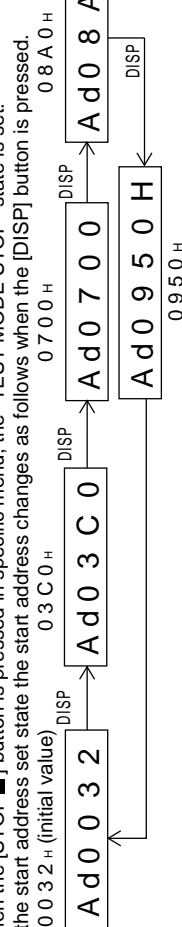


- \* In the start address setting state the start address change digit changes when the [MODE] button is pressed.



- \* In the start address set state the value of selection digit changes in the range of "0h to Fh" when the [FAST FORWARD/REVERSE ►►/◄◄] button is pressed.

- \* In the continuous playback state the number of jump lines changes as follows shown the [BASS] button is pressed.




- \* When the [FAST FORWARD ►►] button is pressed in the continued playback mode, jump of specified number of lines occurs in the external periphery direction.

If the key is held down jump occurs continuously (100 ms cycle).

- \* When the [FAST REVERSE ◄◄] button is pressed in the continued playback mode, jump of specified number of lines occurs in the internal periphery direction.

If the key is held down, jump occurs continuously (100 ms cycle).

- Focus balance Adjustment mode

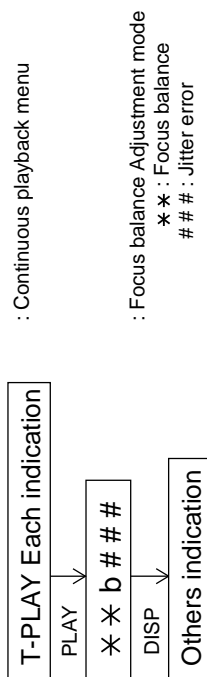

- \* The focus balance adjustment mode is available only for low reflection discs.

- \* The RANDOM marker lights up in the focus balance adjustment mode.


- \* The focus balance (\* \*) can be changed by the [VOL +/-] button operation.

- \* If the PLAY button is pressed in the focus balance adjustment mode, the unit returns to the continuous playback mode.

Continuous Rerecord




Inner Switch Position Measurement

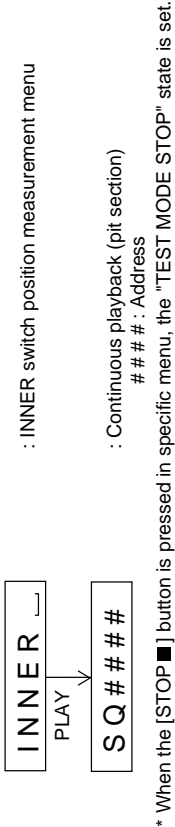


Test Mode Normal Playback




Error History Display

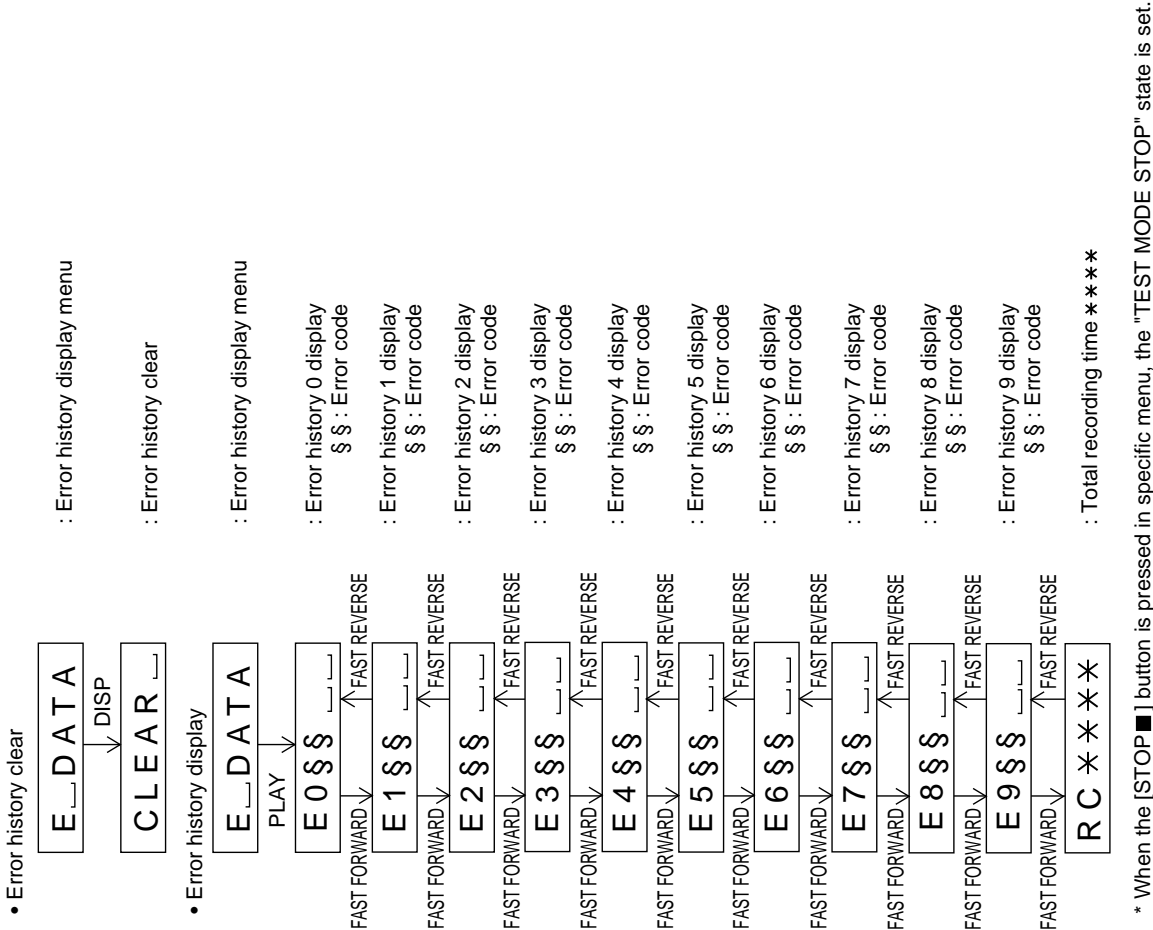

## EEPROM Setting

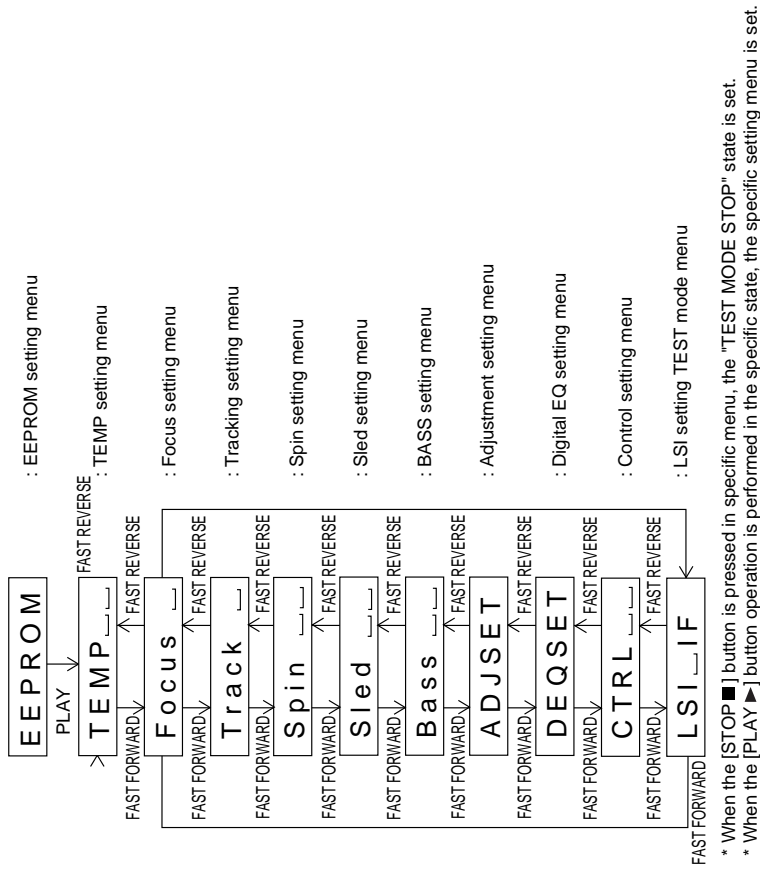


## BASS Setting

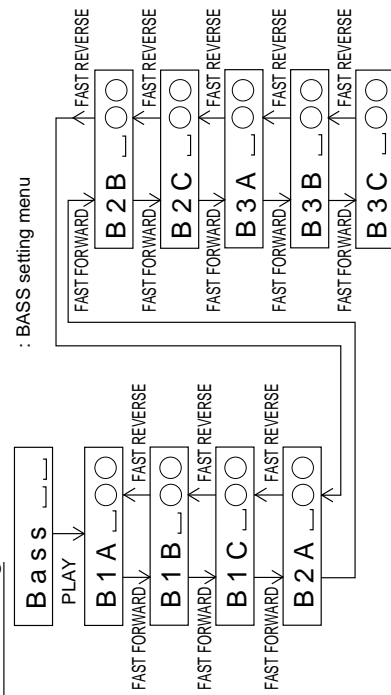


- \* When the [STOP] button is pressed in specific menu, the "TEST MODE STOP" state is set.
- \* When the [DISP] button operation is performed in the specific state, the menu changes to "TEMP SETTING menu".
- \* In the specific state the setting changes in the range of "00h to FFh" when the [VOL +/-] button is pressed.  
(The upper limit varies depending on the items)
- \* When the [MODE] button is pressed in each state, the set digit is changed.

## Focus Setting

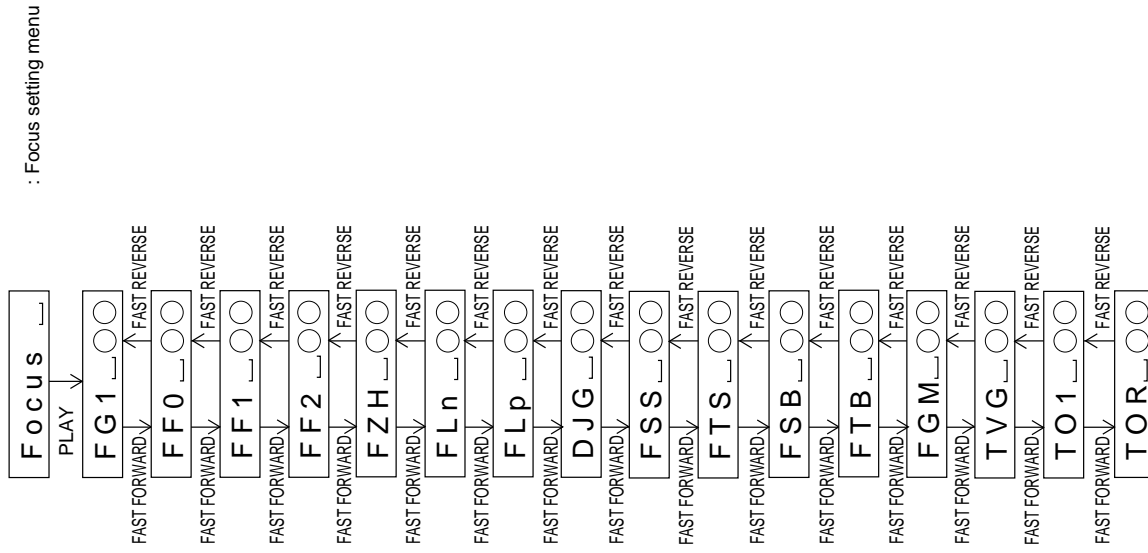


- \* When the [STOP] button is pressed in specific menu, the "TEST MODE STOP" state is set.
- \* When the [DISP] button operation is performed in the specific state, the menu changes to "TEMP SETTING menu".
- \* In specific state the setting changed in the range of "00h to FFh" when the [VOL +/-] button is pressed.  
(The upper limit varies depending on the items)
- \* When the [MODE] button is pressed in each state, the set digit is changed.


Spin Setting

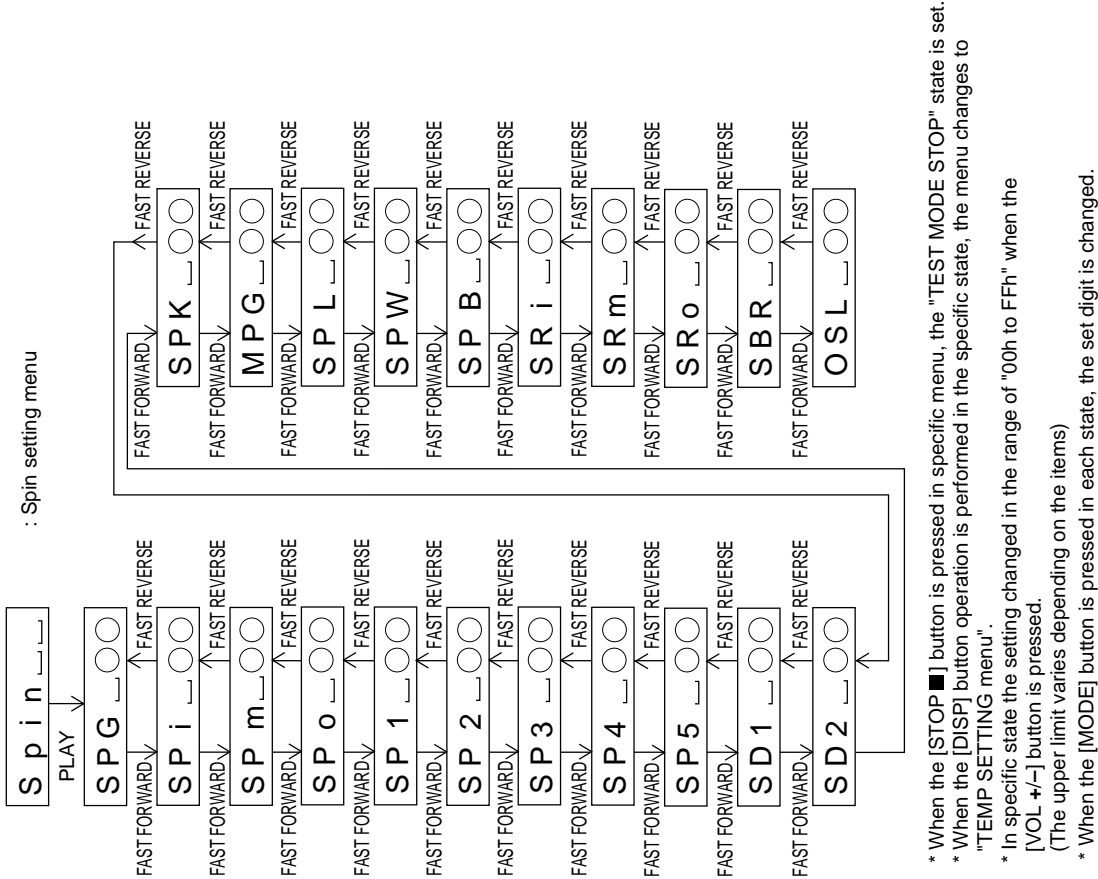

Tracking Setting

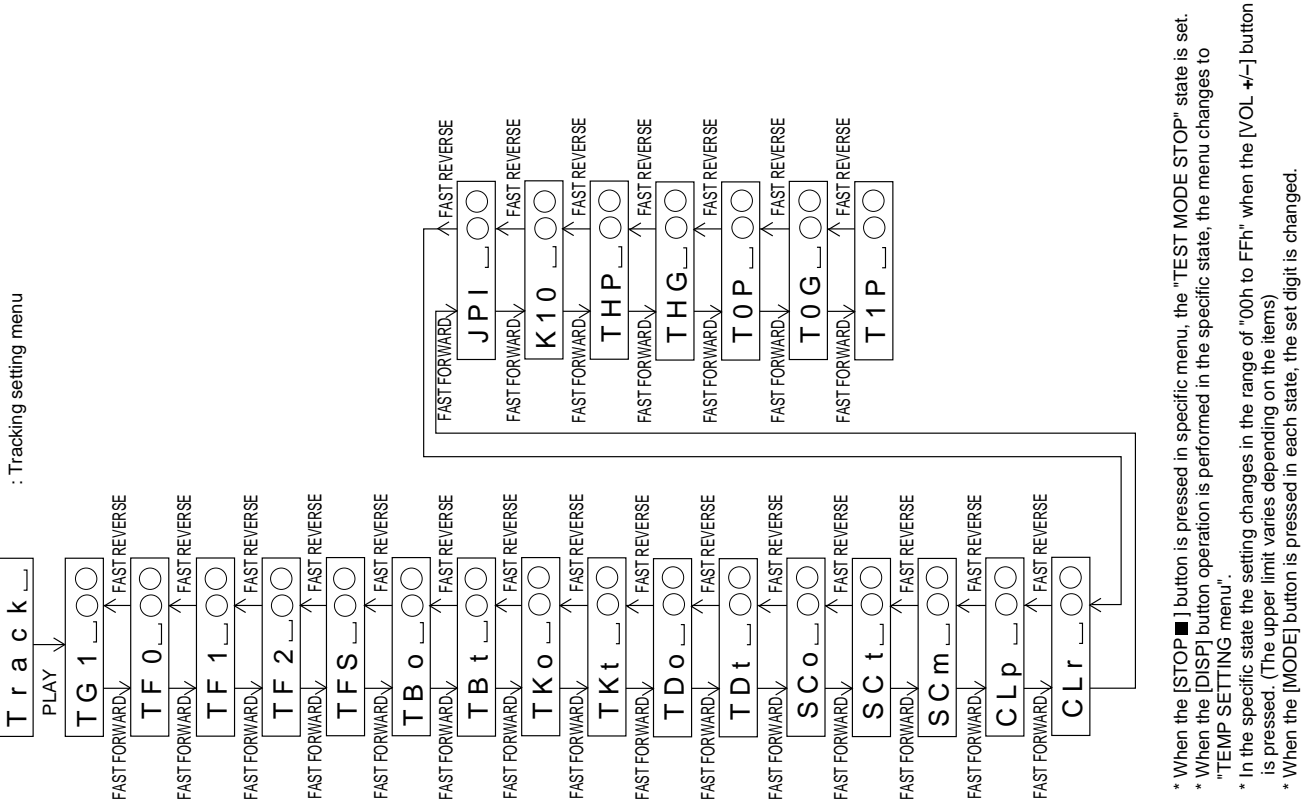


## Sled Setting

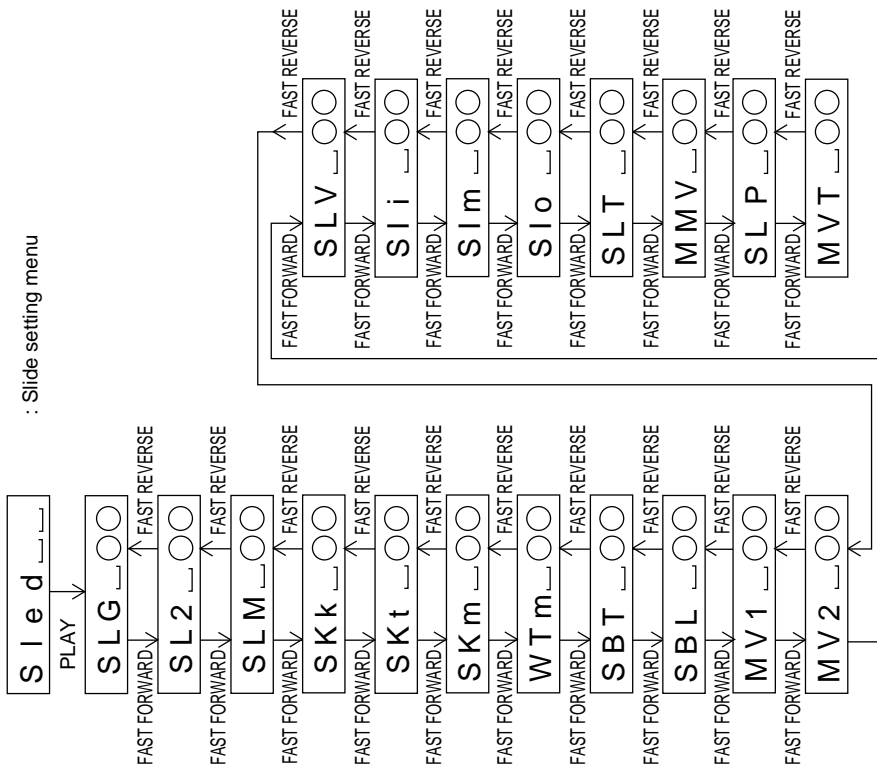


- \* When the [STOP ■] button is pressed in specific menu, the "TEST MODE STOP" state is set.
- \* When the [DISP] button operation is performed in the specific state, the menu changes to "TEMP SETTING menu".
- \* In the specific state the setting changes in the range of "00h to FFh" when the [VOL +/-] button is pressed.  
(The upper limit varies depending on the items)
- \* When the [MODE] button is pressed in each state, the set digit is changed.

## TEMP Setting

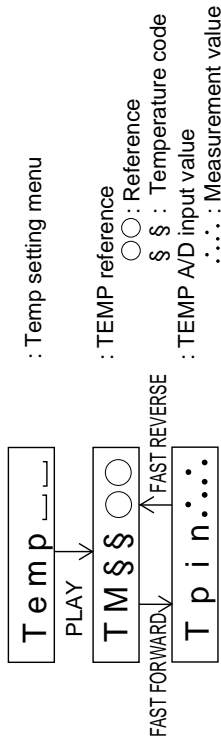


- \* When the [STOP ■] button is pressed in specific menu, the "TEST MODE STOP" state is set.
- \* When the [DISP] button operation is performed in the specific state, the menu changes to "TEMP SETTING menu".
- \* In the specific state the setting changes in the range of "00h to FFh" when the [VOL +/-] button is pressed.
- \* When the [MODE] button is pressed in each state, the set digit is changed.

## Adjustment Setting

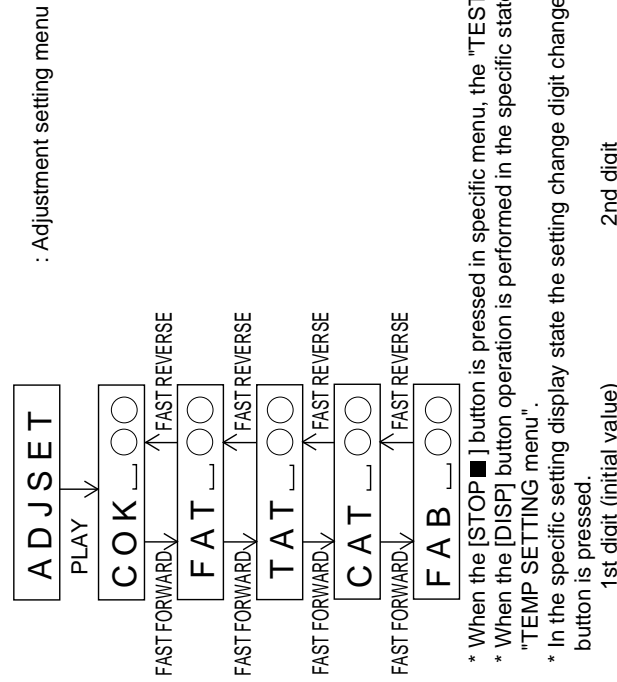


- \* When the [STOP ■] button is pressed in specific menu, the "TEST MODE STOP" state is set.
- \* When the [DISP] button operation is performed in the specific state, the menu changes to "TEMP SETTING menu".
- \* In the specific setting display state the setting change digit changes when the [MODE] button is pressed.



- \* In the specific state the setting changes in the range of "0h to Fh" when the [VOL +/-] button is pressed.
- \* When the [MODE] button is pressed in each state, the set digit is changed.


## Control Setting

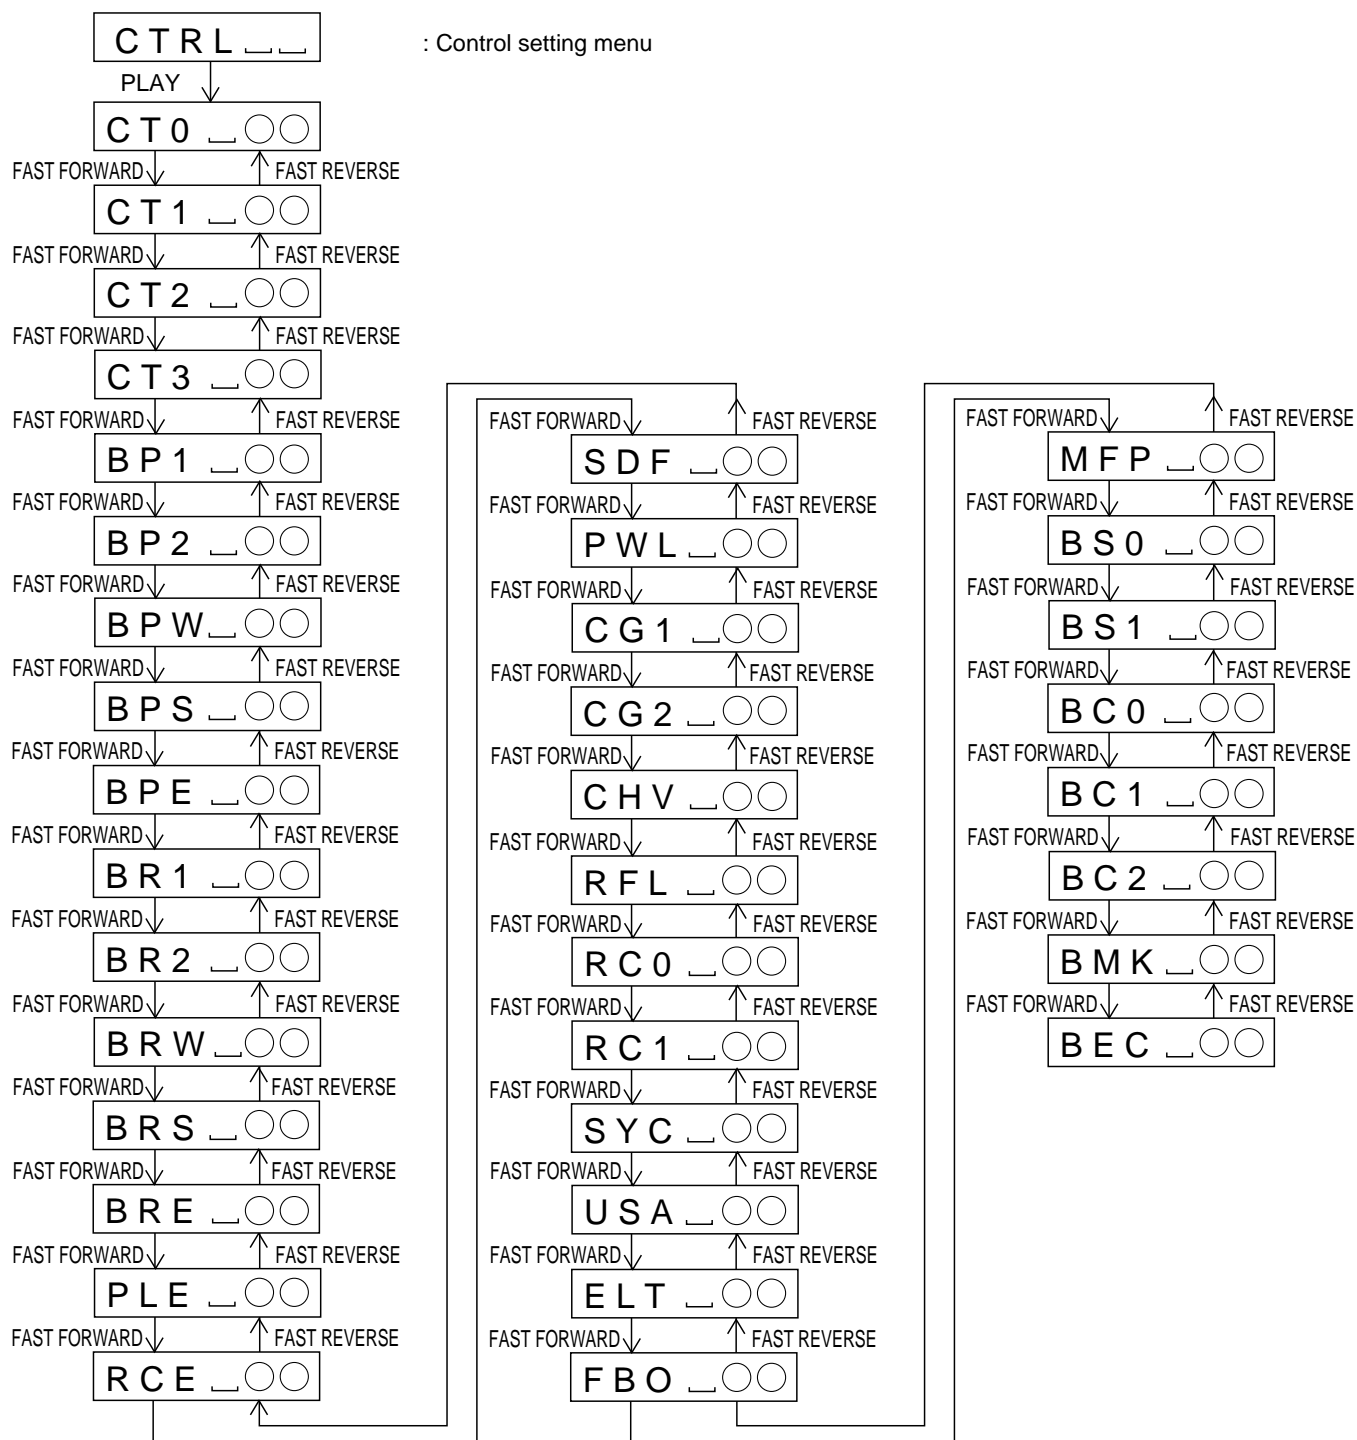

\* When the [STOP ■] button is pressed in specific menu, the "TEST MODE STOP" state is set.

\* When the [DISP] button operation is performed in the specific state, the menu changes to "TEMP SETTING menu".

\* In the specific setting display state the setting change digit changes when the [MODE] button is pressed.




\* In the specific state the setting changes in the range of "0h to Fh" when the [VOL +/-] button is pressed.

\* When the [MODE] button is pressed in each state, the set digit is changed.

## Digital EQ Setting

: Digital EQ setting menu

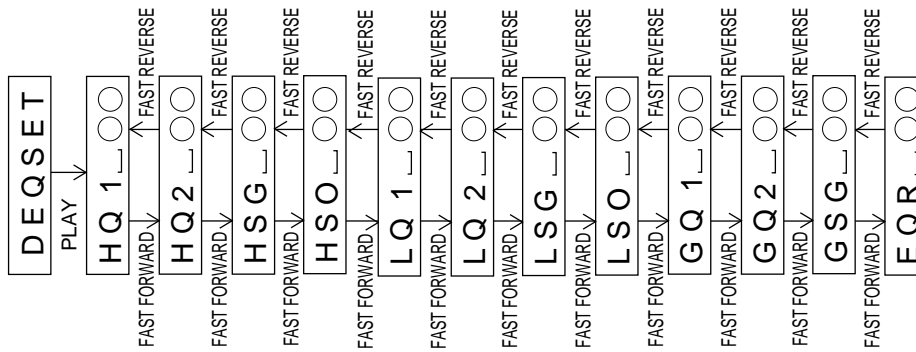

- \* When the [STOP] button is pressed in specific menu, the "TEST MODE STOP" state is set.
- \* When the [DISP] button operation is performed in the specific state, the menu changes to "TEMP SETTING menu".
- \* In the specific setting display state the setting change digit changes when the [MODE] button is pressed.  
 1st digit (initial value)      2nd digit  
 \* \* \* \* \*      \* \* \* \* \*  
 MODE      MODE
- \* In the specific state the setting changes in the range of "0h to Fh" when the [VOL +/-] button is pressed.
- \* When the [MODE] button is pressed in each state, the set digit is changed.

## MD ERROR MESSAGE DISPLAY CONTENT LIST

| Display content<br>(Remote control) | Error content   | Error code  | Remarks   |
|-------------------------------------|---|---|---|
| Can't READ*<br>(Can'tS)             | Readout of the information is not completed.                        | f: Focus error<br>r: READ ERR<br>s: Search time over<br>w: SD write time over<br>p: Time over at spindle start-up | * indicates the detailed factor.                  |
| Can't READ*<br>(Can'tT)             | Readout of the TOC information is not completed.                    |   |   |
| Can't READ*<br>(Can'tU)             | Readout of the U-TOC information is not completed.                  |   |   |
| Can't LOCK<br>(Can'tL)              | The EJECT lever cannot be locked.                                   |   |   |
| Er-MD41<br>(Er-MD41)                | Judged it abnormal by the U-TOC write test.                         |   |   |
| Er-MD80<br>(Er-MD80)                | EEPROM readout Check sum error                                      |   |   |
| TOC FORM**<br>(Tform*)              | Abnormal data DISC detection  | L*: UTOC SELECTOR is Loop<br>a_: Address abnormal<br>t_: FTNO > LTNO  | * indicates the detailed factor.                  |
| NAME FULL<br>(N-FULL)               | The number of characters for names exceeds the specification limit. |   |   |
| OPEN<br>(OPEN)                      | The disc compartment is open.                                       |   | Open lid is detected while the system is running. |



NOTES ON SCHEMATIC DIAGRAM

- Resistor:  
To differentiate the units of resistors, such symbol as K and M are used: the symbol K means 1000 ohm and the symbol M means 1000 kohm and the resistor without any symbol is ohm-type resistor. Besides, the one with "Fusible" is a fuse type.
- Capacitor:  
To indicate the unit of capacitor, a symbol P is used: this symbol P means micro-micro-farad and the unit of the capacitor without such a symbol is microfarad. As to electrolytic capacitor, the expression "capacitance/withstand voltage" is used.  
(CH), (TH), (RH), (UJ): Temperature compensation  
(ML): Mylar type

- The indicated voltage in each section is the one measured by Digital Multimeter between such a section and the chassis with no signal given.
- Parts marked with "⚠" (⏏ = = = ⏏) are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

| REF. NO | DESCRIPTION  | POSITION |
|---------|--------------|----------|
| SW401   | EJECT        | OFF—ON   |
| SW403   | LID OPEN     | OFF—ON   |
| SW601   | DISC PROTECT | OFF—ON   |

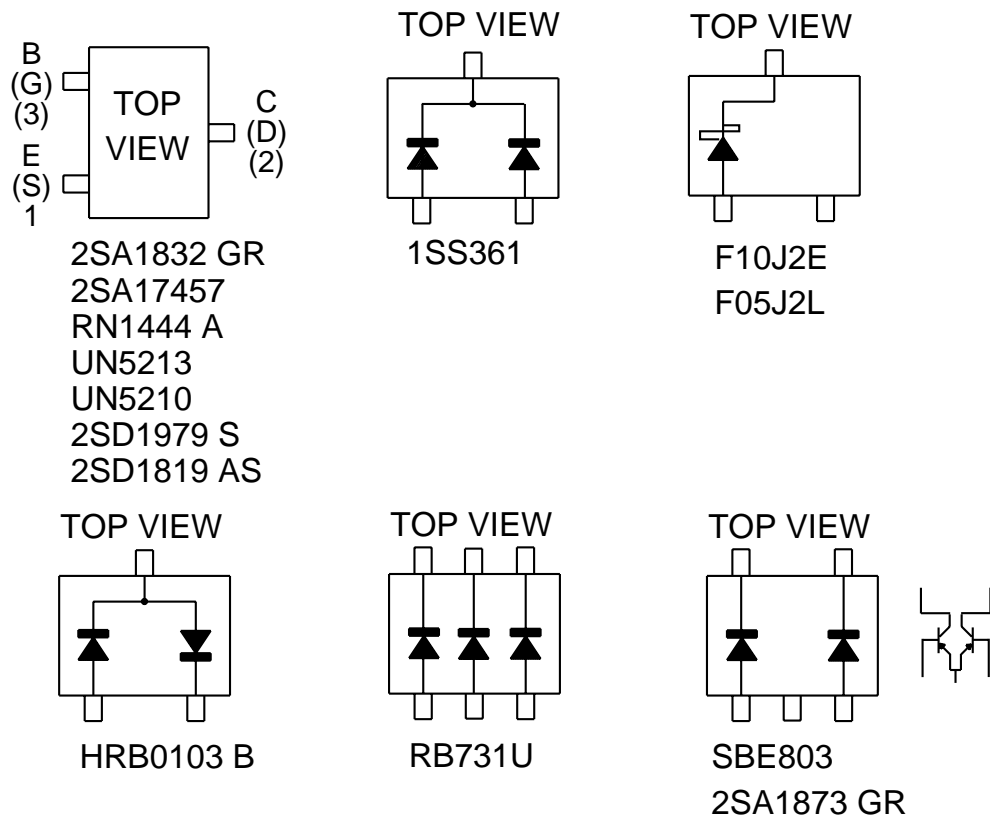
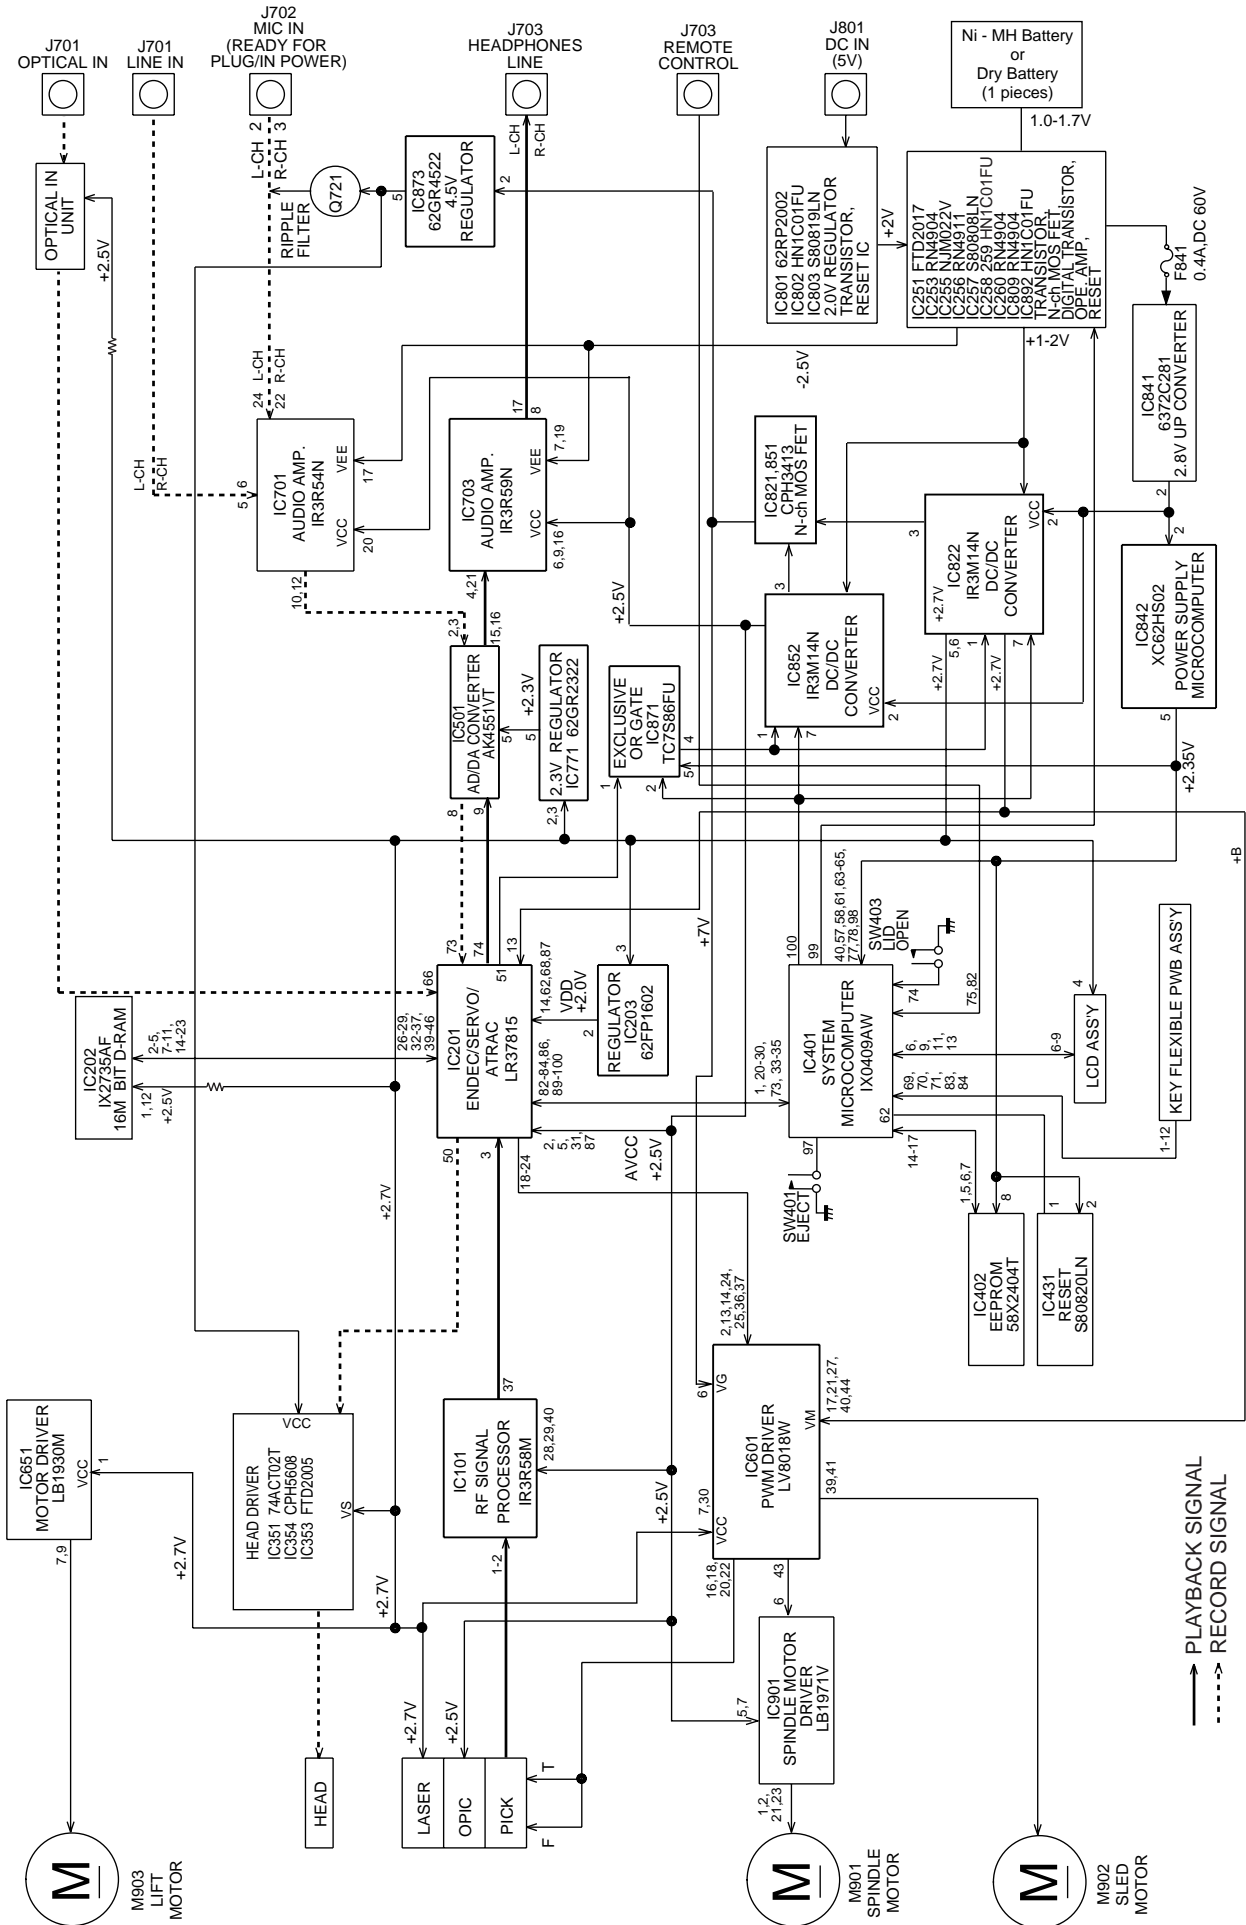


Figure 30 TYPES OF TRANSISTOR AND DIODE



**Figure 31 BLOCK DIAGRAM**


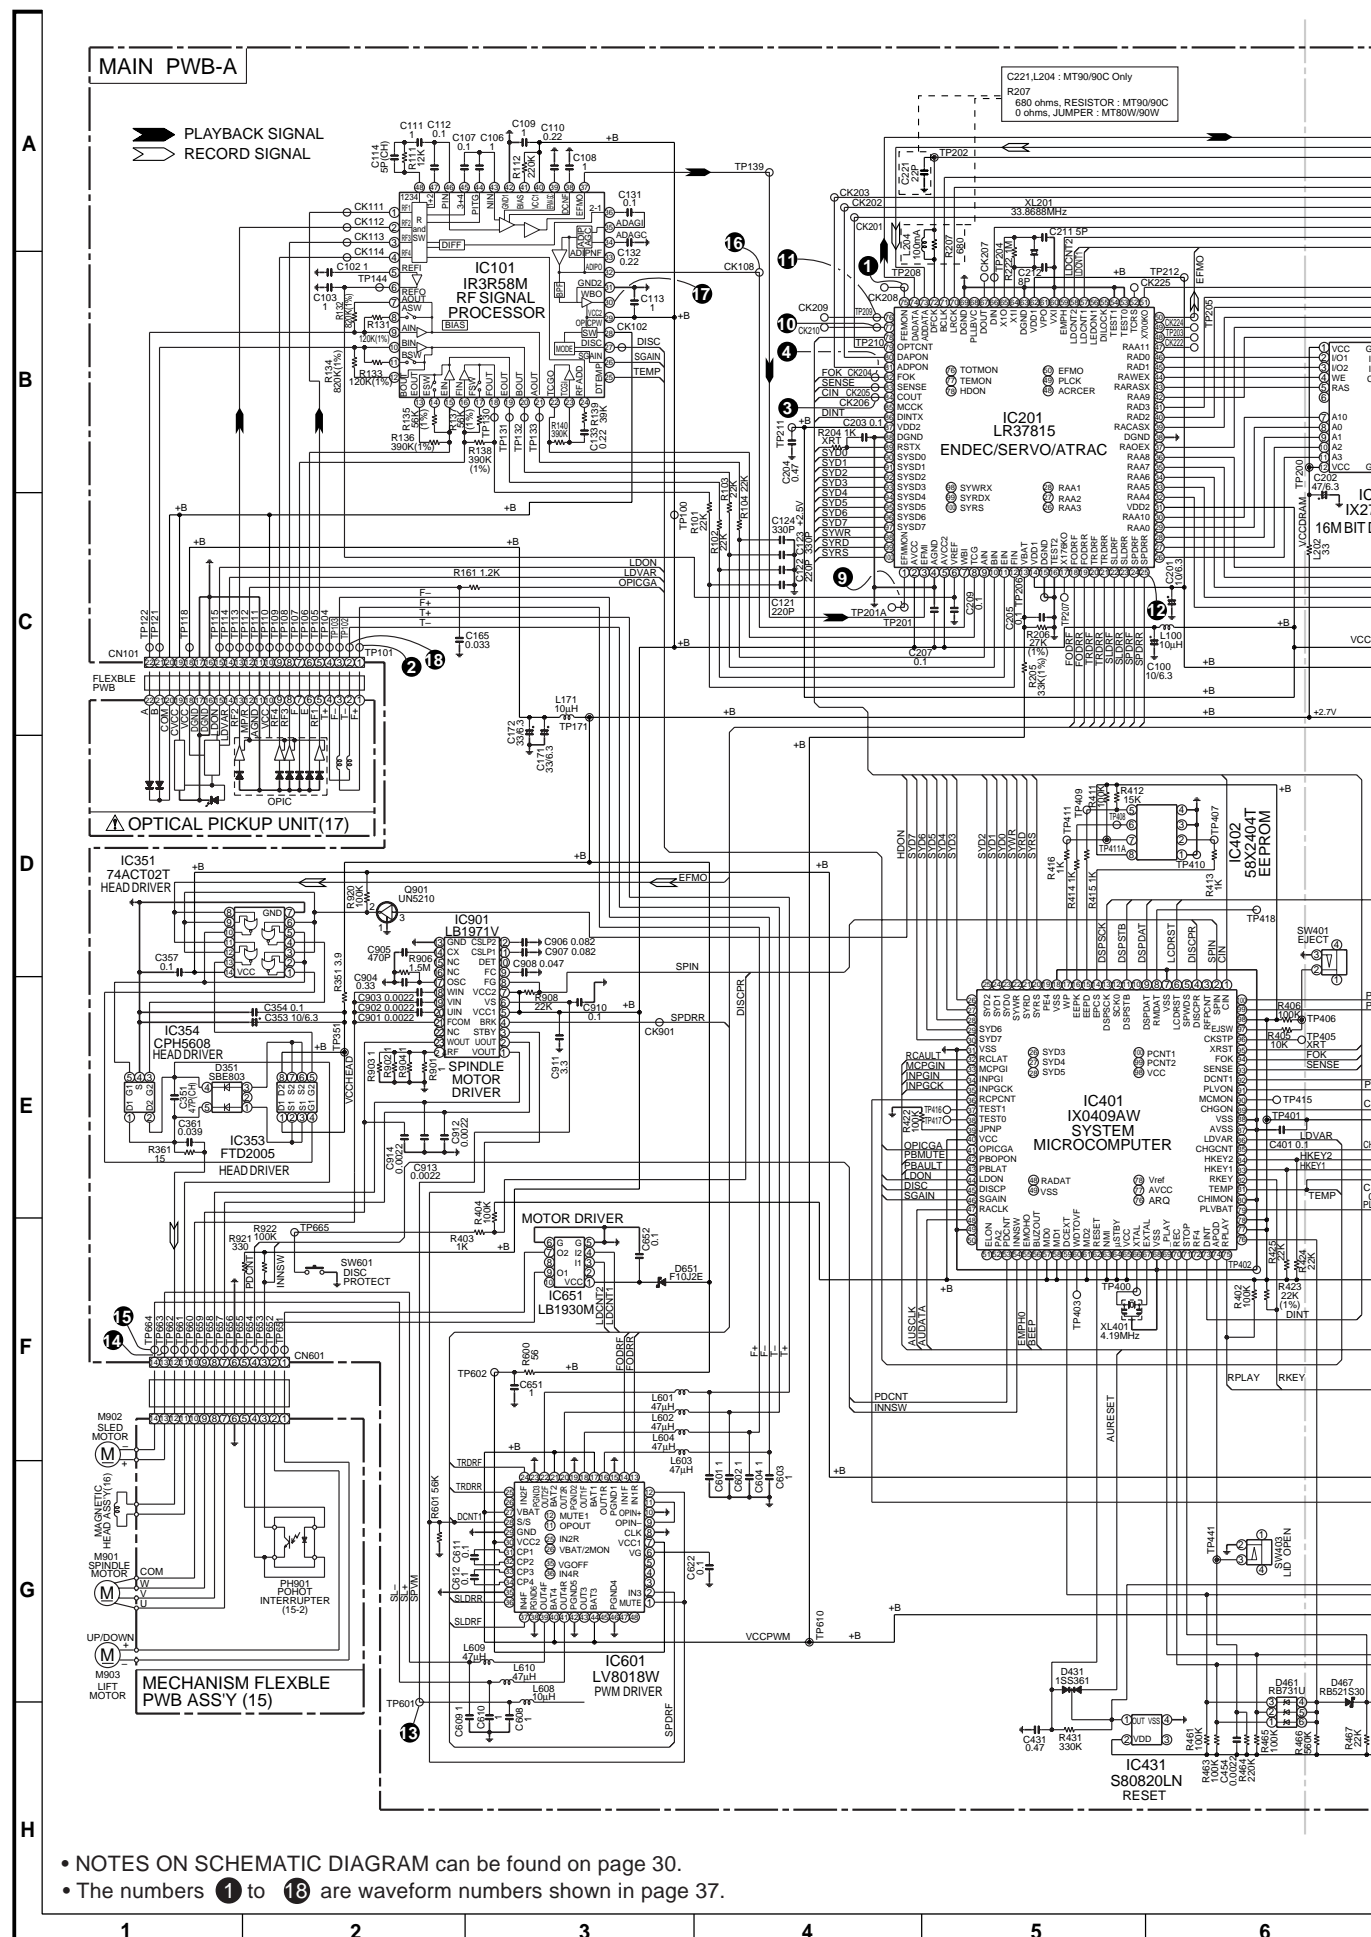


Figure 32 SCHEMATIC DIAGRAM (1/2)

- 33 -

- 34 -



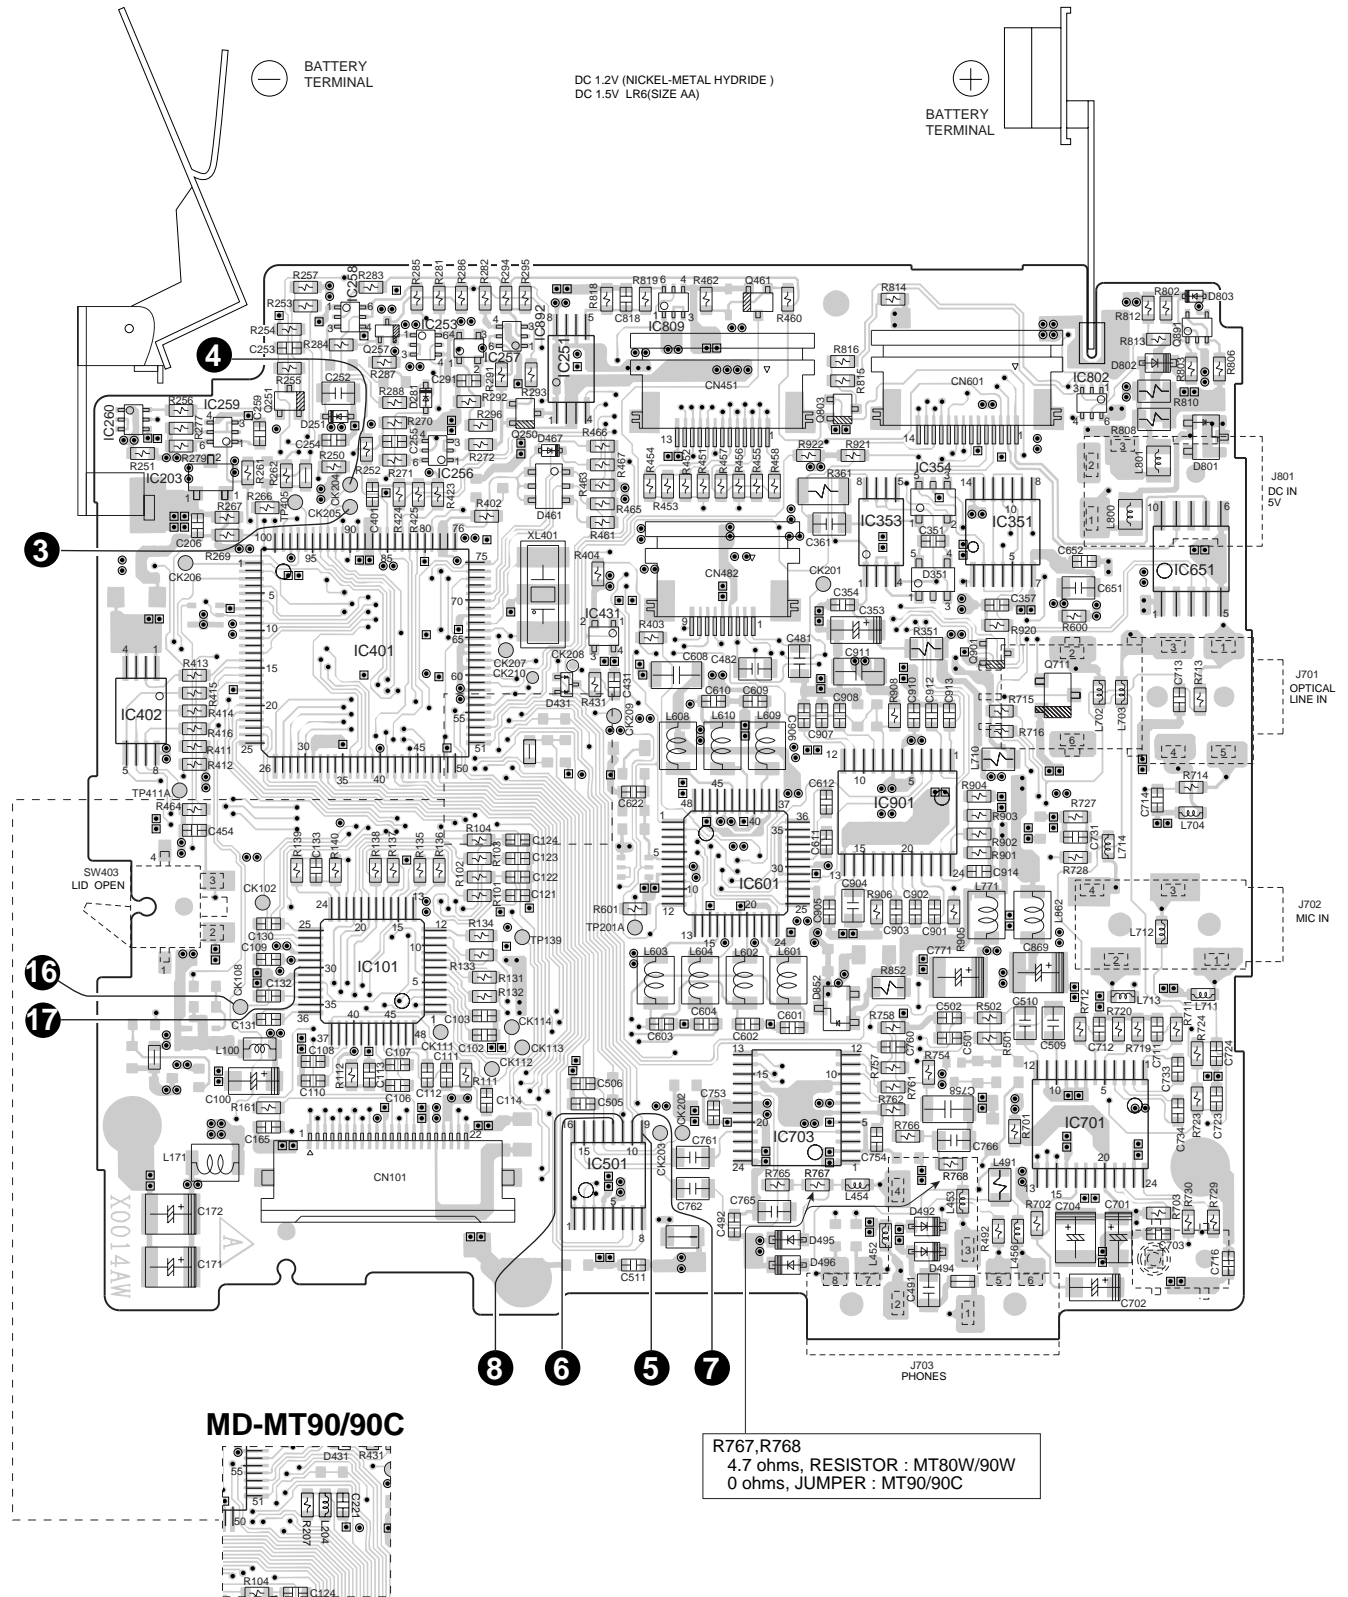

|   |   |   |    |    |    |
|---|---|---|----|----|----|
| 7 | 8 | 9 | 10 | 11 | 12 |
|---|---|---|----|----|----|

**Figure 35 WIRING SIDE OF P.W.BOARD (2/3)**












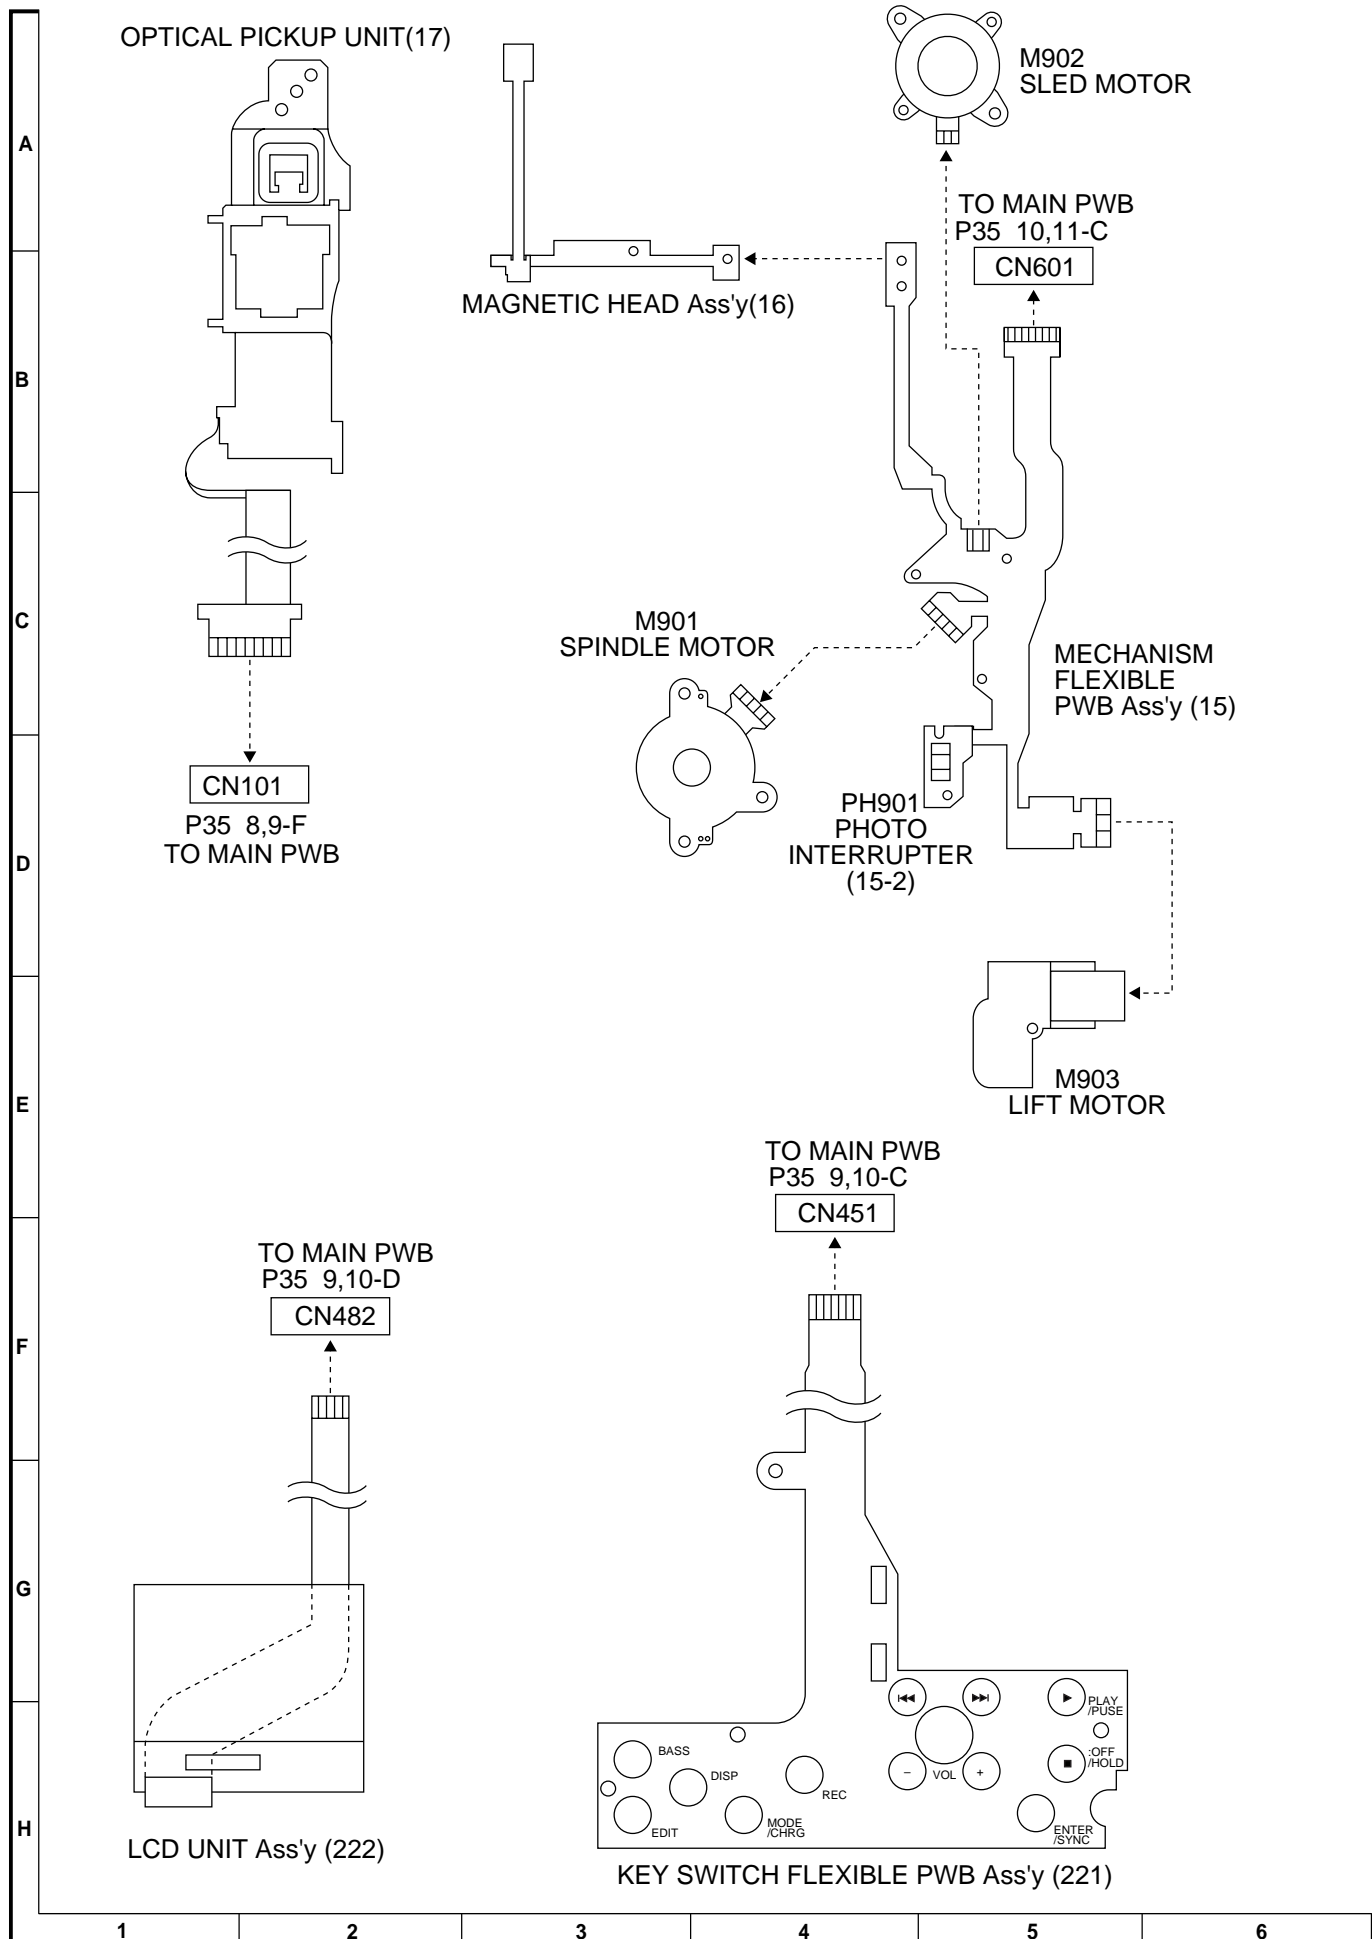


Figure 36 WIRING SIDE OF P.W.BOARD (3/3)

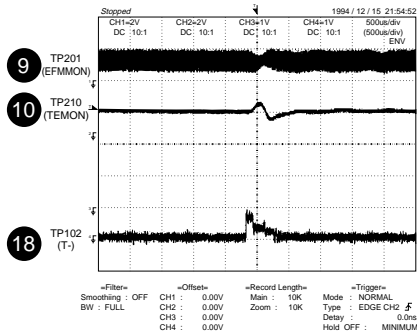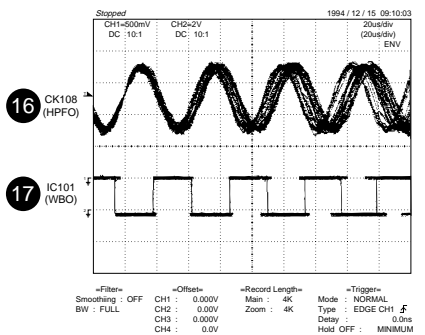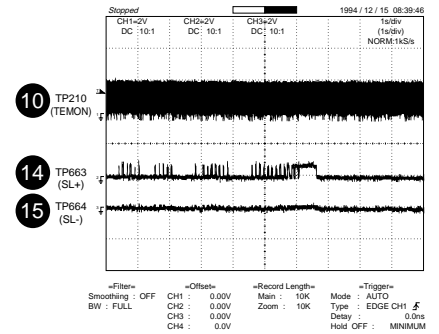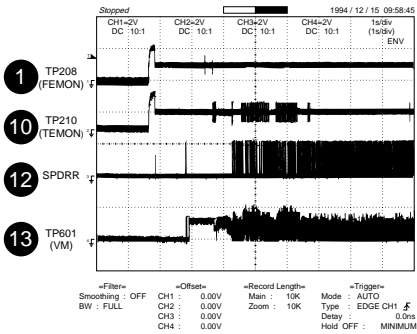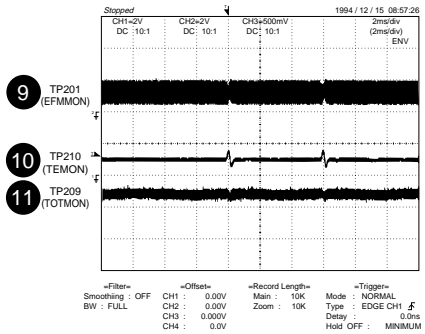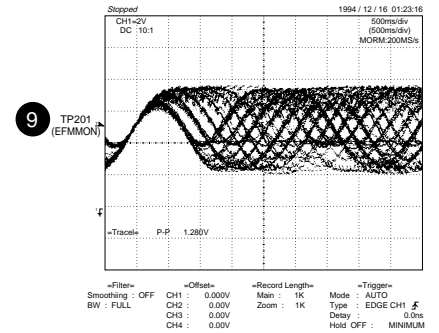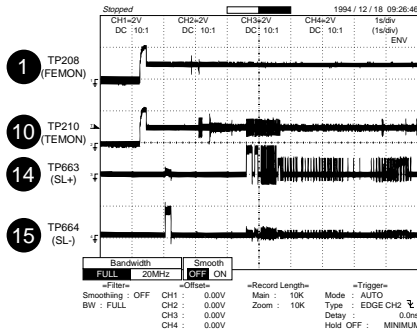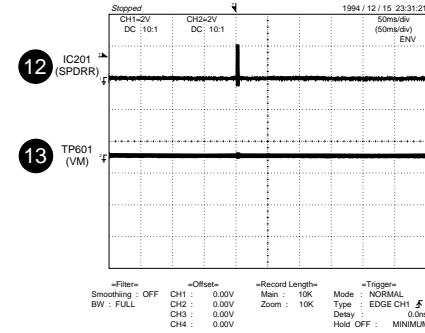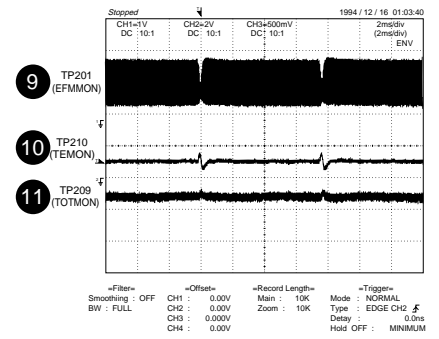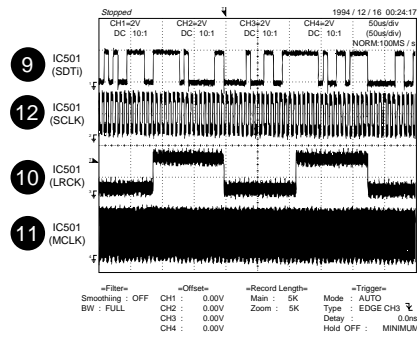


## WAVEFORMS OF MD CIRCUIT

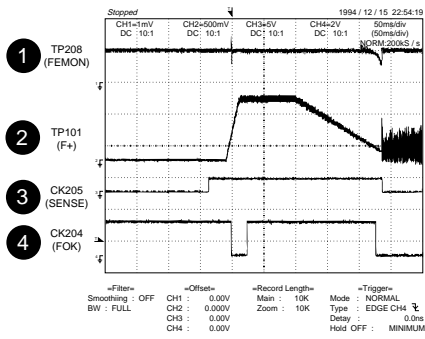

For TP208, TP209, and TP210, use the specific LPF, and observe the waveform.

When watching the EEM monitor (TP201)  
Set MSL from 00H to 80H with EEPROM control setting. After completion restore 00H.

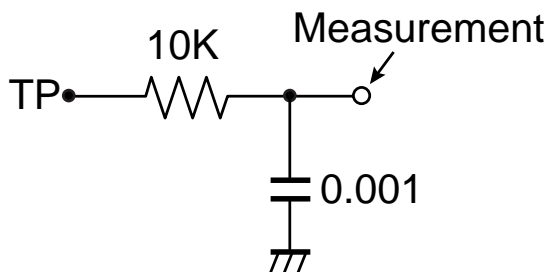

## VOLTAGE

| IC101   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 0V      |
| 2       | 0V      |
| 3       | 0V      |
| 4       | 0V      |
| 5       | 1.27V   |
| 6       | 1.27V   |
| 7       | 1.27V   |
| 8       | 1.27V   |
| 9       | 1.27V   |
| 10      | 1.27V   |
| 11      | 1.27V   |
| 12      | 1.27V   |
| 13      | 1.27V   |
| 14      | 1.27V   |
| 15      | 1.27V   |
| 16      | 1.27V   |
| 17      | 1.27V   |
| 18      | 1.27V   |
| 19      | 1.27V   |
| 20      | 1.27V   |
| 21      | 1.27V   |
| 22      | 1.27V   |
| 23      | 1.27V   |
| 24      | 0V      |
| 25      | 0V      |
| 26      | 0V      |
| 27      | 0V      |
| 28      | 2.52V   |
| 29      | 0V      |
| 30      | 2.3V    |
| 31      | 0V      |
| 32      | 1.27V   |
| 33      | 0V      |
| 34      | 0V      |
| 35      | 1.27V   |
| 36      | 1.27V   |
| 37      | 0V      |
| 38      | 1.29V   |
| 39      | 0V      |
| 40      | 2.52V   |
| 41      | 1.51V   |
| 42      | 0V      |
| 43      | 1.27V   |
| 44      | 0V      |
| 45      | 0V      |
| 46      | 1.27V   |
| 47      | 0V      |
| 48      | 0V      |

| IC202   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 2.3V    |
| 2       | 1.6V    |
| 3       | 1.2V    |
| 4       | 2.2V    |
| 5       | 1.6V    |
| 6       | 0V      |
| 7       | 0.9V    |
| 8       | 1.3V    |
| 9       | 0.5V    |
| 10      | 0.5V    |
| 11      | 0.5V    |
| 12      | 2.3V    |
| 13      | 0V      |
| 14      | 0.5V    |
| 15      | 0.8V    |
| 16      | 0.7V    |
| 17      | 0.8V    |
| 18      | 0.8V    |
| 19      | 0.9V    |
| 20      | 1.67V   |
| 21      | 0.8V    |
| 22      | 1.5V    |
| 23      | 1.5V    |
| 24      | 0V      |

| IC203   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 4.91V   |
| 2       | 4.58V   |
| 3       | 2.35V   |

| IC201   |         |         |         |
|---------|---------|---------|---------|
| PIN NO. | VOLTAGE | PIN NO. | VOLTAGE |
| 1       | 0V      | 51      | 1.26V   |
| 2       | 0V      | 52      | 0V      |
| 3       | 1.29V   | 53      | 0V      |
| 4       | 0V      | 54      | 0V      |
| 5       | 2V      | 55      | 2.53V   |
| 6       | 0V      | 56      | 0V      |
| 7       | 0V      | 57      | 0V      |
| 8       | 1.6V    | 58      | 0V      |
| 9       | 0V      | 59      | 0V      |
| 10      | 1.27V   | 60      | 0V      |
| 11      | 1.27V   | 61      | 0.94V   |
| 12      | 1.27V   | 62      | 1.51V   |
| 13      | 1.24V   | 63      | 0V      |
| 14      | 0V      | 64      | 0V      |
| 15      | 0V      | 65      | 0.68V   |
| 16      | 0V      | 66      | 2.73V   |
| 17      | 0V      | 67      | 1.27V   |
| 18      | 0V      | 68      | 0.67V   |
| 19      | 0V      | 69      | 0V      |
| 20      | 0V      | 70      | 1.27V   |
| 21      | 0V      | 71      | 0V      |
| 22      | 0V      | 72      | 2.53V   |
| 23      | 0V      | 73      | 0V      |
| 24      | 0V      | 74      | 0V      |
| 25      | 0V      | 75      | 1.25V   |
| 26      | -       | 76      | 1.25V   |
| 27      | -       | 77      | 1.25V   |
| 28      | -       | 78      | 0V      |
| 29      | -       | 79      | 0V      |
| 30      | -       | 80      | 0V      |
| 31      | 2.53V   | 81      | 0V      |
| 32      | -       | 82      | 2.53V   |
| 33      | -       | 83      | 0V      |
| 34      | -       | 84      | 2.53V   |
| 35      | -       | 85      | 1.27V   |
| 36      | -       | 86      | 0V      |
| 37      | 1.81V   | 87      | 2.53V   |
| 38      | 0V      | 88      | 0V      |
| 39      | -       | 89      | 0V      |
| 40      | -       | 90      | 0.68V   |
| 41      | -       | 91      | 0.27V   |
| 42      | -       | 92      | 0.63V   |
| 43      | -       | 93      | 0.22V   |
| 44      | -       | 94      | 0.39V   |
| 45      | -       | 95      | 0.68V   |
| 46      | -       | 96      | 0.75V   |
| 47      | -       | 97      | 2.25V   |
| 48      | 2.42V   | 98      | 2.36V   |
| 49      | 1.92V   | 99      | 0.24V   |
| 50      | 1.15V   | 100     | 0.24V   |

| IC251   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 2.08V   |
| 2       | 0V      |
| 3       | 0V      |
| 4       | 0V      |
| 5       | 0V      |
| 6       | 2.08V   |
| 7       | 2.08V   |
| 8       | 2.08V   |

| IC253   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 5.36V   |
| 2       | 5.31V   |
| 3       | 5.31V   |
| 4       | 0V      |
| 5       | 0V      |
| 6       | 0V      |

| IC255   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | -1.11V  |
| 2       | 0V      |
| 3       | 0V      |
| 4       | -2.19V  |
| 5       | 0V      |
| 6       | 0V      |
| 7       | -1.59V  |
| 8       | 0V      |

| IC256   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 0V      |
| 2       | 0.44V   |
| 3       | 0.44V   |
| 4       | 0V      |
| 5       | 0V      |
| 6       | 0V      |

| IC257   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 0V      |
| 2       | 0V      |
| 3       | 0V      |
| 4       | 0V      |

| IC258   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 0V      |
| 2       | 0.59V   |
| 3       | 4.89V   |
| 4       | 0V      |
| 5       | 0V      |
| 6       | 0V      |

| IC259   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 0V      |
| 2       | 0.55V   |
| 3       | 0.55V   |
| 4       | 0V      |
| 5       | 0.55V   |
| 6       | 0V      |

| IC260   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 2.73V   |
| 2       | 2.71V   |
| 3       | 2.71V   |
| 4       | 0V      |
| 5       | 0V      |
| 6       | 1.37V   |

| IC401   |         |         |         |
|---------|---------|---------|---------|
| PIN NO. | VOLTAGE | PIN NO. | VOLTAGE |
| 1       | 0V      | 51      | 0.85V   |
| 2       | 0V      | 52      | 0V      |
| 3       | 0V      | 53      | 0V      |
| 4       | 2.34V   | 54      | 2.5V    |
| 5       | 0.25V   | 55      | 0V      |
| 6       | 2.36V   | 56      | 0V      |
| 7       | 0V      | 57      | 2.36V   |
| 8       | 0.25V   | 58      | 2.36V   |
| 9       | 0V      | 59      | 0V      |
| 10      | 0V      | 60      | 2.36V   |
| 11      | 2.12V   | 61      | 2.35V   |
| 12      | 2.02V   | 62      | 2.27V   |
| 13      | 2.24V   | 63      | 2.35V   |
| 14      | 2.36V   | 64      | 2.35V   |
| 15      | 2.36V   | 65      | 2.35V   |
| 16      | 0.44V   | 66      | 1.02V   |
| 17      | 2.36V   | 67      | 1.13V   |
| 18      | 0V      | 68      | 0V      |
| 19      | 0V      | 69      | 2.33V   |
| 20      | 0.24V   | 70      | 2.33V   |
| 21      | 2.26V   | 71      | 2.30V   |
| 22      | 2.26V   | 72      | 0V      |
| 23      | 0.12V   | 73      | 2.53V   |
| 24      | 0.27V   | 74      | 2.31V   |
| 25      | 0.56V   | 75      | 2.34V   |
| 26      | 0.12V   | 76      | 0.15V   |
| 27      | 0.26V   | 77      | 2.35V   |
| 28      | 0.55V   | 78      | 2.35V   |
| 29      | 0.6V    | 79      | 0V      |
| 30      | 0.27V   | 80      | 0.88V   |
| 31      | 0V      | 81      | 1.48V   |
| 32      | 0V      | 82      | 2.14V   |
| 33      | 0V      | 83      | 2.35V   |
| 34      | 2.15V   | 84      | 2.35V   |
| 35      | 2.72V   | 85      | 0V      |
| 36      | 2.36V   | 86      | 0V      |
| 37      | 2.36V   | 87      | 0V      |
| 38      | 2.36V   | 88      | 0V      |
| 39      | 2.36V   | 89      | 0V      |
| 40      | 2.36V   | 90      | 0V      |
| 41      | 0V      | 91      | 0V      |
| 42      | 2.36V   | 92      | 2.35V   |
| 43      | 2.36V   | 93      | 0V      |
| 44      | 0V      | 94      | 0V      |
| 45      | 0V      | 95      | 2.35V   |
| 46      | 0V      | 96      | -       |
| 47      | 0V      | 97      | 2.35V   |
| 48      | 0V      | 98      | 2.35V   |
| 49      | 0V      | 99      | 2.35V   |
| 50      | 0V      | 100     | 2.35V   |

| IC351   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 0V      |
| 2       | 0V      |
| 3       | 4.42V   |
| 4       | 0V      |
| 5       | 0V      |
| 6       | 4.42V   |
| 7       | 0V      |
| 8       | 1.15V   |
| 9       | 4.22V   |
| 10      | 0V      |
| 11      | 1.15V   |
| 12      | 4.43V   |
| 13      | 0V      |
| 14      | 4.47V   |

| IC353   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 2.74V   |
| 2       | 0.44V   |
| 3       | 0.36V   |
| 4       | 0V      |
| 5       | 0V      |
| 6       | 0.42V   |
| 7       | 0.38V   |
| 8       | 2.74V   |

| IC354   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 0V      |
| 2       | 0V      |
| 3       | 0V      |
| 4       | 0.46V   |
| 5       | 0.36V   |

| IC402   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 0V      |
| 2       | 2.36V   |
| 3       | 0V      |
| 4       | 0V      |
| 5       | 2.36V   |
| 6       | 0V      |
| 7       | 2.36V   |
| 8       | 2.36V   |

| IC431   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 2.35V   |
| 2       | 2.36V   |
| 3       | 0V      |
| 4       | 0V      |

| IC501   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 0V      |
| 2       | -       |
| 3       | -       |
| 4       | 0V      |
| 5       | 2.29V   |
| 6       | 0V      |
| 7       | 0V      |
| 8       | 0V      |
| 9       | 0V      |
| 10      | 1.26V   |
| 11      | 0V      |
| 12      | 1.26V   |
| 13      | 0V      |
| 14      | 0V      |
| 15      | -       |
| 16      | -       |

| IC601   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 2.34V   |
| 2       | 0V      |
| 3       | 0V      |
| 4       | 0V      |
| 5       | 0V      |
| 6       | 7.85V   |
| 7       | 2.67V   |
| 8       | 0V      |
| 9       | 0V      |
| 10      | 0V      |
| 11      | 0V      |
| 12      | 0V      |
| 13      | 0V      |
| 14      | 0V      |
| 15      | 0V      |
| 16      | 0V      |
| 17      | 2.79V   |
| 18      | 0V      |
| 19      | 0V      |
| 20      | 0V      |
| 21      | 2.79V   |
| 22      | 0V      |
| 23      | 0V      |
| 24      | 0V      |
| 25      | 0V      |
| 26      | 0V      |
| 27      | 2.7V    |
| 28      | 2.34V   |
| 29      | 0V      |
| 30      | 2.67V   |
| 31      | 1.32V   |
| 32      | 3.94V   |
| 33      | 1.32V   |
| 34      | 6.55V   |
| 35      | 0V      |
| 36      | 0V      |
| 37      | 0V      |
| 38      | 0V      |
| 39      | 0V      |
| 40      | 2.79V   |
| 41      | 0V      |
| 42      | 0V      |
| 43      | 0V      |
| 44      | 0V      |
| 45      | 0V      |
| 46      | 0V      |
| 47      | 0V      |
| 48      | 0V      |

| IC651   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 2.74V   |
| 2       | 0V      |
| 3       | 0V      |
| 4       | 0V      |
| 5       | 0V      |
| 6       | 0V      |
| 7       | 0V      |
| 8       | 0V      |

| IC701   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 0V      |
| 2       | 0V      |
| 3       | -       |
| 4       | 0V      |
| 5       | 0V      |
| 6       | 0V      |
| 7       | 0V      |
| 8       | 0V      |
| 9       | 0V      |
| 10      | 0V      |
| 11      | 0V      |
| 12      | 0V      |
| 13      | 0V      |
| 14      | 0V      |
| 15      | 0V      |
| 16      | 0V      |
| 17      | 0V      |
| 18      | 0V      |
| 19      | 0V      |
| 20      | 0V      |
| 21      | 0.88V   |
| 22      | 0V      |
| 23      | 0V      |
| 24      | 0V      |

| IC703   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 0V      |
| 2       | 0V      |
| 3       | 0V      |
| 4       | 0V      |
| 5       | 0V      |
| 6       | 2.53V   |
| 7       | -2.3V   |
| 8       | 0V      |
| 9       | 2.53V   |
| 10      | 0V      |
| 11      | 1.27V   |
| 12      | 0V      |
| 13      | 2.36V   |
| 14      | 0V      |
| 15      | 0V      |
| 16      | 2.53V   |
| 17      | 0V      |
| 18      | -2.3V   |
| 19      | -2.3V   |
| 20      | 0V      |
| 21      | 0V      |
| 22      | 0V      |
| 23      | 0V      |
| 24      | 0V      |

| IC771   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 0V      |
| 2       | 2.74V   |
| 3       | 2.74V   |
| 4       | 0V      |
| 5       | 2.29V   |

| IC801   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 0V      |
| 2       | 4.58V   |
| 3       | 2.0V    |

| IC802   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 0.46V   |
| 2       | 1.05V   |
| 3       | 3.53V   |
| 4       | 0.46V   |
| 5       | 1V      |
| 6       | 4.52V   |

| IC803   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 4.53V   |
| 2       | 4.58V   |
| 3       | 0V      |
| 4       | 0V      |

| IC809   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| 1       | 5.35V   |
| 2       | 0V      |
| 3       | 0V      |
| 4       | 0V      |
| 5       | 2.35V   |
| 6       | 5.35V   |

| IC821   |         |
|---------|---------|
| PIN NO. | VOLTAGE |
| S       | 0V      |
| G       | 0.33V   |
| D       | 2.1V    |

## TROUBLESHOOTING

It is advisable to use the **TEST mode** (refer to Error Data Display Mode, P18) indicating the causes of troubles before starting repair. Causes of operation errors (up to 16 errors) are recorded as error codes. This information is useful for repair.

### When MD playback does not function

When the objective lens of the optical pickup is dirty, this section may not operate. Clean the objective lens, and check the playback operation. When this section does not operate even after the above step is taken, check the following items.


Remove the cabinet and follow the troubleshooting instructions.

"Track skipping and/or no TOC (Table Of Contents) may be caused by build up of dust other foreign matter on the laser pickup lens. Before attempting any adjustment make certain that the lens is clean. If not, clean it as mentioned below."

Turn the power off.


Gently clean the lens with a lens cleaning tissue and a small amount of lens cleaner on the market.

Do not touch the lens with the bare hand.

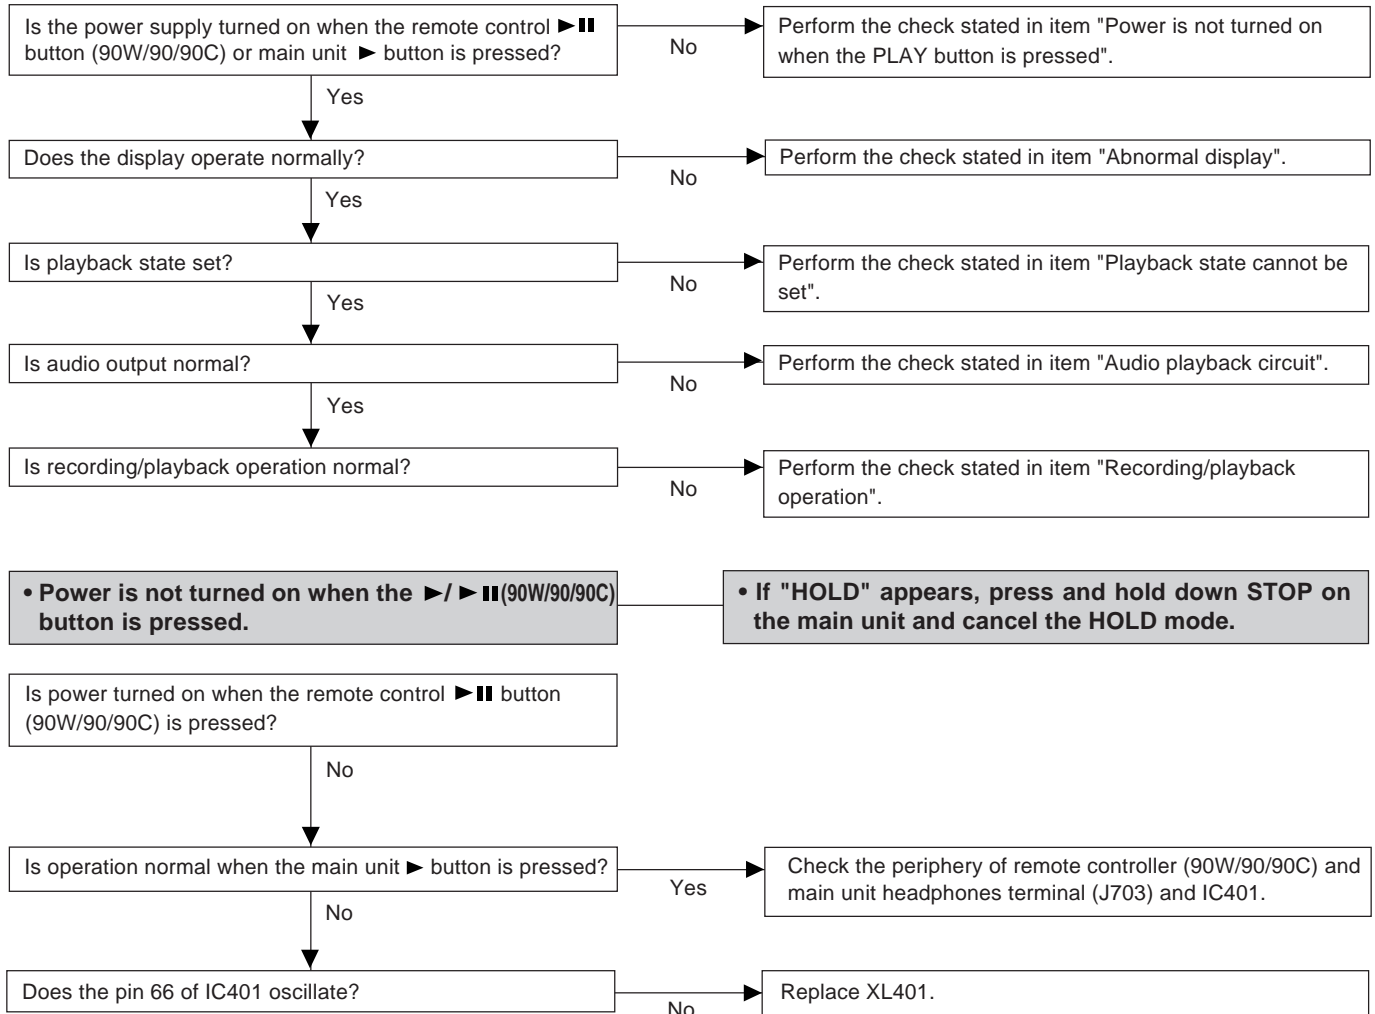


## MD-MT80W/90W/90/90C

### • Abnormal display

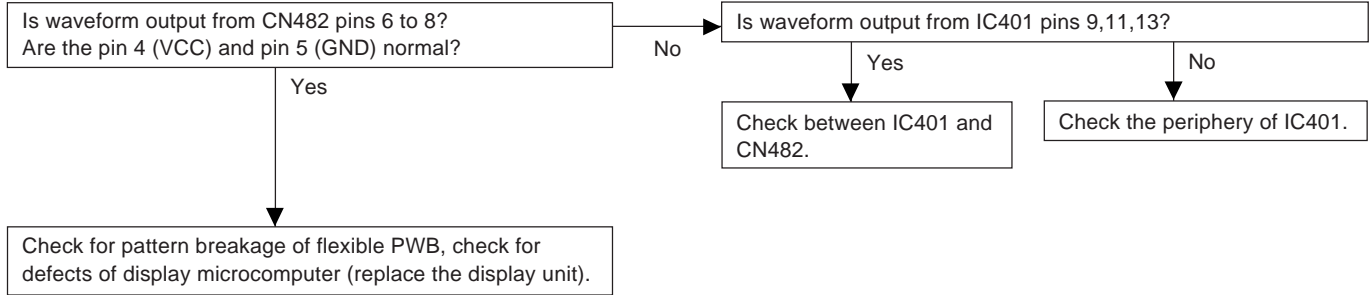


### • Playback state cannot be set

When it has been ascertained that the address up to cluster address is normal in the TEST mode.

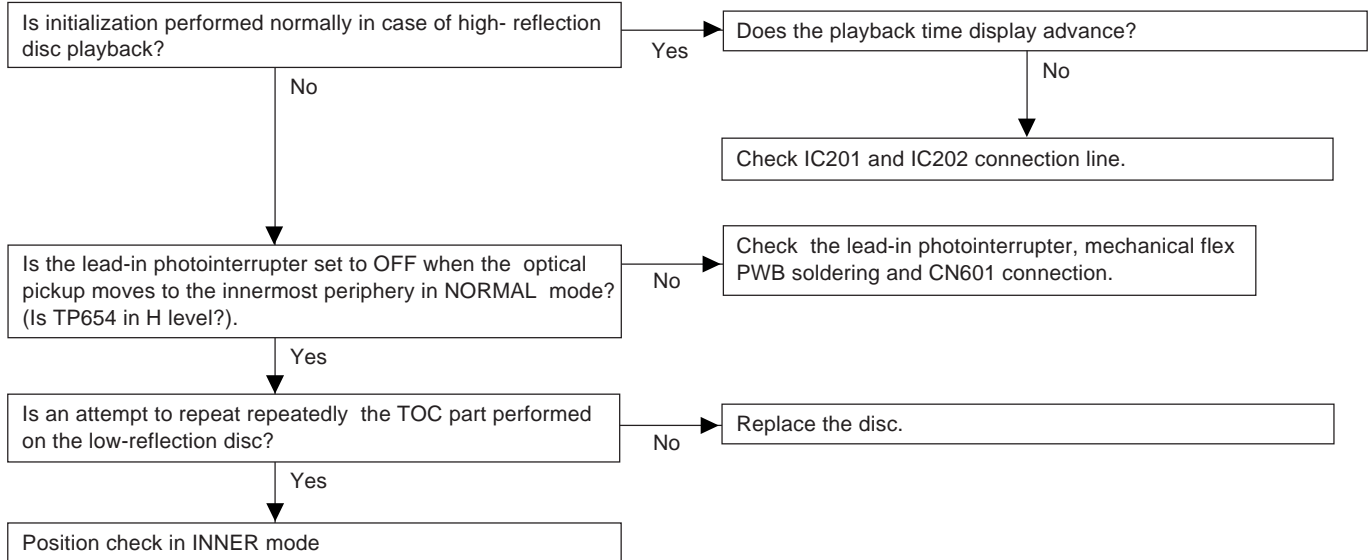


### • Audio playback circuit

Although the playback time display is acting., no sound is given during playback in the normal mode.

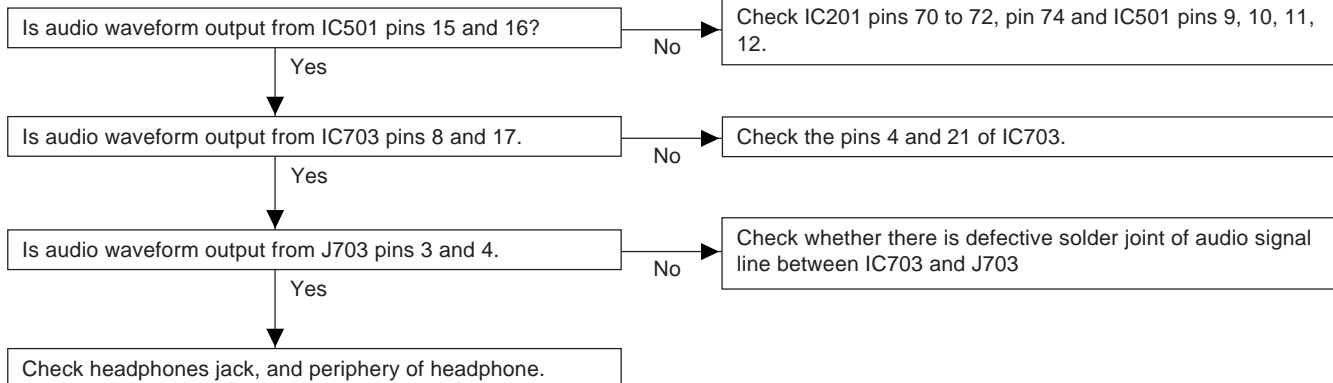


### • The spindle motor fails to run. Does the head move

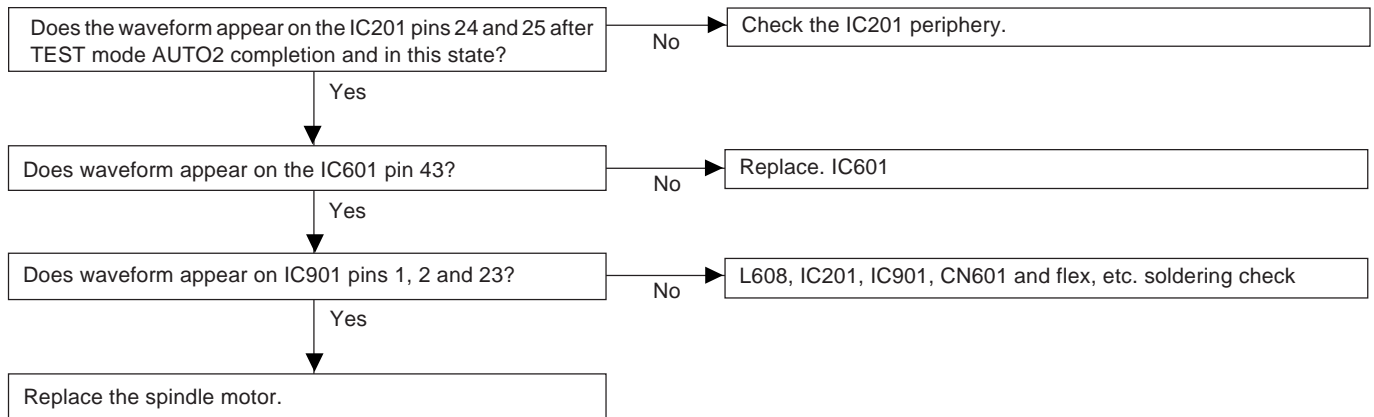

### • Recording/playback operation

Insert a low reflection disc, and ascertain audio output by normal playback, and then set TEST REC mode.

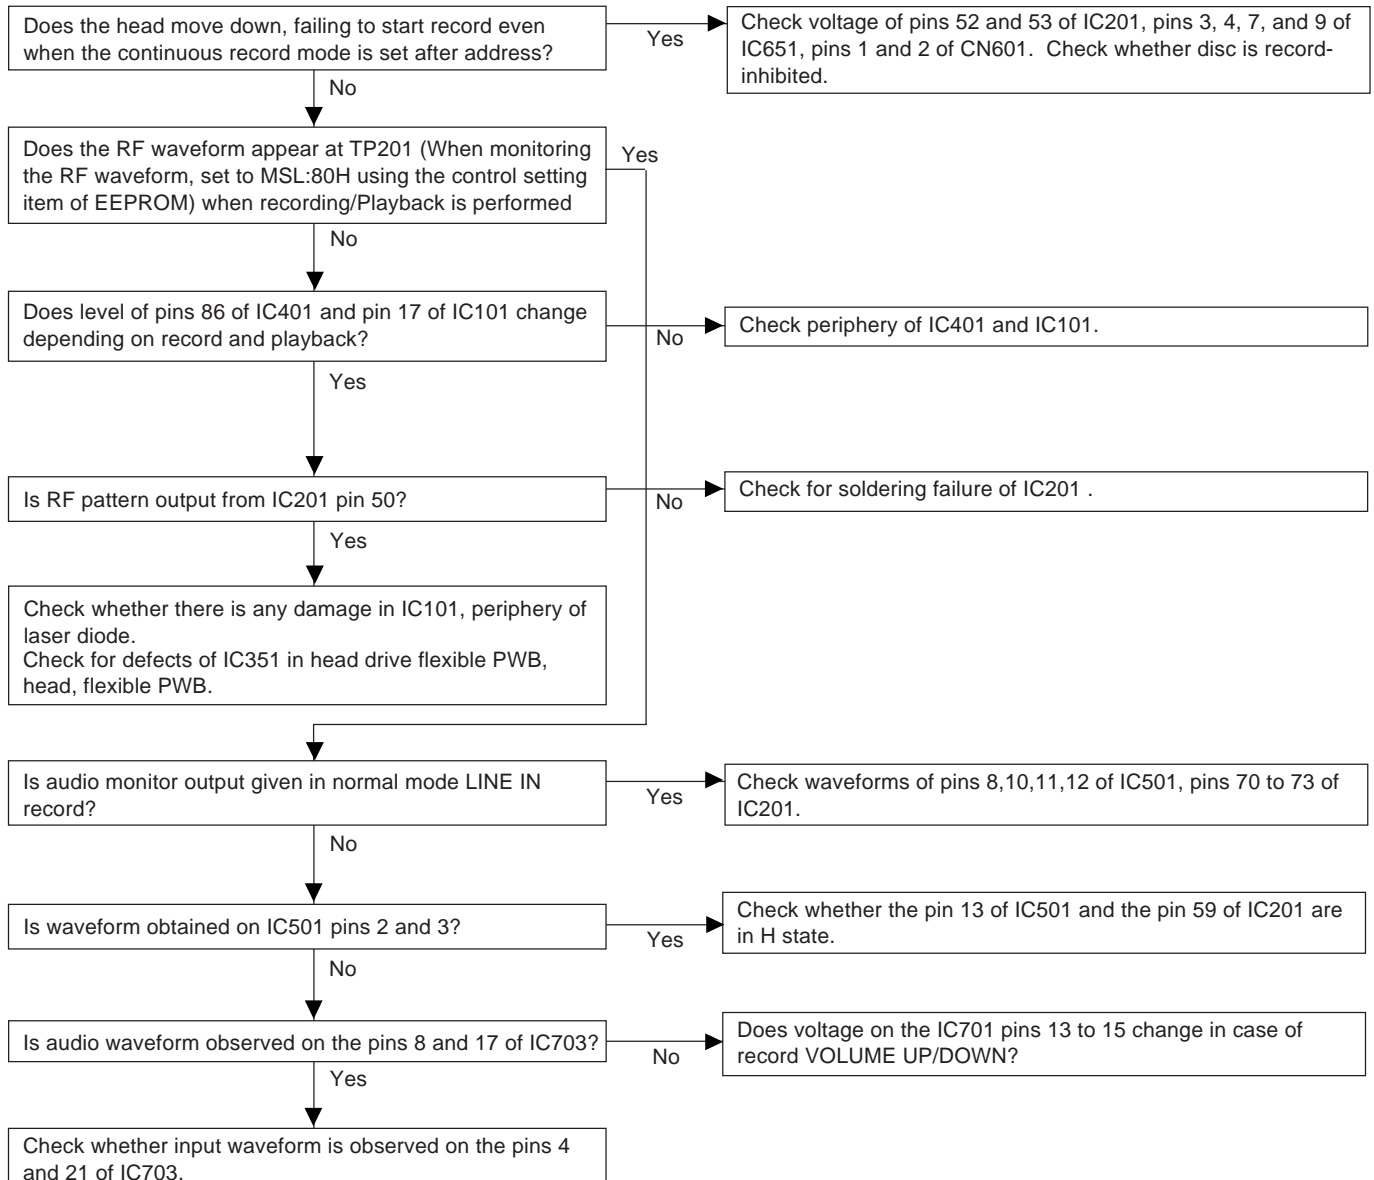

## FUNCTION TABLE OF IC

## IC401 RH-iX0409AWZZ :System Microcomputer (IX0409AW) (1/2)

| Pin No. | Port Name | Terminal Name | Input/Output | Function   |
|---------|-----------|---------------|--------------|--|
| 1       | P12/TCLKA | CIN           | Input        | Track cross signal/focus drive detection                         |
| 2       | TCLKB     | SPIN          | Input        | Spindle motor FG pulse detection input                           |
| 3*      | P14       | REPCNT        | Input        | RF control   |
| 4       | P15       | DISCPR        | Input        | Disc record inhibition switch input                              |
| 5*      | TIOCA2    | SPWDS         | Input        | Spindle motor FG pulse width detection                           |
| 6       | P17       | LCDRST        | Output       | Unit LCD driver reset control output                             |
| 7       | Vss       | VSS           | —            | Ground potential   |
| 8       | TxD0      | RMDAT         | Output       | Remote control indication data output                            |
| 9       | TxD1      | DSPDAT        | Output       | Unit indication data output                                      |
| 10*     | P32       | P32           | Input        | Reserve  |
| 11      | P33       | DSPSTB        | Output       | Main unit display strobe output                                  |
| 12*     | SCK0      | SCK0          | Output       | Serial I/O clock output (not used)                               |
| 13      | SCK1      | DSPSCK        | Output       | Unit indication data clock output                                |
| 14      | PE0       | _EPCS         | Output       | EEPROM chip selection output                                     |
| 15      | PE1       | EEPD          | Input/Output | EEPROM serial data input/output                                  |
| 16      | PE2       | EEPK          | Output       | EEPROM serial clock output                                       |
| 17      | PE3       | EPRT          | Output       | EEPROM write protection  |
| 18      | Vss       | VSS           | —            | Ground potential   |
| 19*     | PE4       | PE4           | Output       | Reserve  |
| 20      | PE5       | SYRS          | Output       | System LSI register selection output                             |
| 21      | PE6       | _SYRD         | Output       | System LSI read enable output                                    |
| 22      | PE7       | _SYWR         | Output       | System LSI write enable output                                   |
| 23-30   | PD0-PD7   | SYD0-SYD7     | Input/Output | System LSI parallel data bus                                     |
| 31      | Vss       | VSS           | —            | Ground potential   |
| 32      | PC0       | RCLAT         | Output       | Record audio IC data latch output                                |
| 33      | PC1       | _MCPGI        | Input        | Microphone plug insertion detection input                        |
| 34      | PC2       | _INPGI        | Input        | Line/digital plug insertion detection                            |
| 35      | PC3       | INPGCK        | Input        | Line/digital plug type detection                                 |
| 36      | PC4       | RPCNT         | Input/Output | Record circuit power control output                              |
| 37*     | PC5       | TEST1         | Input        | Test mode setting input 1  |
| 38*     | PC6       | TEST0         | Input        | Test mode setting input 0  |
| 39      | PC7       | JPNP          | Input        | Kana conversion/Kana input existence/nonexistence discrimination |
| 40      | Vcc       | VCC           | Input        | Positive power supply  |
| 41      | PB0       | OPICGA        | Output       | P.U detection sensitivity switching output                       |
| 42      | PB1       | PBOPON        | Output       | Audio IC output stage control output                             |
| 43      | PB2       | PBLAT         | Output       | Audio IC data latch output                                       |
| 44      | PB3       | LDON          | Output       | P.U. laser ON/OFF control output                                 |
| 45      | PB4       | DISCP         | Output       | RF amp TE polarity switching output                              |
| 46      | PB5       | SGAIN         | Output       | RF amp gain polarity switching output                            |
| 47      | PB6       | RACLK         | Output       | Audio IC data clock output                                       |
| 48      | PB7       | RADAT         | Output       | Audio IC serial data output                                      |
| 49      | Vss       | VSS           | —            | Ground potential   |
| 50*     | PA0       | PAD0          | Output       | Reserve  |
| 51*     | PA1       | _ELONL        | Output       | EL lighting control output                                       |
| 52*     | PA2       | PA2           | Output       | Reserve  |
| 53      | PA3       | PDCNT         | Output       | Inner detection PD current control output                        |
| 54      | P20       | INNSW         | Input        | Mechanism inner SW position detection input                      |
| 55      | P21       | EMPHO         | Output       | Audio emphasis control output 0                                  |
| 56      | TIOCC3    | BUZOUT        | Output       | Beep sound pulse output  |
| 57      | MD0       | MD0           | Input        | Operation mode selection input 0                                 |

In this unit, the terminal with asterisk mark (\*) is open terminal which is not connected to the outside.

**IC401 RH-iX0409AWZZ :System Microcomputer (IX0409AW) (2/2)**

| Pin No. | Port Name                  | Terminal Name | Input/Output | Function   |
|---------|----------------------------|---------------|--------------|--|
| 58      | MD1                        | MD1           | Input        | Operation mode selection input 1                               |
| 59      | P23                        | DCEXT         | Input        | DC-IN detection (level)  |
| 60      | $\overline{\text{WDTOVF}}$ | WDTOVF        | Output       | Watch dog timer (not used)                                     |
| 61      | MD2                        | MD2           | Input        | Operation mode selection input 2                               |
| 62      | RES                        | _RESET        | Input        | Microcomputer hard reset input                                 |
| 63      | NMI                        | NMI           | Input        | Nonmaskable interruption input (not used)                      |
| 64      | $\overline{\text{STBY}}$   | _STBY         | Input        | Microcomputer standby input (not used)                         |
| 65      | Vcc                        | VCC           | Input        | Positive power supply  |
| 66      | XTAL                       | XTAL          | —            | Crystal connection terminal                                    |
| 67      | EXTAL                      | EXTAL         | —            | Crystal connection terminal                                    |
| 68      | Vss                        | VSS           | —            | Ground potential   |
| 69      | PF7                        | _PLAY         | Input        | Unit PLAY button operation detection input                     |
| 70      | PF6                        | _REC          | Input        | Unit REC button operation detection input                      |
| 71      | PF5                        | _STOP         | Input        | Unit STOP button operation detection input                     |
| 72*     | PF4                        | PF4           | Output       | Reserve  |
| 73      | PF3                        | _DINT         | Input        | System LSI interruption  |
| 74      | PF2                        | ARQD          | Input        | Disk cap opens and closes detection/it is started and required |
| 75      | PF1                        | _RPLAY        | Input        | Remote control PLAY key operation detection input              |
| 76      | IRQ0                       | _ARQK         | Input        | Start request by the key /DC-IN input                          |
| 77      | AVcc                       | AVCC          | Input        | A/D and D/A converter positive power supply                    |
| 78      | Vref                       | VREF          | —            | A/D and D/A converter reference voltage                        |
| 79      | AN0                        | PLVBAT        | Input        | Battery voltage detection input                                |
| 80      | AN1                        | ANI1          | Input        | Reserve  |
| 81      | AN2                        | TEMP          | Input        | Ambient temperature detection input                            |
| 82      | AN3                        | RKEY          | Input        | Remote control key operation detection input                   |
| 83      | AN4                        | HKEY1         | Input        | Unit key operation detection input 1                           |
| 84      | AN5                        | HKEY2         | Input        | Unit key operation detection input 2                           |
| 85      | AN6                        | CHGCNT        | Output       | Charging current control output                                |
| 86      | DA1                        | LDVAR         | Output       | P.U. laser power setting output                                |
| 87      | AVss                       | AVSS          | —            | A/D and D/A converter ground potential                         |
| 88      | Vss                        | VSS           | —            | Ground potential   |
| 89      | P24                        | CHGON         | Output       | Battery charge ON/OFF control output                           |
| 90*     | TIOCB4                     | MCMON         | Output       | Internal operation status monitor                              |
| 91      | P26                        | PLVON         | Output       | Battery power supply line ON/OFF                               |
| 92      | P27                        | DCNT1         | Output       | Mechanism driver enable output                                 |
| 93      | PG0                        | SENSE         | Input        | System LSI servo sense input                                   |
| 94      | PG1                        | _FOK          | Input        | Focus OK signal input  |
| 95      | PG2                        | _XRST         | Output       | System LSI hard reset output                                   |
| 96      | PG3                        | CKSTP         | Output       | Microcomputer standby operation monitor output                 |
| 97      | PG4                        | _EJSW         | Input        | Ejection lever operation detection input                       |
| 98      | Vcc                        | VDD           | Input        | Positive power supply  |
| 99      | P10                        | PCNT2         | Output       | Servo DC-DC converter ON/OFF control                           |
| 100     | P11                        | PCNT1         | Output       | Main DC-DC converter ON/OFF control                            |

In this unit, the terminal with asterisk mark (\*) is open terminal which is not connected to the outside.



**IC201 VHiLR37815+-1 :Endec/Servo/Atrac (LR37815)**  
**System LSI expansion output port (LR37815)**

| Pin No. | Port Name | Terminal Name | Input/Output | Function   | Remarks                      |
|---------|-----------|---------------|--------------|--|------------------------------|
| 56      | EXPORT0   | LEDON1        | Output       | LED ON/OFF                                       | 'H':ON"L":OFF                |
| 57      | EXPORT1   | LDCNT1        | Output       | Recording head raising-lowering control output 1 | See the separate table *3.   |
| 58      | EXPORT2   | LDCNT2        | Output       | Recording head raising-lowering control output 2 | (Open)                       |
| 59      | EXPORT3   | EMPH1         | Output       | Audio emphasis control output 1                  | See the separate table *2.   |
| 78      | EXPORT4   | HDON          | Output       | Not used.  | 'H': Record electric current |
| 79      | EXPORT5   | OPTCNT        | Output       | Optical digital input circuit control            | 'H': Circuit operation ON    |
| 80      | EXPORT6   | DAPON         | Output       | D/A converter operation control output           | 'H': Operation ON            |
| 81      | EXPORT7   | ADPON         | Output       | A/D converter operation control output           | 'H': Operation ON            |

**\*1: List of TEST port settings**


| TEST1 | TEST0 | Details               |
|-------|-------|-----------------------|
| H     | H     | Normal mode           |
| H     | L     | No adjustment mode    |
| L     | H     | Test mode             |
| L     | L     | (Settings prohibited) |

**\*2: List of EMPH port settings**

| EMPH1 | EMPH0 | Details        |
|-------|-------|----------------|
| H     | H     | fs=32K: 'ON'   |
| H     | L     | fs=48K: 'ON'   |
| L     | H     | OFF            |
| L     | L     | fs=44.1K: 'ON' |

**\*3: List of LDCNT port settings**

| LDCNT1 | LDCNT0 | Details    |
|--------|--------|------------|
| H      | H      | Brake      |
| H      | L      | Drive UP   |
| L      | H      | Drive DOWN |
| L      | L      | Output OFF |

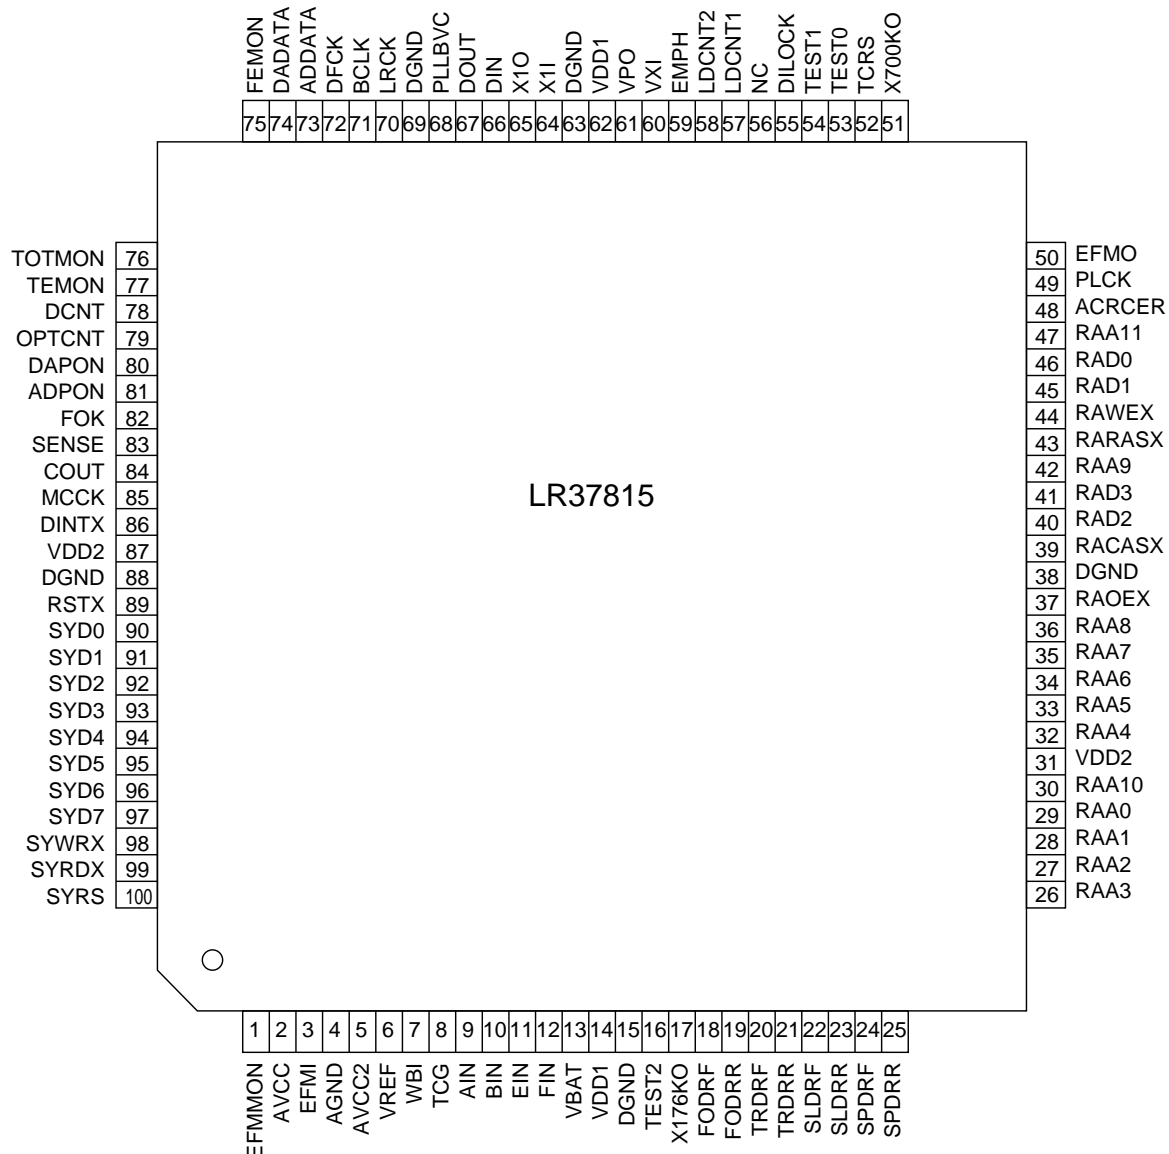
**IC201 VHiLR37815+-1 :Endec/Servo/Atrac (LR37815)**

**IC601 VHiLV8018W+-1 :PWM Driver (LV8018W) (1/2)**

| Pin No. | Terminal Name | Function  |
|---------|---------------|---|
| 1       | MUTE          | MUTE terminal at CH3. MUTE ON with "L".   |
| 2       | IN3+          | Input terminals on forward/reverse sides of CH3(digital input).   |
| 3*      | NC            | —   |
| 4*      | NC            | —   |
| 5*      | NC            | —   |
| 6       | VG            | Applies the supply voltage of the pre-drive unit. When VGOFF="L", the voltage on the booster circuit is output to this terminal and it becomes the direct supply voltage of the pre-drive unit.                 |
| 7       | VCC1          | Applies the analog-signal supply voltage.   |
| 8       | IN3-          | Input terminals on forward/reverse sides of CH3(digital input).   |
| 9       | NC            | —   |
| 10      | NC            | —   |
| 11      | NC            | —   |
| 12      | MUTE1         | MUTE terminal at CH1, 2, and 4. MUTE ON with "L".   |
| 13      | IN1R          | Input terminals on the forward/reverse side of CH3(digital input).  |
| 14      | IN1F          | Input terminals on the forward/reverse side of CH3(digital input).  |
| 15      | PGND1         | Power GND.  |
| 16      | OUT1R         | Output terminal on the reverse side of CH1.   |
| 17      | BAT1          | Power supply in the output section of CH1.  |
| 18      | OUT1F         | Output terminal on the forward side of CH1.   |
| 19      | PGND2         | Power GND.  |
| 20      | OUT2R         | Output terminal on the reverse side of CH2.   |
| 21      | BAT2          | Power supply in the output section of CH2.  |
| 22      | OUT2F         | Output terminal on the forward side of CH2.   |
| 23      | PGND3         | Power GND.  |
| 24      | IN2F          | Input terminals on the forward/reverse side of CH2(digital input).  |
| 25      | IN2R          | Input terminals on the forward/reverse side of CH2(digital input).  |
| 26*     | VBATT/2MON    | Power connection terminal in the output section that monitors the half of the power supply to the output section. It monitors the output power with the digital servo to correct its dependency on the voltage. |
| 27      | VBATT         | Power connection terminal in the output section.  |
| 28      | S/S           | START/STOP terminal. Starting with "H" and stopping with "L".   |
| 29      | GND           | Signal GND.   |
| 30      | VCC2          | Applies the logic-signal supply voltage.  |
| 31      | CP1           | Switching terminal on the booster circuit   |
| 32      | CP2           | Terminal to which the rectifying transistor on the booster circuit is connected.  |
| 33      | CP3           | Switching terminal on the booster circuit   |
| 34      | CP4           | Terminal to which the rectifying transistor on the booster circuit is connected.  |
| 35      | VGOFF         | ON/OFF switching terminal on the booster circuit. Booster circuit ON with "L". Booster circuit OFF with "H".  |
| 36      | IN4R          | Input terminals of the forward/reverse side of CH4(digital input).  |
| 37      | IN4F          | Input terminals of the forward/reverse side of CH4(digital input).  |
| 38      | PGND6         | Power GND   |
| 39      | OUT4F         | Output terminal on the forward side of CH4.   |
| 40      | BAT4          | Power supply in the output section of CH4.  |
| 41      | OUT4R         | Output terminal on the reverse side of CH4.   |
| 42      | PGND5         | Power GND.  |
| 43      | OUT3F         | Output terminal on the forward side of CH3.   |
| 44      | BAT3          | Power supply in the output section of CH3.  |
| 45*     | OUT3R         | Output terminal on the reverse side of CH3  |
| 46      | PGND4         | Power GND   |
| 47*     | NC            | —   |
| 48*     | NC            | —   |

In this unit, the terminal with asterisk mark (\*) is open terminal which is not connected to the outside.

IC601 VHiLV8018W+-1 :PWM Driver (LV8018W) (2/2)

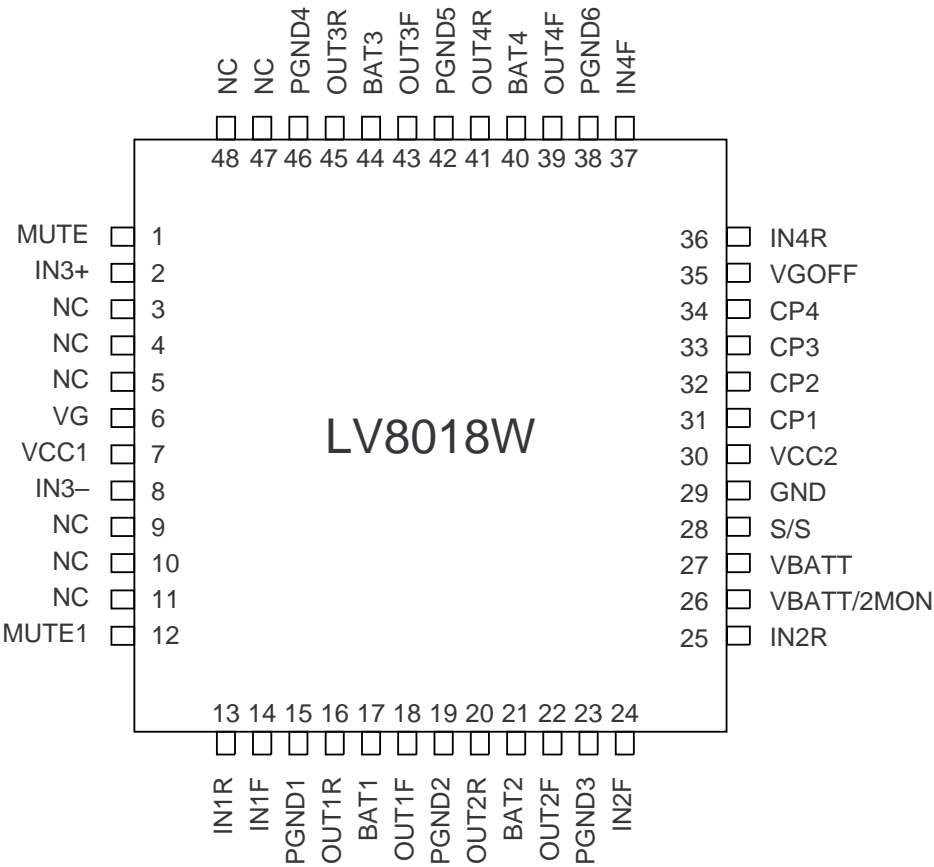

IC202 RH-iX2735AFZZ: 16M Bit D-RAM (IX2735AF)

| Pin No. | Terminal Name | Function               |
|---------|---------------|------------------------|
| 1       | Vcc           | Power supply (2.6V)    |
| 2       | I/O1          | Data input/data output |
| 3       | I/O2          | Data input/data output |
| 4       | WE            | Write enable           |
| 5       | RAS           | Low address strobe     |
| 6*      | NC            | Not connected          |
| 7       | A10           | Address input          |
| 8-11    | A0-A3         | Address input          |
| 12      | Vcc           | Power supply (2.6V)    |
| 13      | GND           | Ground (0V)            |
| 14-19   | A4-A9         | Address input          |
| 20      | OE            | Output enable          |
| 21      | CAS           | Column address strobe  |
| 22      | I/O3          | Data input/data output |
| 23      | I/O4          | Data input/data output |
| 24      | GND           | Ground (0V)            |

In this unit, the terminal with asterisk mark (\*) is open terminal which is not connected to the outside.

# SHARP PARTS GUIDE

## PORTABLE MINIDISC RECORDER

**MD-MT80W(S)**  
**MD-MT90W(S)**  
**MD-MT90(S)**  
**MODEL MD-MT90C(S)**

### “HOW TO ORDER REPLACEMENT PARTS”

To have your order filled promptly and correctly, please furnish the following information.

- |                 |                |
|-----------------|----------------|
| 1. MODEL NUMBER | 2. REF. No.    |
| 3. PART NO.     | 4. DESCRIPTION |

★ MARK: SPARE PARTS-DELIVERY SECTION

#### For U.S.A. only

Contact your nearest SHARP Parts Distributor to order.

For location of SHARP Parts Distributor,  
Please call Toll-Free;  
1-800-BE-SHARP

### Explanation of capacitors/resistors parts codes

#### Capacitors

VCC ..... Ceramic type  
 VCK ..... Ceramic type  
 VCT ..... Semiconductor type  
 VC •• MF ..... Cylindrical type (without lead wire)  
 VC •• MN ..... Cylindrical type (without lead wire)  
 VC •• TV ..... Square type (without lead wire)  
 VC •• TQ ..... Square type (without lead wire)  
 VC •• CY ..... Square type (without lead wire)  
 VC •• CZ ..... Square type (without lead wire)  
 VC ••••• J .. The 13th character represents capacity difference.  
 ("J" ±5%, "K" ±10%, "M" ±20%, "N" ±30%,  
 "C" ±0.25 pF, "D" ±0.5 pF, "Z" +80-20%.)


If there are no indications for the electrolytic capacitors, error is ±20%.

#### Resistors

VRD ..... Carbon-film type  
 VRS ..... Carbon-film type  
 VRN ..... Metal-film type  
 VR •• MF ..... Cylindrical type (without lead wire)  
 VR •• MN ..... Cylindrical type (without lead wire)  
 VR •• TV ..... Square type (without lead wire)  
 VR •• TQ ..... Square type (without lead wire)  
 VR •• CY ..... Square type (without lead wire)  
 VR •• CZ ..... Square type (without lead wire)  
 VR ••••• J .. The 13th character represents error.  
 ("J" ±5%, "F" ±1%, "D" ±0.5%.)

If there are no indications for other parts, the resistors are ±5% carbon-film type.

#### NOTE:

Parts marked with “” are important for maintaining the safety of the set.

Be sure to replace parts with specified ones for maintaining the safety and performance of the set.

# MD-MT80W/90W/90/90C

| NO.                        | PARTS CODE     | ★ | PRICE RANK | DESCRIPTION                          |
|----------------------------|----------------|---|------------|--------------------------------------|
| <b>INTEGRATED CIRCUITS</b> |                |   |            |                                      |
| IC101                      | VHII3R58M/-1   | J | AM         | RF Signal Processor,IR3R58M          |
| IC201                      | VHILR37815+-1  | J | BF         | Endec/Servo/Atrac,LR37815            |
| IC202                      | RH-IX2735AFZZ  | J | AX         | 16MBit D-RAM,IX2735AF                |
| IC203                      | VHI62FP1602-1  | J | AF         | Regulator,62FP1602                   |
| IC251                      | VSFTD2017+-1   | J | AL         | N-ch MOS FET,FTD2017                 |
| IC253                      | VHIRN4904/-1   | J | AD         | Power Select Charge Drive, RN4904    |
| IC255                      | VHINJM022V/-1  | J | AG         | Ope Amp.,NJM022V                     |
| IC256                      | VSRN4911+-1    | J | AD         | Digital Transistor,RN4911            |
| IC257                      | VHIS80808LN-1  | J | AE         | Reset,S80808LN                       |
| IC258,259                  | VHIHN1C01FU-1  | J | AD         | Power Transistor,HN1C01FU            |
| IC260                      | VHIRN4904/-1   | J | AD         | Power Select Charge Drive, RN4904    |
| IC351                      | VHI74ACT02T-1  | J | AE         | Head Driver,74ACT02T                 |
| IC353                      | VHIFTD2005/-1  | J | AG         | Head Driver,FTD2005                  |
| IC354                      | VHICPH5608/-1  | J | AH         | Head Driver,CPH5608                  |
| IC401                      | RH-IX0409AWZZ  | J |            | System Microcomputer, IX0409AW       |
| IC402                      | VHI58X2404T-1  | J | AF         | EEPROM,58X2404T                      |
| IC431                      | VHIS80820LN-1  | J | AD         | Reset,S80820LN                       |
| IC501                      | VHIAK4551VT-1  | J | AU         | AD/DA Converter,AK4551VT             |
| IC601                      | VHILV8018W+-1  | J | AM         | PWM Driver,LV8018W                   |
| IC651                      | VHILB1930M/-1  | J | AH         | Motor Driver,LB1930M                 |
| IC701                      | VHII3R54N/-1   | J | AQ         | Audio Amp.,IR3R54N                   |
| IC703                      | VHII3R59N/-1   | J | AN         | Audio Amp.,IR3R59N                   |
| IC771                      | VHI62GR2322-1  | J | AF         | 2.3V Regulator,62GR2322              |
| IC801                      | VHI62RP2002-1  | J | AF         | 2.0V Regulator,62RP2002              |
| IC802                      | VHIHN1C01FU-1  | J | AD         | Power Transistor,HN1C01FU            |
| IC803                      | VHIS80819LN-1  | J | AE         | Reset IC,S80819LN                    |
| IC809                      | VHIRN4904/-1   | J | AD         | Power Select Charge Drive, RN4904    |
| IC821                      | VSCPH3413+-1   | J | AE         | N-ch MOS FET,CPH3413                 |
| IC822                      | VHII3R3M14N/-1 | J | AK         | DC/DC Converter,IR3M14N              |
| IC841                      | VHI6372C281-1  | J | AH         | 2.8V UP Converter,6372C281           |
| IC842                      | VHIXC62HS02-1  | J | AE         | Power Supply Microcomputer, XC62HS02 |
| IC851                      | VSCPH3413+-1   | J | AE         | N-ch MOS FET,CPH3413                 |
| IC852                      | VHII3R3M14N/-1 | J | AK         | DC/DC Converter,IR3M14N              |
| IC871                      | VHITC7S86FU-1  | J | AE         | Exclusive or Gate,TC7S86FU           |
| IC873                      | VHI62GR4522-1  | J | AG         | 4.5V Regulator,62GR4522              |
| IC892                      | VHIHN1C01FU-1  | J | AD         | Power Transistor,HN1C01FU            |
| IC901                      | VHILB1971V+-1  | J | AR         | Spindle Motor Driver,LB1971V         |

## TRANSISTORS

|      |               |   |    |                        |
|------|---------------|---|----|------------------------|
| Q250 | VS2SA17457/-1 | J | AB | Silicon,PNP,2SA17457   |
| Q251 | VS2SD1819AS-1 | J | AC | Silicon,NPN,2SD1819 AS |
| Q257 | VS2SA1832GR-1 | J | AC | Silicon,PNP,2SA1832 GR |
| Q461 | VS2SD1819AS-1 | J | AC | Silicon,NPN,2SD1819 AS |
| Q711 | VSRN1444A/-1  | J | AC | Digital,NPN,RN1444 A   |
| Q721 | VS2SD1979S+-1 | J | AC | Silicon,NPN,2SD1979 S  |
| Q801 | VS2SJ520TL+-1 | J | AM | FET,2SJ520 TL (P-ch)   |
| Q803 | VSUN5213+-1   | J | AC | Digital,NPN,UN5213     |
| Q891 | VS2SA1873GR-1 | J | AC | Silicon,PNP,2SA1873 GR |
| Q901 | VSUN5210+-1   | J | AC | Digital,NPN,UN5210     |

## DIODES

|             |               |   |    |   |
|-------------|---------------|---|----|---|
| D251        | VHD1SS400/-1  | J | AB | Silicon,1SS400                                  |
| D281        | VHD1SS400/-1  | J | AB | Silicon,1SS400                                  |
| D351        | VHDSBE803/-1  | J | AD | Silicon,SBE803                                  |
| D431        | VHD1SS361/-1  | J | AB | Silicon,1SS361                                  |
| D461        | VHDB731U/-1   | J | AC | Silicon,RB731U                                  |
| D467        | VHDB521S30-1  | J | AC | Silicon,RB521S30                                |
| D492        | VHEMA8075M/-1 | J | AC | Zener,MA8075M                                   |
| D494~496    | VHEMA8075M/-1 | J | AC | Zener,MA8075M                                   |
| D651        | VHDF10J2E/-1  | J | AC | Silicon,F10J2E                                  |
| D801        | VHDF05J2L/-1  | J | AC | Silicon,F05J2L                                  |
| D802        | VHEMA8051M/-1 | J | AC | Zener,MA8051M                                   |
| D803        | VHDB520S30-1  | J | AC | Schottky,RB520S30                               |
| D821        | VHDD1FH3+-1   | J | AE | Schottky,D1FH3                                  |
| D822,823    | VHDF10J2E/-1  | J | AC | Silicon,F10J2E                                  |
| D831,832    | VHDBRB0103B-1 | J | AC | Silicon,HRB0103B                                |
| D841        | VHDF10J2E/-1  | J | AC | Silicon,F10J2E                                  |
| D842        | VHDBRB0103B-1 | J | AC | Silicon,HRB0103B                                |
| D851        | VHDD1FH3+-1   | J | AE | Schottky,D1FH3                                  |
| D852        | VHDF10J2E/-1  | J | AC | Silicon,F10J2E                                  |
| D861,862    | VHDF10J2E/-1  | J | AC | Silicon,F10J2E                                  |
| PH901(15-2) | VHPRPI221+-1  | J |    | Photo Interupter,RPI221 (Supplies at Ref No.15) |

## COILS

|          |               |   |    |  |
|----------|---------------|---|----|--|
| L100     | VPBNN100K0000 | J | AC | 10 μH                                    |
| L171     | RCILC0356AFZZ | J | AC | 10 μH                                    |
| L204     | RCILC0353AFZZ | J | AB | Tip Solid Induction,100 mA [90/90C Only] |
| L452     | RCILC0352AFZZ | J | AB | Tip Impeder,150 mA                       |
| L453,454 | RCILC0353AFZZ | J | AB | Tip Solid Induction,100 mA               |
| L456     | RCILC0353AFZZ | J | AB | Tip Solid Induction,100 mA               |
| L601~604 | RCILC0358AFZZ | J | AC | 47 μH,Choke                              |
| L608     | RCILC0356AFZZ | J | AC | 10 μH                                    |
| L609,610 | RCILC0358AFZZ | J | AC | 47 μH,Choke                              |
| L702~704 | RCILC0353AFZZ | J | AB | Tip Solid Induction,100 mA               |
| L711~714 | RCILC0353AFZZ | J | AB | Tip Solid Induction,100 mA               |
| L771     | RCILC0359AFZZ | J | AC | 100 μH,Choke                             |
| L800,801 | RCILZ0027AWZZ | J | AD | 100 MHz,Tip Impeder                      |
| L821     | RCILC0005AWZZ | J | AF | 10 μH,Choke                              |
| L841     | RCILC0356AFZZ | J | AC | 10 μH                                    |
| L851     | RCILC0005AWZZ | J | AF | 10 μH,Choke                              |
| L862     | RCILC0359AFZZ | J | AC | 100 μH,Choke                             |

## VIBRATORS

|       |               |   |    |                     |
|-------|---------------|---|----|---------------------|
| XL201 | RCRSC0028AFZZ | J | AH | Crystal,33.8688 MHz |
| XL401 | RCRM-0203AFZZ | J | AD | Ceramic,4.19 MHz    |

## CAPACITORS

|          |               |   |    |                                  |
|----------|---------------|---|----|----------------------------------|
| C100     | VCSATA0JJ106M | J | AD | 10 μF,6.3V,Electrolytic,Tantalum |
| C102,103 | VCKYCY0JB105K | J | AC | 1 μF,6.3V                        |
| C106     | VCKYCY0JB105K | J | AC | 1 μF,6.3V                        |
| C107     | VCKYCY1CB104K | J | AB | 0.1 μF,16V                       |
| C108,109 | VCKYCY0JB105K | J | AC | 1 μF,6.3V                        |
| C110     | VCKYCY1AB224K | J | AB | 0.22 μF,10V                      |
| C111     | VCKYCY0JB105K | J | AC | 1 μF,6.3V                        |
| C112     | VCKYCY1CB104K | J | AB | 0.1 μF,16V                       |
| C113     | VCKYCY0JB105K | J | AC | 1 μF,6.3V                        |
| C114     | VCCCCY1HH5R0C | J | AA | 5 pF (CH),50V                    |
| C121,122 | VCCCCY1HH221J | J | AA | 220 pF (CH),50V                  |
| C123,124 | VCKYCY1HB331K | J | AB | 330 pF,50V                       |
| C130,131 | VCKYCY1CB104K | J | AB | 0.1 μF,16V                       |
| C132,133 | VCKYCY1AB224K | J | AB | 0.22 μF,10V                      |
| C165     | VCKYCY1CB333K | J | AA | 0.033 μF,16V                     |
| C171,172 | RC-SZ1144AFZZ | J | AD | 33 μF,6.3V,Electrolytic,Tantalum |
| C201     | VCSATA0JJ106M | J | AD | 10 μF,6.3V,Electrolytic,Tantalum |
| C202     | VCSATE0JJ476M | J | AD | 47 μF,6.3V,Electrolytic,Tantalum |
| C203     | VCKYCY1CB104K | J | AB | 0.1 μF,16V                       |
| C204     | VCKYCY1AB474K | J | AC | 0.47 μF,10V                      |
| C205     | VCKYCY1CB104K | J | AB | 0.1 μF,16V                       |
| C206     | VCKYCY0JB105K | J | AC | 1 μF,6.3V                        |
| C207     | VCKYCY1CB104K | J | AB | 0.1 μF,16V                       |
| C209     | VCKYCY1CB104K | J | AB | 0.1 μF,16V                       |
| C211     | VCCCCY1HH5R0C | J | AA | 5 pF (CH),50V                    |
| C212     | VCCCCY1HH8R0D | J | AA | 8 pF (CH),50V                    |
| C221     | VCCCCY1HH220J | J | AA | 22 pF (CH),50V [90/90C Only]     |
| C251     | VCKYCY1CB104K | J | AB | 0.1 μF,16V                       |
| C252     | VCKYTV1CB104K | J | AA | 0.1 μF,16V                       |
| C253~255 | VCKYCY1CB104K | J | AB | 0.1 μF,16V                       |
| C259     | VCKYCY1CB104K | J | AB | 0.1 μF,16V                       |
| C291     | VCKYCY0JB105K | J | AC | 1 μF,6.3V                        |
| C351     | VCCCCY1HH470J | J | AA | 47 pF (CH),50V                   |
| C353     | VCSATA0JJ106M | J | AD | 10 μF,6.3V,Electrolytic,Tantalum |
| C354     | VCKYCY1CB104K | J | AB | 0.1 μF,16V                       |
| C357     | VCKYCY1CB104K | J | AB | 0.1 μF,16V                       |
| C361     | VCKYTV1HB393K | J | AB | 0.039 μF,50V                     |
| C401     | VCKYCY1CB104K | J | AB | 0.1 μF,16V                       |
| C431     | VCKYCY1AB474K | J | AC | 0.47 μF,10V                      |
| C454     | VCKYCY1HB222K | J | AA | 0.0022 μF,50V                    |
| C481,482 | VCKYTV1AB105K | J | AD | 1 μF,10V                         |
| C491     | VCKYTV1CB104K | J | AA | 0.1 μF,16V                       |
| C492     | VCKYCY0JB105K | J | AC | 1 μF,6.3V                        |
| C500     | VCSATA0JJ106M | J | AD | 10 μF,6.3V,Electrolytic,Tantalum |
| C501,502 | VCKYCY1HB222K | J | AA | 0.0022 μF,50V                    |
| C503     | VCSATA1AJ335M | J | AB | 3.3 μF,10V,Electrolytic,Tantalum |
| C505,506 | VCKYCY1HB102K | J | AA | 0.001 μF,50V                     |
| C509,510 | VCKYTV1CF225Z | J | AC | 2.2 μF,16V                       |
| C511     | VCKYCY0JB105K | J | AC | 1 μF,6.3V                        |
| C601~604 | VCKYCY0JB105K | J | AC | 1 μF,6.3V                        |
| C608     | VCKYTV1CB105K | J | AD | 1 μF,16V                         |
| C609,610 | VCKYCY0JB105K | J | AC | 1 μF,6.3V                        |
| C611,612 | VCKYCY1CB104K | J | AB | 0.1 μF,16V                       |
| C622     | VCKYCY1CB104K | J | AB | 0.1 μF,16V                       |

| NO.      | PARTS CODE    | ★ | PRICE<br>RANK | DESCRIPTION                      | NO.      | PARTS CODE    | ★ | PRICE<br>RANK | DESCRIPTION                  |
|----------|---------------|---|---------------|----------------------------------|----------|---------------|---|---------------|------------------------------|
| C651     | VCKYTV1CF105Z | J | AB            | 1 μF,16V                         | R138     | VRS-CY1JB394F | J | AA            | 390 kohms,1/16W              |
| C652     | VCKYCY1CB104K | J | AB            | 0.1 μF,16V                       | R139     | VRS-CY1JB393J | J | AA            | 39 kohms,1/16W               |
| C701,702 | VCSATA0JJ106M | J | AD            | 10 μF,6.3V,Electrolytic,Tantalum | R140     | VRS-CY1JB394J | J | AA            | 390 kohms,1/16W              |
| C703     | VCKYCY1EB103K | J | AA            | 0.01 μF,25V                      | R161     | VRS-CY1JB122J | J | AA            | 1.2 kohms,1/16W              |
| C704     | VCSATE0JJ476M | J | AD            | 47 μF,6.3V,Electrolytic,Tantalum | R204     | VRS-CY1JB102J | J | AA            | 1 kohm,1/16W                 |
| C711,712 | VCCCCY1HH101J | J | AA            | 100 pF (CH),50V                  | R205     | VRS-CY1JB333F | J | AA            | 33 kohms,1/16W               |
| C713,714 | VCKYCY0JB105K | J | AC            | 1 μF,6.3V                        | R206     | VRS-CY1JB273F | J | AA            | 27 kohms,1/16W               |
| C715,716 | VCKYCY1CB104K | J | AB            | 0.1 μF,16V                       | R207     | VRS-CY1JB681J | J | AA            | 680 ohms,1/16W [90/90C Only] |
| C721,722 | VCSATA1AJ335M | J | AB            | 3.3 μF,10V,Electrolytic,Tantalum | R222     | VRS-CY1JB105J | J | AA            | 1 Mohm,1/16W                 |
| C723,724 | VCKYCY1HB102K | J | AA            | 0.001 μF,50V                     | R250,251 | VRS-CY1JB101J | J | AA            | 100 ohm,1/16W                |
| C725,726 | VCSATA1AJ335M | J | AB            | 3.3 μF,10V,Electrolytic,Tantalum | R252     | VRS-CY1JB154F | J | AA            | 150 kohms,1/16W              |
| C731     | VCKYCY1CF224Z | J | AB            | 0.22 μF,16V                      | R253     | VRS-CY1JB393F | J | AF            | 39 kohms,1/16W               |
| C733,734 | VCKYCY1CB104K | J | AB            | 0.1 μF,16V                       | R254     | VRS-CY1JB223J | J | AA            | 22 kohms,1/16W               |
| C753,754 | VCKYCY0JB105K | J | AC            | 1 μF,6.3V                        | R255     | VRS-CY1JB472J | J | AA            | 4.7 kohms,1/16W              |
| C758     | VCKYQT1CB105K | J | AD            | 1 μF,16V                         | R256     | VRS-CY1JB563J | J | AA            | 56 kohms,1/16W               |
| C760     | VCKYCY1CB104K | J | AB            | 0.1 μF,16V                       | R257     | VRS-CY1JB273F | J | AA            | 27 kohms,1/16W               |
| C761,762 | VCKYTV1CF225Z | J | AC            | 2.2 μF,16V                       | R261     | VRS-CY1JB102J | J | AA            | 1 kohm,1/16W                 |
| C765,766 | VCKYTV1CB224K | J | AB            | 0.22 μF,16V                      | R262     | VRS-CY1JB124F | J | AA            | 120 kohms,1/16W              |
| C771     | VCSATE0JJ476M | J | AD            | 47 μF,6.3V,Electrolytic,Tantalum | R266     | VRS-CY1JB473F | J | AA            | 47 kohms,1/16W               |
| C773     | VCKYTV1CB224K | J | AB            | 0.22 μF,16V                      | R267     | VRS-CY1JB103F | J | AA            | 10 kohm,1/16W                |
| C774     | VCKYTV1CF105Z | J | AB            | 1 μF,16V                         | R269     | VRS-CY1JB223F | J | AA            | 22 kohms,1/16W               |
| C801     | VCKYCY0JB105K | J | AC            | 1 μF,6.3V                        | R270,271 | VRS-CY1JB683F | J | AA            | 68 kohms,1/16W               |
| C802     | VCKYCY1EB103K | J | AA            | 0.01 μF,25V                      | R272     | VRS-CY1JB101J | J | AA            | 100 ohm,1/16W                |
| C803     | VCKYCY1CB104K | J | AB            | 0.1 μF,16V                       | R277     | VRS-CY1JB393J | J | AA            | 39 kohms,1/16W               |
| C818     | VCKYCY1CB104K | J | AB            | 0.1 μF,16V                       | R279     | VRS-CY1JB101J | J | AA            | 100 ohm,1/16W                |
| C821     | VCKYQT1AB335K | J | AF            | 3.3 μF,10V                       | R281     | VRS-CY1JB223J | J | AA            | 22 kohms,1/16W               |
| C822     | RC-SZ0001AWZZ | J | AG            | 22 μF,6.3V,Electrolytic          | R282     | VRS-CY1JB105J | J | AA            | 1 Mohm,1/16W                 |
| C823     | VCEAPW0GW227M | J | AD            | 220 μF,4.0V,Electrolytic         | R283     | VRS-CY1JB104J | J | AA            | 100 kohm,1/16W               |
| C825     | VCKYQT0JB106K | J | AE            | 10 μF,6.3V                       | R284     | VRS-CY1JB394J | J | AA            | 390 kohms,1/16W              |
| C826     | VCCCCY1HH101J | J | AA            | 100 pF (CH),50V                  | R285     | VRS-CY1JB104J | J | AA            | 100 kohm,1/16W               |
| C827     | VCCCCY1HH221J | J | AA            | 220 pF (CH),50V                  | R286     | VRS-CY1JB222J | J | AA            | 2.2 kohms,1/16W              |
| C828     | VCKYCY0JB105K | J | AC            | 1 μF,6.3V                        | R287     | VRS-CY1JB564J | J | AA            | 560 kohms,1/16W              |
| C830     | VCKYCY0JB105K | J | AC            | 1 μF,6.3V                        | R288     | VRS-CY1JB473J | J | AA            | 47 kohms,1/16W               |
| C832~835 | VCKYCY1CB104K | J | AB            | 0.1 μF,16V                       | R291     | VRS-CY1JB101J | J | AA            | 100 ohm,1/16W                |
| C836     | VCKYQT1CB105K | J | AD            | 1 μF,16V                         | R292     | VRS-CY1JB104J | J | AA            | 100 kohm,1/16W               |
| C837     | VCKYCY0JB105K | J | AC            | 1 μF,6.3V                        | R293     | VRS-CY1JB222J | J | AA            | 2.2 kohms,1/16W              |
| C838     | VCKYCY1CB104K | J | AB            | 0.1 μF,16V                       | R294~296 | VRS-CY1JB104J | J | AA            | 100 kohm,1/16W               |
| C839     | VCKYTV1CB334K | J | AC            | 0.33 μF,16V                      | R351     | VRS-TV2AB3R9J | J | AA            | 3.9 ohms,1/10W               |
| C840     | VCEAPW0GW227M | J | AD            | 220 μF,4.0V,Electrolytic         | R361     | VRS-TQ2BB150J | J | AA            | 15 ohms,1/8W                 |
| C841     | VCKYCY0JB105K | J | AC            | 1 μF,6.3V                        | R402     | VRS-CY1JB104J | J | AA            | 100 kohm,1/16W               |
| C842     | RC-SZ1144AFZZ | J | AD            | 33 μF,6.3V,Electrolytic,Tantalum | R403     | VRS-CY1JB102J | J | AA            | 1 kohm,1/16W                 |
| C843     | VCKYTV1CB224K | J | AB            | 0.22 μF,16V                      | R404     | VRS-CY1JB104J | J | AA            | 100 kohm,1/16W               |
| C844     | VCSATA0JJ106M | J | AD            | 10 μF,6.3V,Electrolytic,Tantalum | R405     | VRS-CY1JB103J | J | AA            | 10 kohm,1/16W                |
| C845,846 | VCKYCY1CB104K | J | AB            | 0.1 μF,16V                       | R406     | VRS-CY1JB104J | J | AA            | 100 kohm,1/16W               |
| C847,848 | VCKYCY0JB105K | J | AC            | 1 μF,6.3V                        | R411     | VRS-CY1JB104J | J | AA            | 100 kohm,1/16W               |
| C849     | VCEAPW0GW227M | J | AD            | 220 μF,4.0V,Electrolytic         | R412     | VRS-CY1JB153J | J | AA            | 15 kohms,1/16W               |
| C850     | VCKYTV1CB104K | J | AA            | 0.1 μF,16V                       | R413~416 | VRS-CY1JB102J | J | AA            | 1 kohm,1/16W                 |
| C851     | VCKYQT1AB335K | J | AF            | 3.3 μF,10V                       | R422     | VRS-CY1JB104J | J | AA            | 100 kohm,1/16W               |
| C852     | RC-SZ0001AWZZ | J | AG            | 22 μF,6.3V,Electrolytic          | R423     | VRS-CY1JB223F | J | AA            | 22 kohms,1/16W               |
| C853     | VCEAPW0GW227M | J | AD            | 220 μF,4.0V,Electrolytic         | R424,425 | VRS-CY1JB223J | J | AA            | 22 kohms,1/16W               |
| C856     | VCCCCY1HH680J | J | AA            | 68 pF (CH),50V                   | R431     | VRS-CY1JB334J | J | AA            | 330 kohms,1/16W              |
| C857     | VCCCCY1HH180J | J | AA            | 18 pF (CH),50V                   | R451     | VRS-CY1JB562J | J | AA            | 5.6 kohms,1/16W              |
| C860     | VCKYCY0JB105K | J | AC            | 1 μF,6.3V                        | R452     | VRS-CY1JB822J | J | AA            | 8.2 kohms,1/16W              |
| C862,863 | VCKYCY0JB105K | J | AC            | 1 μF,6.3V                        | R453     | VRS-CY1JB183J | J | AA            | 18 kohms,1/16W               |
| C869     | VCSATE0JJ476M | J | AD            | 47 μF,6.3V,Electrolytic,Tantalum | R454     | VRS-CY1JB563J | J | AA            | 56 kohms,1/16W               |
| C876     | VCKYCY0JB105K | J | AC            | 1 μF,6.3V                        | R455     | VRS-CY1JB562J | J | AA            | 5.6 kohms,1/16W              |
| C901~903 | VCKYCY1HB222K | J | AA            | 0.0022 μF,50V                    | R456     | VRS-CY1JB822J | J | AA            | 8.2 kohms,1/16W              |
| C904     | VCKYTV1CB334K | J | AC            | 0.33 μF,16V                      | R457     | VRS-CY1JB183J | J | AA            | 18 kohms,1/16W               |
| C905     | VCKYCY1HB471K | J | AA            | 470 pF,50V                       | R458     | VRS-CY1JB563J | J | AA            | 56 kohms,1/16W               |
| C906,907 | VCKYCY1CB823K | J | AB            | 0.082 μF,16V                     | R460     | VRS-CY1JB683J | J | AA            | 68 kohms,1/16W               |
| C908     | VCKYCY1CB473K | J | AA            | 0.047 μF,16V                     | R461     | VRS-CY1JB104J | J | AA            | 100 kohm,1/16W               |
| C910     | VCKYCY1CB104K | J | AB            | 0.1 μF,16V                       | R462     | VRS-CY1JB273J | J | AA            | 27 kohms,1/16W               |
| C911     | VCKYQT1AB335K | J | AF            | 3.3 μF,10V                       | R463     | VRS-CY1JB104J | J | AA            | 100 kohm,1/16W               |
| C912~914 | VCKYCY1HB222K | J | AA            | 0.0022 μF,50V                    | R464     | VRS-CY1JB224J | J | AA            | 220 kohms,1/16W              |
|          |               |   |               |                                  | R465     | VRS-CY1JB104J | J | AA            | 100 kohm,1/16W               |
|          |               |   |               |                                  | R466     | VRS-CY1JB564J | J | AA            | 560 kohms,1/16W              |
|          |               |   |               |                                  | R467     | VRS-CY1JB223J | J | AA            | 22 kohms,1/16W               |
|          |               |   |               |                                  | R492     | VRS-CY1JB102J | J | AA            | 1 kohm,1/16W                 |
|          | VRS-CY1JB000J | J | AA            | 0 ohm,Jumper,0.8×1.55mm,Green    | R501,502 | VRS-CY1JB471J | J | AA            | 470 ohms,1/16W               |
|          | VRS-TV2AB000J | J | AA            | 0 ohm,Jumper,1.25×2mm,Green      | R600     | VRS-CY1JB560J | J | AA            | 56 ohms,1/16W                |
| L202     | VRS-TV2AB330J | J | AA            | 33 ohms,1/10W                    | R601     | VRS-CY1JB563J | J | AA            | 56 kohms,1/16W               |
| L491     | VRS-TV2AB330J | J | AA            | 33 ohms,1/10W                    | R701     | VRS-CY1JB101J | J | AA            | 100 ohm,1/16W                |
| L710     | VRS-TV2AB470J | J | AA            | 47 ohms,1/10W                    | R702     | VRS-CY1JB220J | J | AA            | 22 ohms,1/16W                |
| R101~104 | VRS-CY1JB223J | J | AA            | 22 kohms,1/16W                   | R703     | VRS-CY1JB104J | J | AA            | 100 kohm,1/16W               |
| R111     | VRS-CY1JB123J | J | AA            | 12 kohms,1/16W                   | R711,712 | VRS-CY1JB682J | J | AA            | 6.8 kohms,1/16W              |
| R112     | VRS-CY1JB224J | J | AA            | 220 kohms,1/16W                  | R713,714 | VRS-CY1JB103J | J | AA            | 10 kohm,1/16W                |
| R131     | VRS-CY1JB124F | J | AA            | 120 kohms,1/16W                  | R715,716 | VRS-CY1JB104J | J | AA            | 100 kohm,1/16W               |
| R132     | VRS-CY1JB824F | J | AA            | 820 kohms,1/16W                  | R717,718 | VRS-CY1JB102J | J | AA            | 1 kohm,1/16W                 |
| R133     | VRS-CY1JB124F | J | AA            | 120 kohms,1/16W                  | R719,720 | VRS-CY1JB682J | J | AA            | 6.8 kohms,1/16W              |
| R134     | VRS-CY1JB824F | J | AA            | 820 kohms,1/16W                  | R723,724 | VRS-CY1JB682J | J | AA            | 6.8 kohms,1/16W              |
| R135     | VRS-CY1JB563F | J | AA            | 56 kohms,1/16W                   | R725     | VRS-CY1JB101J | J | AA            | 100 ohm,1/16W                |
| R136     | VRS-CY1JB394F | J | AA            | 390 kohms,1/16W                  | R726     | VRS-CY1JB393J | J | AA            | 39 kohms,1/16W               |
| R137     | VRS-CY1JB563F | J | AA            | 56 kohms,1/16W                   |          |               |   |               |                              |

## RESISTORS



# MD-MT80W/90W/90/90C

| NO.      | PARTS CODE    | ★ | PRICE RANK | DESCRIPTION                   |
|----------|---------------|---|------------|-------------------------------|
| R727     | VRS-CY1JB822J | J | AA         | 8.2 kohms,1/16W               |
| R728     | VRS-CY1JB102J | J | AA         | 1 kohm,1/16W                  |
| R729,730 | VRS-CY1JB472J | J | AA         | 4.7 kohms,1/16W               |
| R754     | VRS-CY1JB154J | J | AA         | 150 kohms,1/16W               |
| R757     | VRS-CY1JB222J | J | AA         | 2.2 kohms,1/16W               |
| R758     | VRS-CY1JB101J | J | AA         | 100 ohm,1/16W                 |
| R761     | VRS-CY1JB154J | J | AA         | 150 kohms,1/16W               |
| R762     | VRS-CY1JB104J | J | AA         | 100 kohm,1/16W                |
| R765,766 | VRS-CY1JB150J | J | AB         | 15 ohms,1/16W                 |
| R767,768 | VRS-CY1JB4R7J | J | AA         | 4.7 ohms,1/16W [80W/90W Only] |
| R802     | VRS-CY1JB561J | J | AA         | 560 ohms,1/16W                |
| R803     | VRS-CY1JB122J | J | AA         | 1.2 kohms,1/16W               |
| R806     | VRS-CY1JB563J | J | AA         | 56 kohms,1/16W                |
| R807     | VRS-CY1JB223J | J | AA         | 22 kohms,1/16W                |
| R808     | VRS-TV2AB1R0F | J | AB         | 1 ohm,1/10W                   |
| R809     | VRS-TV2AB1R0J | J | AA         | 1 ohm,1/10W                   |
| R810     | VRS-TV2AB1R0F | J | AB         | 1 ohm,1/10W                   |
| R811     | VRS-TV2AB1R0J | J | AA         | 1 ohm,1/10W                   |
| R812~815 | VRS-CY1JB103F | J | AA         | 10 kohm,1/16W                 |
| R816     | VRS-CY1JB152J | J | AA         | 1.5 kohms,1/16W               |
| R818     | VRS-CY1JB564J | J | AA         | 560 kohms,1/16W               |
| R819     | VRS-CY1JB223J | J | AA         | 22 kohms,1/16W                |
| R823     | VRS-CY1JB274J | J | AA         | 270 kohms,1/16W               |
| R824     | VRS-CY1JB103J | J | AA         | 10 kohm,1/16W                 |
| R825     | VRS-CY1JB304F | J | AF         | 300 kohms,1/16W               |
| R826     | VRS-CY1JB106J | J | AA         | 10 Mohm,1/16W                 |
| R827     | VRS-CY1JB224F | J | AA         | 220 kohms,1/16W               |
| R831,832 | VRS-CY1JB184F | J | AA         | 180 kohms,1/16W               |
| R833     | VRS-CY1JB470J | J | AA         | 47 ohms,1/16W                 |
| R841     | VRS-CY1JB104J | J | AA         | 100 kohm,1/16W                |
| R844     | VRS-CY1JB470J | J | AA         | 47 ohms,1/16W                 |
| R850     | VRS-CY1JB104J | J | AA         | 100 kohm,1/16W                |
| R852     | VRS-TV2AB3R3J | J | AA         | 3.3 ohms,1/10W                |
| R853     | VRS-CY1JB274J | J | AA         | 270 kohms,1/16W               |
| R854     | VRS-CY1JB103J | J | AA         | 10 kohm,1/16W                 |
| R855     | VRS-CY1JB394F | J | AA         | 390 kohms,1/16W               |
| R856     | VRS-CY1JB106J | J | AA         | 10 Mohm,1/16W                 |
| R857     | VRS-CY1JB334F | J | AA         | 330 kohms,1/16W               |
| R871     | VRS-CY1JB104J | J | AA         | 100 kohm,1/16W                |
| R901~904 | VRS-CY1JB1R0J | J | AA         | 1 ohm,1/16W                   |
| R906     | VRS-CY1JB155J | J | AA         | 1.5 Mohms,1/16W               |
| R908     | VRS-CY1JB223J | J | AA         | 22 kohms,1/16W                |
| R920     | VRS-CY1JB104J | J | AA         | 100 kohm,1/16W                |
| R921     | VRS-CY1JB331J | J | AA         | 330 ohms,1/16W                |
| R922     | VRS-CY1JB104J | J | AA         | 100 kohm,1/16W                |

## OTHER CIRCUITRY PARTS

|        |               |   |    |                                  |
|--------|---------------|---|----|----------------------------------|
| CN101  | QCNCW854XAFZZ | J | AL | Socket,22Pin                     |
| CN451  | QCNCW804NAFZZ | J | AE | Socket,13Pin                     |
| CN482  | QCNCW804JAFZZ | J | AE | Socket,9Pin                      |
| CN601  | QCNCW716PAFZZ | J | AF | Socket,14Pin                     |
| △ F841 | QFS-L401AAFNZ | J | AE | Square Tip Type Fuse,0.4A, DC60V |
| J701   | VHLGP1FD202-1 | J | AT | Jack,Optical/Line                |
| J702   | QJAKM0014AWZZ | J | AF | Jack,Mic IN                      |
| J703   | QJAKM0015AWZZ | J | AL | Jack,Remote Control/Headphones   |
| J801   | QJAKC0007AWZZ | J | AF | Jack,DC IN                       |
| M901   | RMOTV0040AWZZ | J | AW | Motor Ass'y [Spindle]            |
| M902   | RMOTV0511AFZZ | J | AT | Motor Ass'y [Sled]               |
| M903   | RMOTV0531AFM1 | J | AQ | Motor Ass'y [Lift]               |
| △ R801 | VHHSMDM110V-1 | J | AK | Conductive Restn Switch          |
| SW401  | QSW-M0172AFZZ | J | AD | Switch,Push Type [Eject]         |
| SW403  | QSW-M0172AFZZ | J | AD | Switch,Push Type [Lid Open]      |
| SW601  | QSW-M0011AWZZ | J | AE | Switch,Push Type [Disc Protect]  |

## MD MECHANISM PARTS

|    |               |   |    |                        |
|----|---------------|---|----|------------------------|
| 1  | LCHSM0121AWM1 | J | AG | Main Chassis Ass'y     |
| 2  | LHLDX3011AWM1 | J | AH | Cartridge Holder Ass'y |
| 3  | MLEVF0071AWFW | J | AC | Lift Link Lever        |
| 4  | MLEVF0072AWFW | J | AC | Head Angle Move Lever  |
| 5  | MLEVF0073AWFW | J | AC | Lever,Lift             |
| 6  | MLEVF0074AWFW | J | AC | Lever,Eject            |
| 7  | MLEVF0075AWFW | J | AC | Lever,Cancel           |
| 8  | MSPRP0048AWFJ | J | AC | Spring,Thrust          |
| 9  | MSPRP0922AFFJ | J | AD | Spring,Drive Grip      |
| 10 | MSPRT0054AWFJ | J | AB | Spring,Eject Lever     |
| 11 | NGERH0144AWZZ | J | AC | Gear,Drive             |
| 12 | NGERH0145AWZZ | J | AB | Drive Wheel            |
| 13 | NSFTD0008AWZZ | J | AG | Drive Screw            |
| 14 | NSFTM0292AFFW | J | AC | Shaft,Guide            |

|              |               |   |    |   |
|--------------|---------------|---|----|---|
| 15           | QPWBH0013AWM1 | J |    | Mechanism Flexible PWB Ass'y                    |
| 15- 1        |               |   |    | Mechanism Flexible PWB (Supplies at Ref No.15)  |
| 15- 2(PH901) | VHPRPI221++-1 | J |    | Photo Interupter,RPI221 (Supplies at Ref No.15) |
| 16           | RCILH0003AWM2 | J | AT | Magnetic Head Ass'y                             |
| △ 17         | 92LHPM234     | J | BM | Optical Pickup Unit                             |
| 501          | LX-BZ0049AWZZ | J | AB | Screw,ø1.4×1.8mm                                |
| 502          | LX-BZ0059AWZZ | J | AB | Screw,ø1.4×1.8mm                                |
| 503          | LX-BZ0823AFZZ | J | AA | Screw,ø1.4×1.2mm                                |
| 504          | LX-BZ0997AFZZ | J | AC | Screw,ø1.4×4.5mm                                |
| 505          | LX-EZ0030AWZZ | J | AA | Screw,ø1.4×2.5mm                                |
| 506          | LX-JZ0148AFZZ | J | AA | Screw,ø1.7×3mm                                  |
| 507          | LX-WZ9290AFZZ | J | AA | Washer,ø0.8×ø2.4×0.2mm                          |
| 508          | LX-WZ9296AFZZ | J | AA | Washer,ø1.5×ø3.5×0.25mm                         |
| 509          | XSPSN14P01500 | J | AA | Screw,ø1.4×1.5mm                                |
| M901         | RMOTV0040AWZZ | J | AW | Motor Ass'y [Spindle]                           |
| M902         | RMOTV0511AFZZ | J | AT | Motor Ass'y [Sled]                              |
| M903         | RMOTV0531AFM1 | J | AQ | Motor Ass'y [Lift]                              |

## CABINET PARTS

|        |               |   |    |  |
|--------|---------------|---|----|--|
| 201    | GCABA1234AWSA | J | AL | Center Cabinet [80W]                                 |
| 201    | GCABA1234AWSB | J | AL | Center Cabinet [90W/90/90C]                          |
| 202    | GCOVA1389AWSA | J | AF | Battery Cover [80W]                                  |
| 202    | GCOVA1389AWSB | J | AF | Battery Cover [90W/90/90C]                           |
| 203    | GDORB0004AWSA | J | AE | Battery Lid [80W]                                    |
| 203    | GDORB0004AWSB | J | AE | Battery Lid [90W/90/90C]                             |
| 204    | GFTAT3015AWM1 | J | AY | Top Cabinet Ass'y. [80W]                             |
| 204    | GFTAT3016AWM1 | J | AY | Top Cabinet Ass'y. [90W/90/90C]                      |
| 205    | GFTAU3044AWSA | J | AU | Bottom Cabinet [90]                                  |
| 205    | GFTAU3045AWSA | J |    | Bottom Cabinet [80W]                                 |
| 205    | GFTAU3049AWSA | J |    | Bottom Cabinet [90W]                                 |
| 205    | GFTAU3050AWSA | J |    | Bottom Cabinet [90C]                                 |
| 206    | HDECQ0721AWSA | J | AM | Decoration Plate [80W]                               |
| 206    | HDECQ0722AWSA | J | AM | Decoration Plate [90W/90/90C]                        |
| 207    | JKNBZ0807AWSA | J | AK | Button,Function [80W]                                |
| 207    | JKNBZ0810AWSA | J | AK | Button,Function [90W/90/90C]                         |
| 208    | JKNBZ0809AWSA | J | AE | Knob [Open]  |
| 209    | LANGT0109AWFW | J | AF | Bracket,LCD/Button                                   |
| 210    | LANGZ0112AWFW | J | AD | Bracket,Battery Cover                                |
| 211    | LHLDZ1344AWZZ | J | AD | Holder LCD   |
| 212    | LHLDZ3021AWM1 | J |    | Eject Lever Frame Ass'y.                             |
| 212- 1 |               |   |    | Eject Lever Frame Ass'y. (Not Replacement Item)      |
| 212- 2 | MSPRT0055AWFJ | J | AC | Spring,Eject Lever                                   |
| 212- 3 | MSPRT0056AWFJ | J | AC | Spring,Record Detect Lever                           |
| 213    | LHLDZ3022AWM1 | J |    | Frame Ass'y.,Left                                    |
| 214    | LHLDZ3023AWM1 | J |    | Battery Terminal Frame Ass'y.                        |
| 214- 1 |               |   |    | Battery Terminal Frame Ass'y. (Not Replacement Item) |
| 214- 2 | MSPRD0161AWFW | J | AC | Spring,Detect  |
| 215    | PCOVW1014AWSA | J | AC | Cover,Terminal                                       |
| 216    | PSHET0051AWZZ | J | AC | Insulation Sheet,Bottom Cabinet                      |
| 217    | PSHEZ0113AWZZ | J | AC | Window Tape [80W]                                    |
| 218    | PSHEZ0114AWZZ | J | AC | Knob Tape [80W]                                      |
| 218    | PSHEZ0116AWZZ | J | AK | Knob Tape [90W/90/90C]                               |
| 219    | PSHEZ0115AWZZ | J | AA | Key FPC Tape   |
| 220    | QTANB9033AWFQ | J | AF | Terminal,Battery                                     |
| 221    | RUNTK0013AWZZ | J | AP | Key Switch Flexible PWB Ass'y.                       |
| 222    | RUNTZ0033AWZZ | J | BA | LCD Unit Ass'y.                                      |
| 223    | TCAUS0053AWZZ | J |    | Label,Class 3B [80W/90W Only]                        |
| 224    | PSHEF0026AWZZ | J | AA | Sheet  |
| 225    | TSPC-0851AWZZ | J |    | Label,Specification [For Thailand,80W]               |
| 225    | TSPC-0852AWZZ | J |    | Label,Specification [For Thailand,90W]               |
| 226    | PCUSZ0028AWZZ | J |    | Cushion  |
| 227    | PCUSZ0031AWZZ | J |    | Cushion  |
| 601    | LX-BZ0805AFFN | J | AB | Screw,ø1.7×2.5mm                                     |
| 602    | LX-BZ0960AFZZ | J | AB | Screw,ø1.4×1.5mm                                     |
| 603    | LX-BZ1008AFFC | J | AB | Screw,ø1.4×2mm                                       |
| 604    | LX-CZ0010AWFC | J | AB | Screw,ø1.4×4mm                                       |
| 605    | LX-CZ0012AWFF | J | AB | Screw,ø1.4×2.5mm                                     |
|        | SPAKA0237AWZZ | J | AE | Packing Add.   |
|        | SPAKC1182AWZZ | J |    | Packing Case [80W]                                   |
|        | SPAKC1185AWZZ | J |    | Packing Case [90W]                                   |
|        | SPAKC1186AWZZ | J |    | Packing Case [90]                                    |
|        | SPAKC1230AWZZ | J |    | Packing Case [90C]                                   |

## PACKING PARTS (Except for U.S.A)



NO. PARTS CODE ★ PRICE RANK DESCRIPTION

|               |   |    |  |
|---------------|---|----|--|
| SPAKZ0490AWZZ | J | AC | Pad,Operation Manual   |
| SPAKZ0624AWZZ | J |    | Pad,Protection   |
| SPAKZ0630AWZZ | J |    | Pad,AC Adaptor [90/90C]  |
| SPAKZ0753AWZZ | J |    | Pad,AC Adaptor [80W/90W]   |
| SSAKH0033AWZZ | J | AB | Bag,Polyethylene   |
| TLABE0514AWZZ | J |    | Label,Bar Code [80W]   |
| TLABE0517AWZZ | J |    | Label,Bar Code [90W]   |
| TLABG0002AWZZ | J | AB | Label,Hong Kong [80W/90W]  |
| TLABJ0009AWSA | J | AB | Label,Company Name<br>[For Union of Arab Emirates,<br>80W/90W]   |
| TLABJ0010WAZZ | J |    | JAPAN Label<br>[For Union of Arab Emirates,<br>80W/90W]  |
| TLABN0092AWZZ | J | AB | Label SER.No. [90/90C]   |
| TLABN0094AWZZ | J | AB | Label SER.No.<br>[For Thailand,80W/90W]  |
| TLABRF241AWZZ | J |    | Label,Bar Code [90C]   |
| TLABR1196AWZZ | J | AB | Label,Bar Code [90]  |
| TLABS0294AWZZ | J | AB | Label,CPA<br>[Except for Australia/Philip-<br>pines/Thailand/Hong Kong/<br>Jordan Reunion/Union of Arab<br>Emirates,80W/90W] |
| TLABZ0600AWSA | J | AC | Label,COUNTRY OF ORIGIN<br>[For Australia/Jordan Reunion,<br>80W/90W]  |
| TLABZ0618AWZZ | J | AB | Label,M.I.M<br>[For Australia/Thailand,80W/<br>90W]  |

## ACCESSORIES

|   |                |   |    |   |
|---|----------------|---|----|---|
|   | QCNWG0029AWZZ  | J |    | Connecting Cord [90/90C]  |
|   | QCNWG0382AFZZ  | J | AK | Connecting Cord,RCA Type<br>[80W/90W]                               |
| △ | QCNWG0422AFZZ  | J | AQ | Optical Cable [90W/90/90C]  |
| △ | QPLGA0004AWZZ  | J | AF | Plug [For Philippines,80W/90W]                                      |
| △ | RADPA3048AWZZ  | J | AW | AC Adaptor [90/90C]   |
|   | RADPA5050AWZZ  | J |    | AC Adaptor<br>[For Hong Kong,80W/90W]                               |
| △ | RADPA5051AWZZ  | J | BF | AC Adaptor<br>[Except for Australia/Thailand/<br>Hong Kong,80W/90W] |
| △ | RADPA5052AWZZ  | J | BF | AC Adaptor<br>[For Thailand,80W/90W]                                |
| △ | RADPA6049AWZZ  | J | BF | AC Adaptor<br>[For Australia,80W/90W]                               |
| △ | RPHOH0005AWZZ  | J | AX | Headphones [90W/90/90C]   |
| △ | RPHOH0012AWZZ  | J | AW | Headphones [80W]  |
|   | RRMCW0002AWSA  | J | AY | Remote Control [90W/90/90C]   |
|   | TCAUH0050AWZZ  | J | AB | Caution Sheet,Headphones<br>[90/90C]                                |
|   | TGANE0011AW62  | J |    | Warranty Card<br>[For Philippines,80W]                              |
|   | TGANE0011AW63  | J |    | Warranty Card<br>[For Philippines,90W]                              |
|   | TINSE0355AWZZ  | J | AE | Operation Manual [90]   |
|   | TINSE0356AWZZ  | J | AE | Operation Manual<br>[For Australia,80W]                             |
|   | TINSE0357AWZZ  | J | AE | Operation Manual<br>[For Australia,90W]                             |
|   | TINSK0116AWZZ  | J | AG | Operation Manual [90C]  |
|   | TINSZ0659AWZZ  | J |    | Operation Manual<br>[Except for Australia,80W]                      |
|   | TINSZ0661AWZZ  | J |    | Operation Manual<br>[Except for Australia,90W]                      |
|   | TINSZ0663AWZZ  | J | AH | Quick Guide [90]  |
|   | UBAGC0003AWZZ  | J | AD | Battery Carrying Case<br>[90W/90/90C]                               |
|   | UBAGC0006AWSA  | J | AH | Carrying Bag [90/90C]   |
|   | UBATM0003AWSA  | J | AR | Rechargeable Nickel-Metal<br>Hydride Battery [90W/90/90C]           |
|   | 92LGCARD1266E1 | J | AC | Warranty Card<br>[For Australia,80W/90W]                            |

## P.W.B. ASSEMBLY (Not Replacement Item)

|       |               |   |   |                |
|-------|---------------|---|---|----------------|
| PWB-A | 92LPWB3674MDS | J | — | Main [80W/90W] |
| PWB-A | 92LPWB3682MDS | J | — | Main [90/90C]  |

NO. PARTS CODE ★ PRICE RANK DESCRIPTION

## OTHER SERVICE PARTS

|               |   |    |  |
|---------------|---|----|--|
| UDSKM0001AFZZ | J | AZ | Recording Mini Disc                            |
| 88GMMD-110    | J | BV | High Reflection Disc MMD-110<br>(TEAC Test MD) |
| 88GMMD-212    | J | BU | Low Reflection Disc MMD-212<br>(TEAC Test MD)  |
| 88GMMD-213A   | J | BT | Low Reflection Disc MMD-213A<br>(TEAC Test MD) |

- 5 -

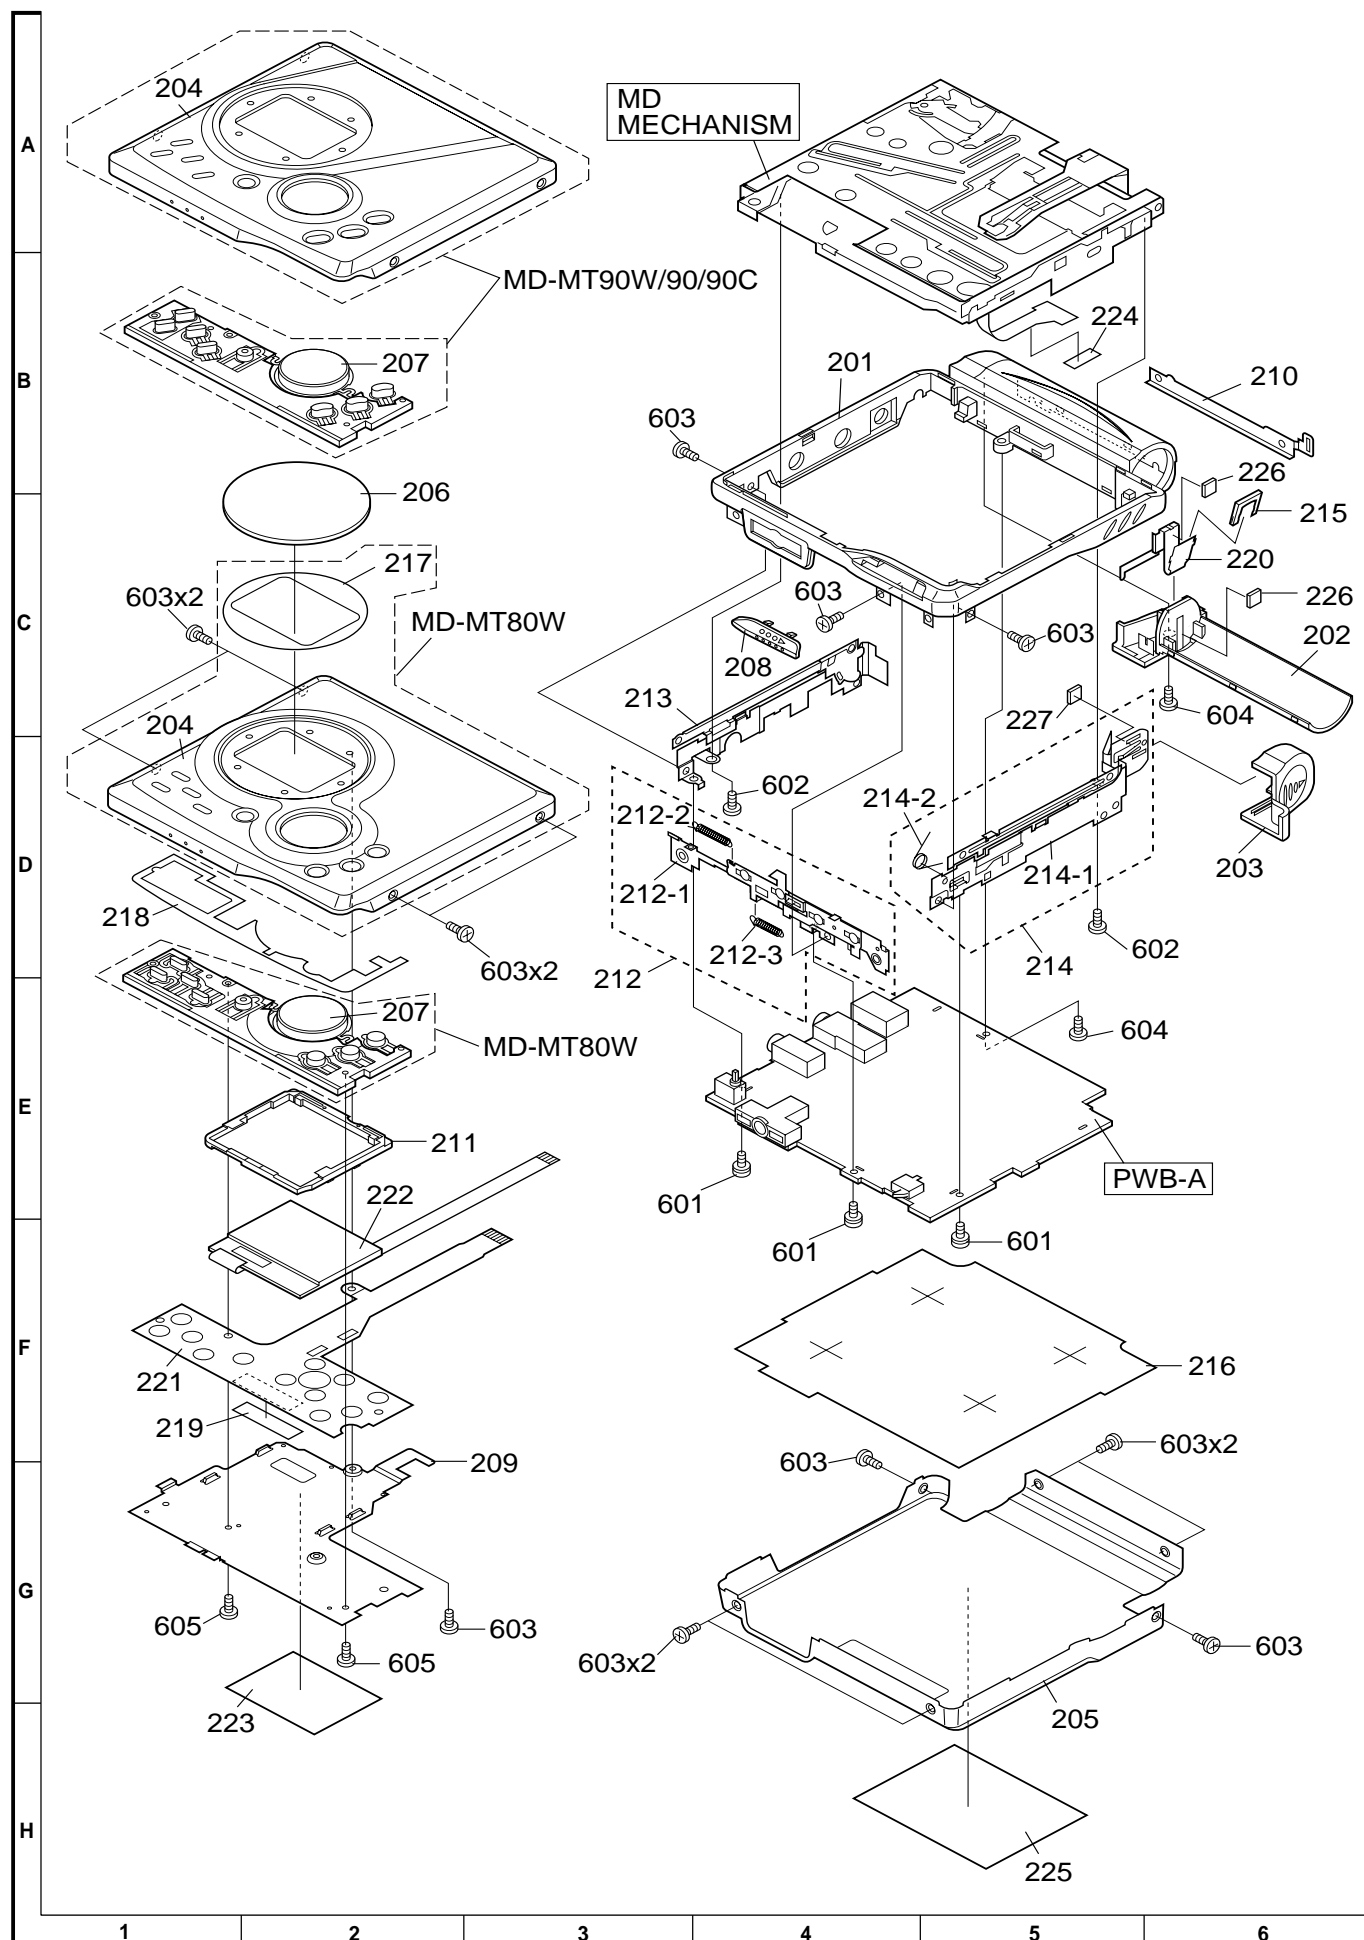


Figure 6 CABINET EXPLODED VIEW


# PACKING OF THE SET (FOR U.S.A. ONLY)

## Setting position of switches and knobs

Remote Control

HOLD

CANCEL

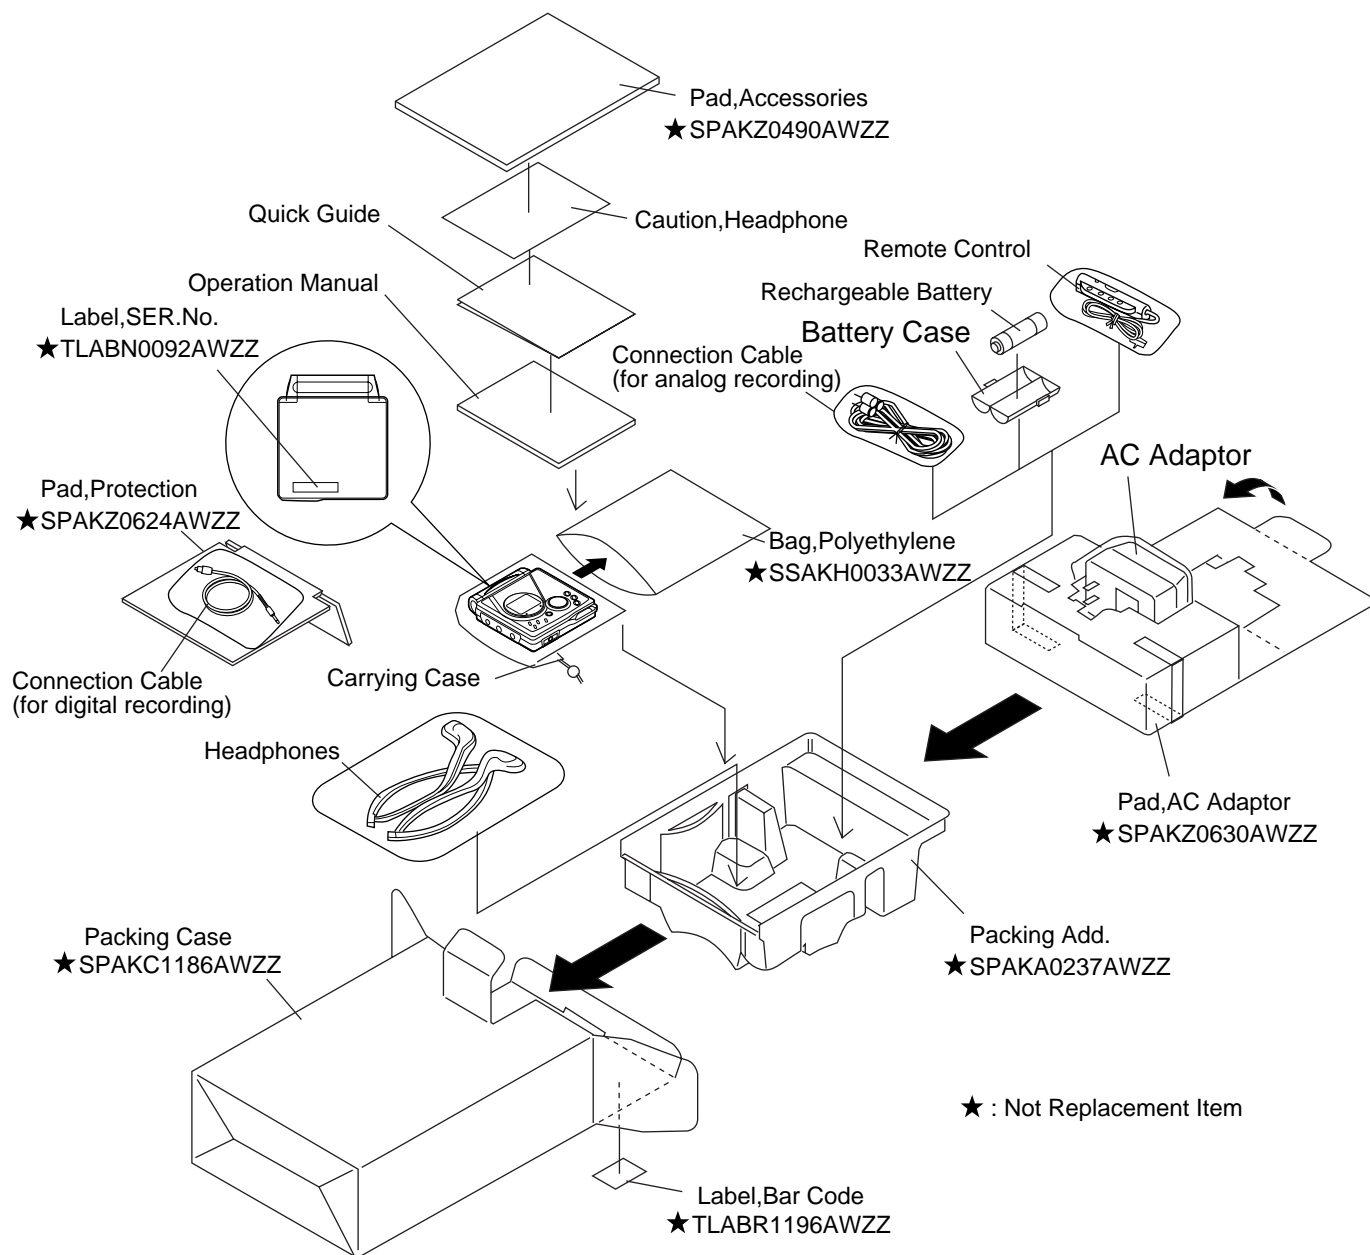

—MEMO—

# SHARP

**COPYRIGHT © 2001 BY SHARP CORPORATION**

**ALL RIGHTS RESERVED.**

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of the publisher.

**SHARP CORPORATION**  
**Communication Systems Group**  
**Quality & Reliability Control Center**  
**Higashihiroshima, Hiroshima 739-0192, Japan**  
**Printed in Japan**

|                           |
|---------------------------|
| <b>A0104-2421SS•HA•M</b>  |
| <b>SA•SZ•EX•SC•SL•LAG</b> |